

PARTS BOOK

TYPHON

Naga 4.0

EXCAVATOR

 


FOREWORD

This atlas includes the general parts and special parts of hydraulic excavator Naga 4.0.
See list of the engine's parts for details about the engine's parts.
Parts increased or decreased due to product improvement will not be notified separately.
We are sorry for the inconvenience.

/Version :V1.0 2023.07



No. :60035-01-00002

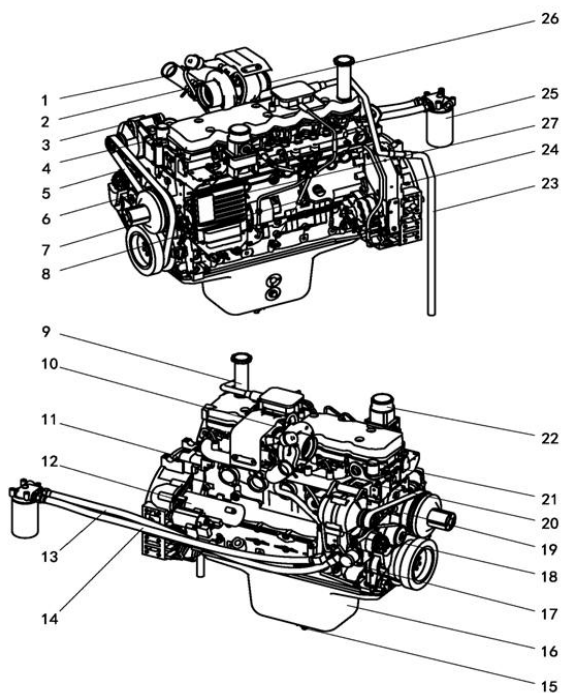

ITEM	PART NO.	PART NAME	Q'TY	REMARKS
1	60210-03-00005	PIPE	1	
2	60210-03-00004	CLAMP	1	
3	60210-03-00006	GENERATOR	1	
4	60210-03-00013	PIPE	1	
5	60210-03-00027	BELT	1	
6	60210-03-00023	PULLEY	1	
7	60210-03-00025	BLOCK	1	
8	60210-03-00028	OIL GAUGE	1	
9	60210-03-00018	VALVE COVER	1	
10	60210-03-00003	TURBOCHARGER	1	
11	60210-03-00012	FLYWHEEL HOUSING	1	
12	60210-03-00019	STARTER	1	
13	60210-03-00021	OIL HOSE	1	
14	60210-02-00020	OIL HOSE	1	
15	60210-03-00011	VALVE	4	
16	60210-03-00010	OIL PAN	1	
17	60210-03-00008	PIPE	1	
18	60210-03-00007	PUMP	1	
19	60210-03-00026	WHEEL	1	
20	60210-03-00014	LUG	1	
21	60210-03-00016	JOINT	1	
22	60210-03-00015	PIPE	1	
23	60210-03-00009	HOSE	1	
24	60210-03-00024	FLYWHEEL	1	
25	60210-03-00022	FILTER	1	
26	60210-03-00017	CLAMP	1	
27	60210-03-00029	CONTROLLER	1	

INSTRUCTION FOR PARTS BOOK

  This parts book is used for checking up parts of hydraulic excavator. It includes part number, part name and quantity. When ordering a spare part, specify the part number, part name and quantity required, and also specify your machine model code, machine serial number, engine serial number and the servicemeter reading. This Parts Book contains the information and special symbols as follow:

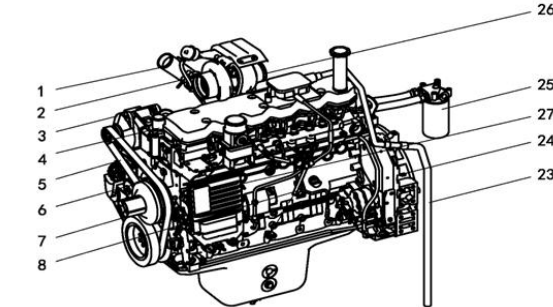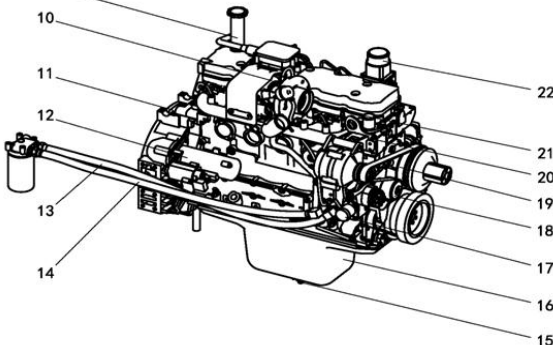		ITEM ^o	PART NO. ^o	PART NAME ^o	Q'TY ^o	REMARKS ^o
	1	1 ^o	60210-03-00005 ^o	PIPE ^o	1 ^o	
	2	2 ^o	60210-03-00004 ^o	CLAMP ^o	1 ^o	
	3	3 ^o	60210-03-00006 ^o	GENERATOR ^o	1 ^o	
	4	4 ^o	60210-03-00013 ^o	PIPE ^o	1 ^o	
	5	5 ^o	60210-03-00027 ^o	BELT ^o	1 ^o	
	6	6 ^o	60210-03-00023 ^o	PULLEY ^o	1 ^o	
	7	7 ^o	60210-03-00025 ^o	BLOCK ^o	1 ^o	
	8	8 ^o	60210-03-00028 ^o	OIL GAUGE ^o	1 ^o	
	9	9 ^o	60210-03-00018 ^o	VALVE COVER ^o	1 ^o	
	10	10 ^o	60210-03-00003 ^o	TURBOCHARGER ^o	1 ^o	
	11	11 ^o	60210-03-00012 ^o	FLYWHEEL HOUSING ^o	1 ^o	
	12	12 ^o	60210-03-00019 ^o	STARTER ^o	1 ^o	
	13	13 ^o	60210-03-00021 ^o	OIL HOSE ^o	1 ^o	
	14	14 ^o	60210-02-00020 ^o	OIL HOSE ^o	1 ^o	
	15	15 ^o	60210-03-00011 ^o	VALVE ^o	4 ^o	
	16	16 ^o	60210-03-00010 ^o	OIL PAN ^o	1 ^o	
	17	17 ^o	60210-03-00008 ^o	PIPE ^o	1 ^o	
	18	18 ^o	60210-03-00007 ^o	PUMP ^o	1 ^o	
	19	19 ^o	60210-03-00026 ^o	WHEEL ^o	1 ^o	
	20	20 ^o	60210-03-00014 ^o	LUG ^o	1 ^o	
	21	21 ^o	60210-03-00016 ^o	JOINT ^o	1 ^o	
	22	22 ^o	60210-03-00015 ^o	PIPE ^o	1 ^o	
	23	23 ^o	60210-03-00009 ^o	HOSE ^o	1 ^o	
	24	24 ^o	60210-03-00024 ^o	FLYWHEEL ^o	1 ^o	
	25	25 ^o	60210-03-00022 ^o	FILTER ^o	1 ^o	
	26	26 ^o	60210-03-00017 ^o	CLAMP ^o	1 ^o	
	27	27 ^o	60210-03-00029 ^o	CONTROLLER ^o	1 ^o	

NO.	That can be put into one-to-one correspondence with the first rank number of the list and part number or component number.
PART NO.	This number is the part number for the part shown . It is important that there be no mistake in this code number when ordering.
PART NAME	This gives the name of part that has the part number listed.
Q'TY	This specifies the number of pieces used for this part. However , if a part is included in the assembly and/or component, the quantity per such assembly and/or component is specified.
REMARKS	This gives other information of parts.

Catalogue

(60035-03-00073)	2
ENGINE MOUNTING	2
ENGINE MOUNTING	2
(60035-04-00017)	4
RADIATOR MOUNTING	4
RADIATOR MOUNTING	4
FILTER SYSTEM	6
FUEL OIL SYSTEM	6
FUEL OIL SYSTEM	8
(60035-06-00001)	10
MUFFLER ASS'Y	10
SILENCER MOUNTING	10
(60035-07-00022)	12
AIR INTAKE MOUNTING	12
AIR FILTER INSTALLATION	12
(60035-21-00004)	14
SLEWING MOTORRE AND DUCION GEAR ASS ' Y	14
ROTARY MOTOR AND REDUCER INSTALLATION	14
(60035-22-00005)	16
SWIVEL JOINT ASS'Y	16
SWIVEL JOINT MOUNTING	16
(60035-23-00012)	18
SWING CIRCLE ASS'Y	18
SLEWING SUPPORT MOUNTING	18
(60035-24-00001)	20
PUMP ASS'Y	20
MAIN PUMP INSTALLATION	20
(60035-25-00004)	22
MAIN VALVE ASS'Y	22
MAIN VALVE INSTALLATION	22
(60035-31-00001)	24
CONTEOL BOX MOUNTING(LH)	24
CONTROL BOX MOUNTING(L.H.)	24
(60035-32-00001)	26

CONTEOL BOX MOUNTING(RH)	26
CONTROL BOX MOUNTING(R.H.)	26
(60035-33-00001)	28
CAB ASS'Y	28
CAB MOUNTING	28
(60035-3C-00001)	30
DAMPER MOUNTING	30
DAMPER MOUNTING	30
(60035-34-00002)	32
TRAVELING CONTROL ASS ' Y	32
TRAVELING CONTROL ASS'Y	32
(60025-35-00001)	34
CONTROL ASS'Y	34
TRAVELING CONTROL ASS ' Y	34
(60035-37-00001)	36
SEAT ASS'Y	36
SEAT MOUNTING	36
(60035-38-00014)	38
AIR CONDITIONER ASS'Y	38
AIR CONDITIONER	38
AIR CONDITIONER	40
(60035-3A-00001)	42
SUPPORT-BOTTOM PLATE ASS ' Y	42
BOTTOM MOUNTING	42
(60035-41-00001)	44
WALKING MOTOR AND REDUCER ASS'Y	44
INSTALLATION OF TRAVELLING MOTOR AND REDUCER	44
(60035-42-00001)	46
TRACK ROLLER ASS ' Y	46
SUPPORT WHEEL ASSEMBLY INSTALLATION	46
(60035-43-00001)	48
CARRIER ROLLER ASS'Y	48
DRAG SPROCKET ASSEMBLY MOUNTING	48
(60035-44-00001)	50
GUIDE WHEEL AND BUFFER ASS'Y	50
THE EXPANSION DEVICE IS INSTALLED	50
(60035-45-00001)	52

TRACK ASS ' Y	52
TRACK MOUNTING	52
(60035-45-00003)	54
CARRIER ROLLER ASS'Y	54
RUBBER TRACK MOUNTING	54
(60035-51-00078)	56
REVOLVING FRAME	56
REVOLVING PLATFORM	56
(60035-52-00049)	58
FRAME ASS ' Y	58
TRUCK FRAME	58
(60035-53-00038)	60
BLADE ASS'Y	60
DOZER SHOVEL INSTALLATION	60
DOZER SHOVEL ASSEMBLY	62
(60035-61-00038)	64
BOOM MOUNTING ASS'Y	64
BOOM MOUNTING ASSEMBLY	64
BOOM ASSEMBLY	66
(60035-62-00038)	68
ARM MOUNTING ASS'Y	68
BUCKET ROD MOUNTING ASSEMBLY	68
BUCKET ROD ASSEMBLY	70
ROD ASSY CONNECTING	72
(60035-63-00024)	74
BUCKET MOUNTING ASS'Y	74
BUCKET MOUNTING ASSEMBLY	74
BUCKET ASSEMBLY	76
(60035-65-00002)	78
LUBRICATION ASS'Y	78
LUBRICATION ASSEMBLY	78
(60035-66-00044)	80
SWING FRAME ASS'Y	80
SWING MOUNT	80
(60035-71-00003)	82
COUNTERWEIGHT ASS ' Y	82
COUNTERWEIGHT ASS ' Y	82


(60035-72-00068)	84
SIDE HOOD MOUNTING	84
SIDE COVER MOUNTING	84
挡泥板安装 (60035-73-00019)	86
FENDER ASS'Y	86
挡泥板安装	错误！未定义书签。
FENDER INSTALLATION	86
(60035-74-00051)	88
FRAME ASS ' Y	88
FRAME MOUNTING	88
(60035-76-00001)	90
ENGINE HOOD MOUNTING	90
HOOD MOUNTING	90
(60035-7A-00005)	92
MACHINE MODE LABLE	92
LABEL ASS'Y	92
(60035-7B-00002)	94
GRAPHIC LOGO	94
LABEL ASS'Y	94
LABEL ASS'Y	96
(60035-78-00035)	98
HYDRAULIC TANK ASS ' Y	98
HYDRAULIC TANK	98
(60035-8A-00003)	100
CONTROL AND DRAIN LINE	100
CONTROL AND DRAIN LINE	100
(60035-8B-00005)	102
INLET AND BYPASS PIPELINE	102
CONTROL AND DRAIN LINE	102
冷却管路 (60035-8C-00003)	104
COOLING LINE	104
COOLING LINK	104
(60035-81-00026)	106
PILOT CONTROL LINE	106
PILOT CONTROL LINK	106
PILOT CONTROL LINK	108
PILOT CONTROL LINK	110

PILOT CONTROL LINK	112
(60035-83-00010)	114
REVOLVING FRAME LINE	114
REVOLVING FRAME PIPING	114
REVOLVING FRAME PIPING	116
REVOLVING FRAME PIPING	118
(60035-84-00012)	120
PUMP SIDE LINE	120
DELIVERY AND RETURN LINE	120
(60035-87-00001)	122
CRALER FRAME LINE	122
CRALER FRAME HEAD	122
(60035-89-00018)	124
PIPING FOR BREAKER	124
BREAKER PIPING	124
BREAKER PIPING	126
BREAKER PIPING	128
(60035-91-00003)	130
BATTERY ASS'Y	130
BATTERY MOUNTING	130
(60035-92-00005)	132
ELECTRIC ATTACHMENTS ASS'Y ON THE VEHICLE	132
ONBOARD ELECTRICAL INSTALLATION	132
(60035-93-00005)	134
ELECTRIC ATTACHMENTS ASS'Y ON THE BENCHE	134
TRESTLE ELECTRICAL INSTALLATION	134
TRESTLE ELECTRICAL INSTALLATION	136
(60035-94-00001)	138
ELECTRIC ATTACHMENTS ASS'Y OF THE WORKING DEVICE	138
ELECTRICAL INSTALLATION OF WORKING DEVICE	138
(60035-95-00004)	140
ELECTRIC ATTACHMENTS ASS'Y IN THE CAB	140
CAB ELECTRICAL INSTALLATION	140
(60035-96-00002)	142
ELECTRIC ATTACHMENTS ASS'Y OF THE ENGINE	142
ENGINE ELECTRICAL INSTALLATION	142

ENGINE ELECTRICAL INSTALLATION	144
(60035-98-00004)	146
ELECTRIC ATTACHMENTS ASS'Y OF THE FRAME	146
FRAME ELECTRICAL INSTALLATION	146


[illegible]

 (60035-03-00073)
ENGINE MOUNTING
ENGINE MOUNTING

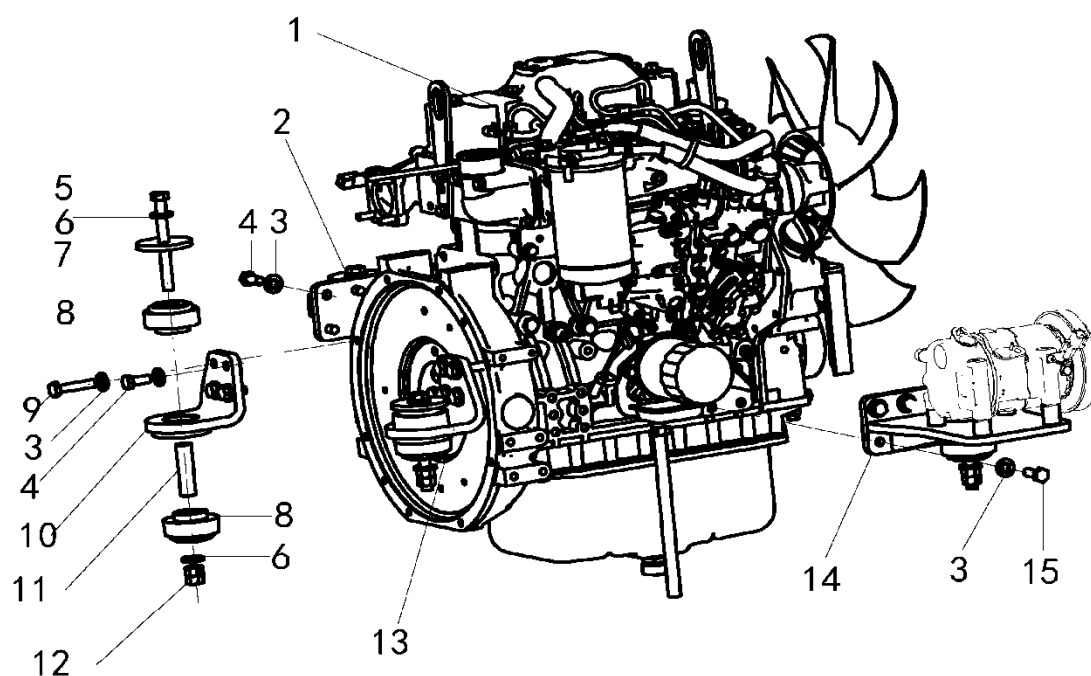

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-03-00002		ENGINE (apply to	1	
	60035-03-00003		SE36SR-10)	1	
			ENGINE (apply to		
			SE36SR-10)		
2	60035-03-00067		LEFT FRONT	1	
			BRACKET		
3	01643-31032		WASHER	16	
4	01010-81025		BOLT	10	
5	01011-81220		BOLT	4	
6	01643-31212		WASHER	8	
7	60035-03-00071		BASE PLATE	4	
8	60025-03-00022		SHOCK ABSORBER	8	
9	01010-81050		BOLT	2	
10	60035-03-00052		LEFT REAR BRACKET	1	
11	60035-03-00072		PIPE	4	
12	01580-11210		NUT	8	
13	60035-03-00055		RIGHT REAR	1	
			BRACKET		
14	60035-03-00057		RIGHT FRONT	1	
			BRACKET		
15	01010-81035		BOLT	4	

 (60035-04-00017)
RADIATOR MOUNTING
RADIATOR MOUNTING

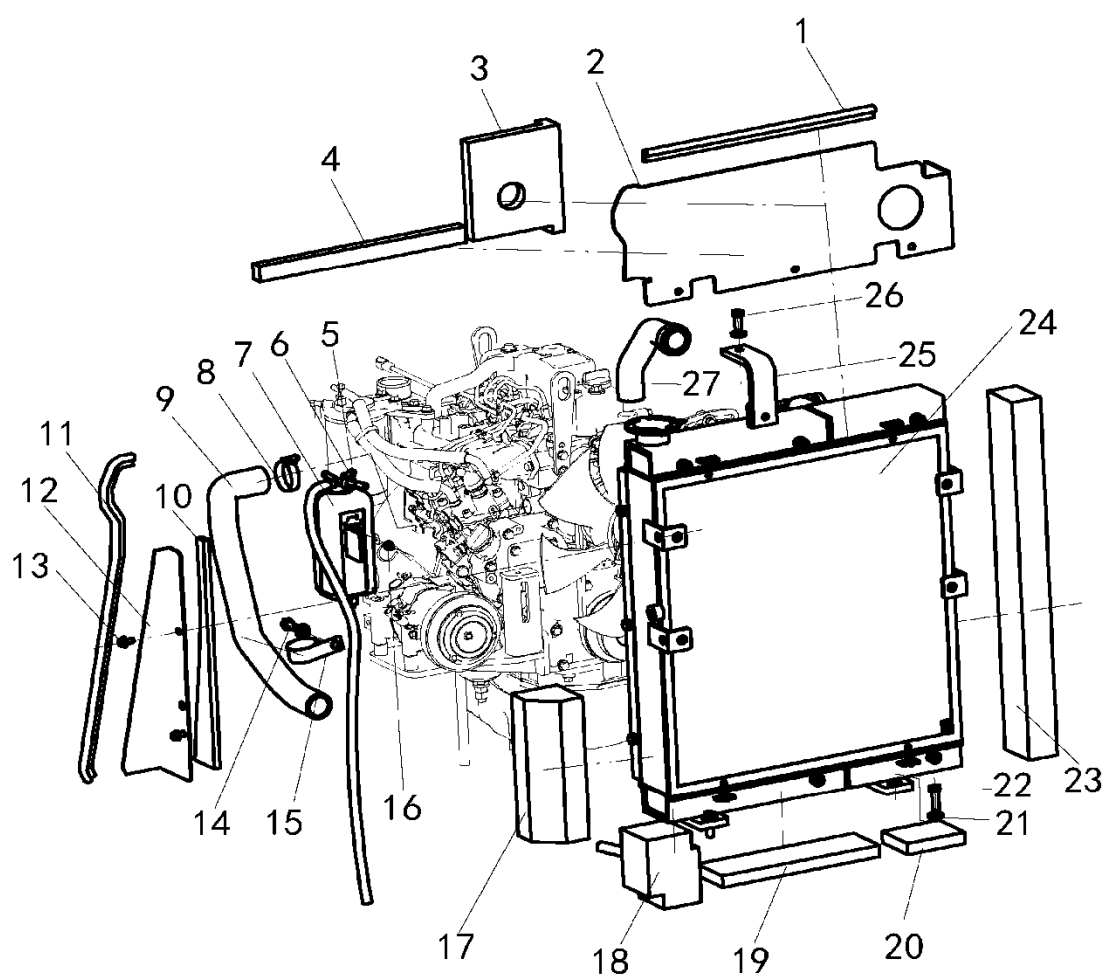


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	06201-10600		SEALING STRIP	1	
2	60035-04-00030		WIND SCREEN	1	
3	60035-04-00021		SPONGE	1	
4	60035-04-00028		SPONGE	1	
5	07281-10167		HOSE CLAMP	2	
6	09483-107A2		TUBE	1	
7	60017-04-00021		AUXILIARY WATER TANK ASSEMBLY	1	
8	07281-10489		HOSE CLAMP	4	
9	60035-04-00010		WATER INLET HOSE	1	apply to SE36SR-10
	60035-04-00016		WATER INLET HOSE	1	apply to SE36SR-10A
10	60035-04-00006		SPONGE	1	
11	06201-10410		SEALING STRIP	1	
12	60035-04-00022		WIND SCREEN	1	
13	01433-30814		BOLT	5	
14	01433-31014		BOLT	1	
15	08042-01040		CLIP	1	
16	01023-10612		SCREW	2	
17	60035-04-00019		SPONGE	1	
18	60035-04-00024		SPONGE	1	
19	60035-04-00013		SPONGE	1	
20	60035-04-00014		SPONGE	1	
21	01643-31032		WASHER	5	
22	01016-51030		BOLT	4	
23	60035-04-00023		SPONGE	1	
24	60035-04-00002		RADIATOR ASSY	1	
25	60035-04-00031		DEAD PLATE	1	
26	01016-51025		BOLT	1	
27	60035-04-00012		WATER OUTLET HOSE	1	

(60035-05-00001)


FILTER SYSTEM

 FUEL OIL SYSTEM

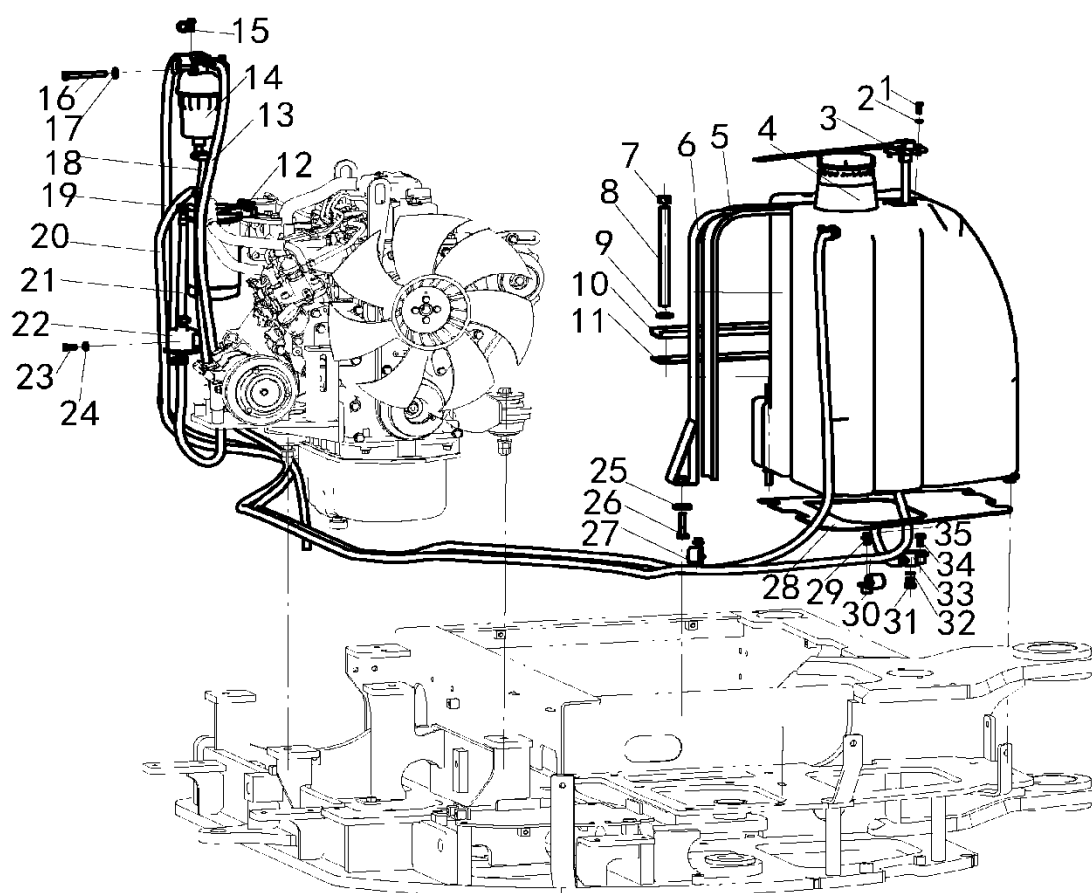


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01023-10516		BOLT	5	
2	01643-30516		WASHER	5	
3	60035-05-00005		LIQUID LEVEL SENSOR	1	
4	60035-05-00002		FUEL TANK	1	
5	60035-05-00012		RUBBER PAD	1	
6	60035-05-00013		BOARD	1	
7	01580-11210		NUT	2	
8	60035-05-00004		SCREW	2	
9	01643-31232		WASHER	2	
10	60035-05-00016		BOARD	1	
11	60035-05-00015		RUBBER PAD	1	
12	60035-03-00049		FUEL FINE FILTER	1	
13	60035-05-00009		TUBE	1	
14	60025-05-00049		OIL-WATER SEPARATOR	1	
15	07281-00167		HOSE CLAMP	11	
16	01010-80870		BOLT	1	
17	01643-30823		GROMMET	2	
18	07270-00685		TUBE	1	
19	60035-05-00006		TUBE	1	
20	60035-05-00023		TUBE	1	
21	60035-05-00017		TUBE	1	
22	60035-03-00010		ELECTRIC FUEL PUMP	1	
23	01010-80616		BOLT	2	
24	01643-30623		GROMMET	2	
25	01010-81040		BOLT	2	
26	01645-31045		WASHER	2	
27	04435-52110		CLIP	1	
28	60035-05-00026		RUBBER PAD	1	
29	01433-30812		BOLT	2	
30	08042-11022		CLIP	1	

 FUEL OIL SYSTEM

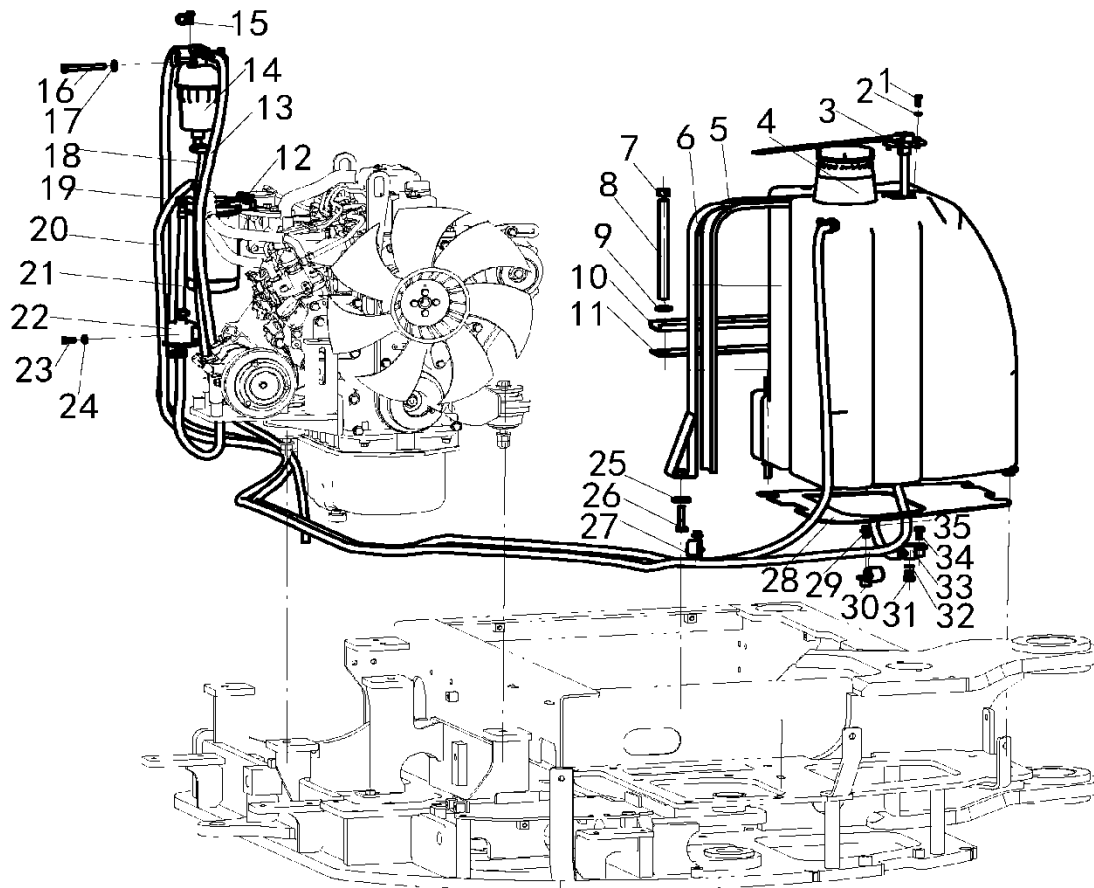

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
31	07037-01206		PLUG SCREW	1	
32	07418-11215		FACE SEAL RING	1	
33	60017-05-00001		VALVE	1	
34	01010-80816		BOLT	1	
35	60035-05-00020		TUBE	1	

 
(60035-06-00001)
MUFFLER ASS'Y
SILENCER MOUNTING

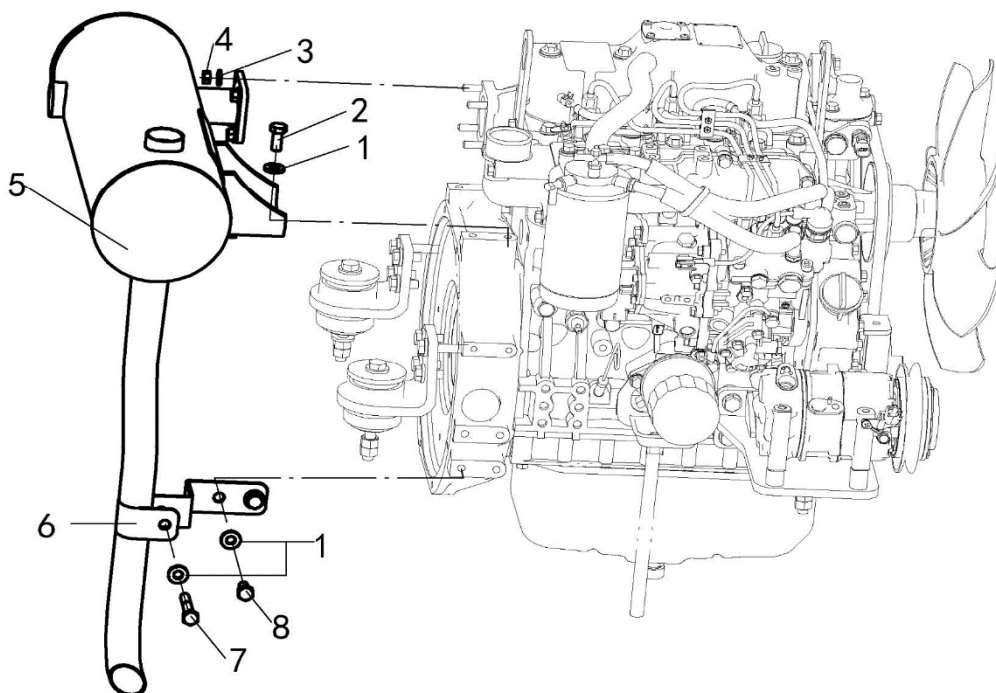

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01643-31032		WASHER	5	
2	01010-81025		BOLT	2	
3	01643-30823		GROMMET	4	
4	01580-10806		NUT	4	
5	60035-06-00011		SILENCER ASSEMBLY	1	
6	60035-06-00004		BRACKET	1	
7	01010-81060		BOLT	1	
8	01010-81020		BOLT	2	

(60035-07-00022)

 AIR INTAKE MOUNTING
AIR FILTER INSTALLATION

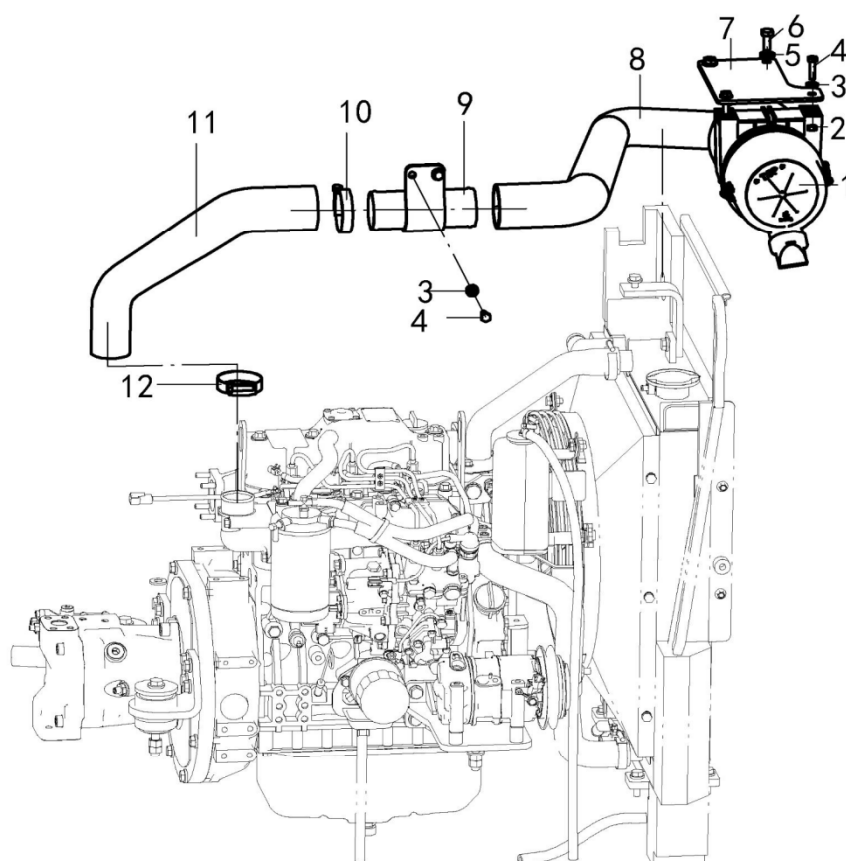


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-07-00002		AIR FILTER ASSEMBLY	1	
2	01580-10806		NUT	2	
3	01643-30823		GROMMET	4	
4	01016-50820		BOLT	4	
5	01643-31032		WASHER	2	
6	01016-51025		BOLT	2	
7	60035-07-00025		AIR FILTER FIXING PLATE	1	
8	60035-07-00018		AIR INTAKE HOSE	1	
9	60035-07-00019		TRANSITION STEEL PIPE	1	
10	07289-00070		HOSE CLAMP	2	
11	60035-07-00017		AIR INTAKE HOSE	1	apply to SE36SR-10A
	60035-07-00026		AIR INTAKE HOSE	1	apply to SE36SR-10
12	07289-00055		HOSE CLAMP	2	

(60035-21-00004)


SLEWING MOTORRE AND DUNCTION GEAR ASS ' Y

 ROTARY MOTOR AND REDUCER INSTALLATION

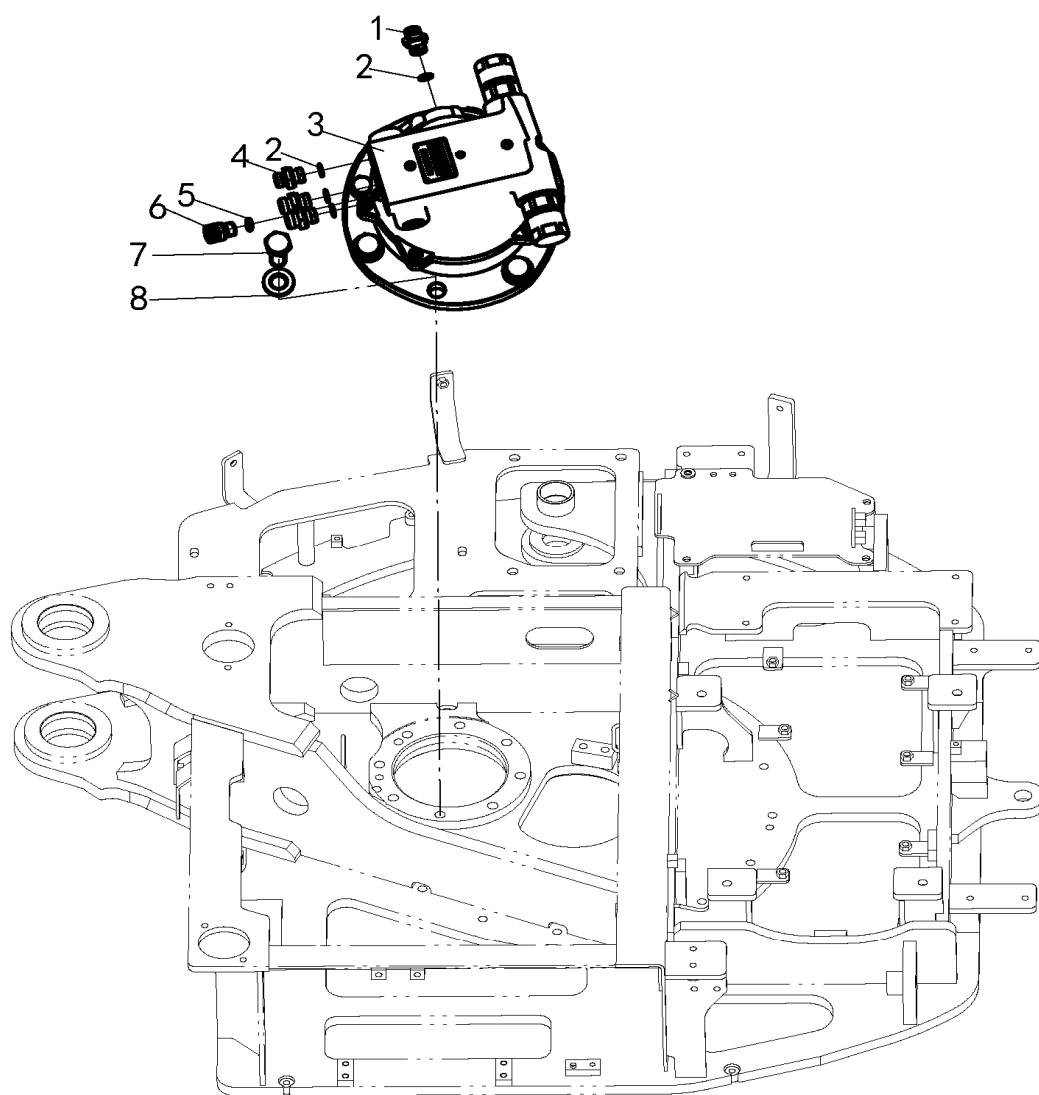


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07413-23023		JOINT	1	
2	07000-12014		O-RING	4	
3	60035-21-00002		ROTARY MOTOR AND REDUCER	1	
4	07413-23033		UNION	3	
5	07000-12011		O-RING	1	
6	07413-22013		UNION	1	
7	01010-G1655		BOLT	8	
8	01643-31645		WASHER	8	

 (60035-22-00005)
SWIVEL JOINT ASS'Y
SWIVEL JOINT MOUNTING

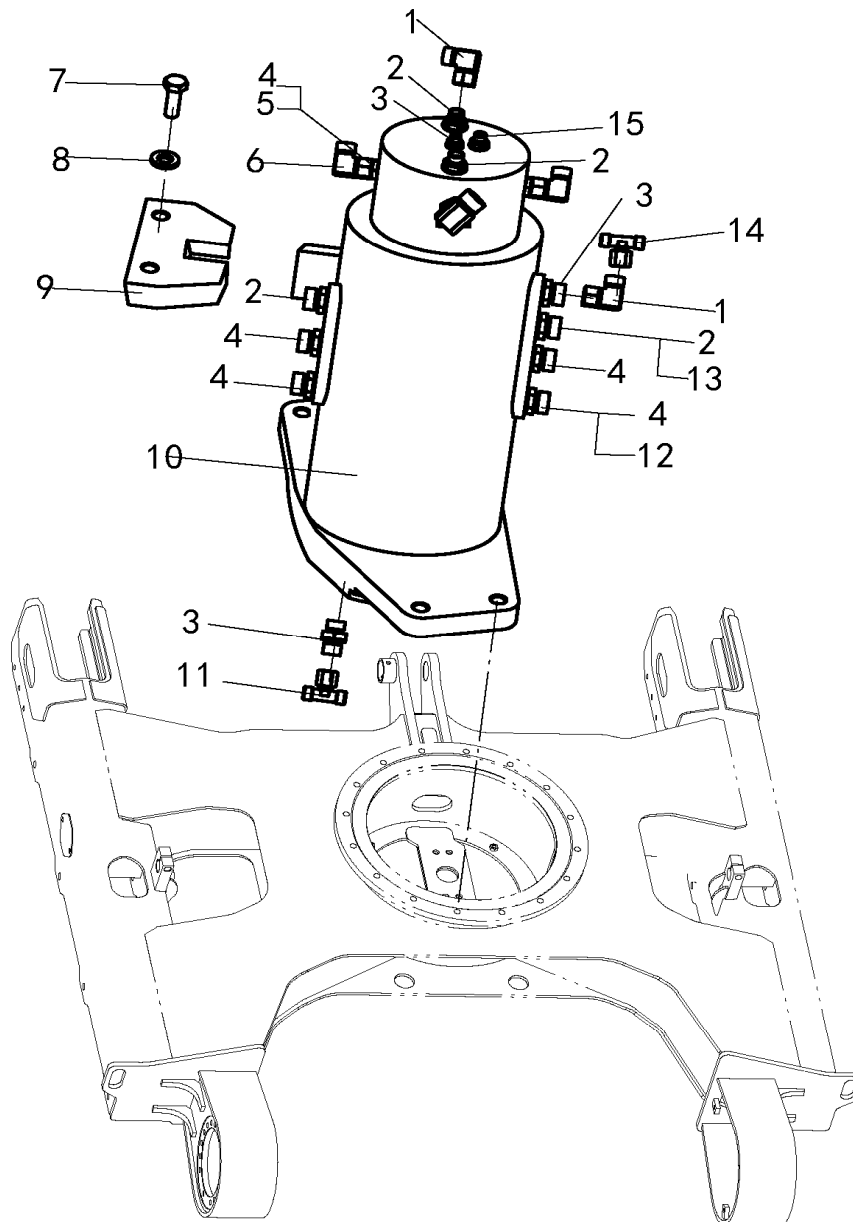


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07415-20228		ELBOW	2	
2	07413-23033		UNION	4	
3	07413-22023		UNION	3	
4	07413-24034		UNION	8	
5	07000-12011		O-RING	4	
6	07415-20330		ELBOW	4	
7	01010-81230		BOLT	6	
8	01643-31232		WASHER	6	
9	60035-22-00004		BOARD	1	
10	60035-22-00003		SWIVEL JOINT	1	
11	07433-20228		TEE JOINT	1	
12	07000-12018		O-RING	8	
13	07000-12014		O-RING	4	
14	07434-20228		TEE JOINT	1	
15	07413-22013		UNION	1	

 (60035-23-00012)
SWING CIRCLE ASS'Y
SLEWING SUPPORT MOUNTING

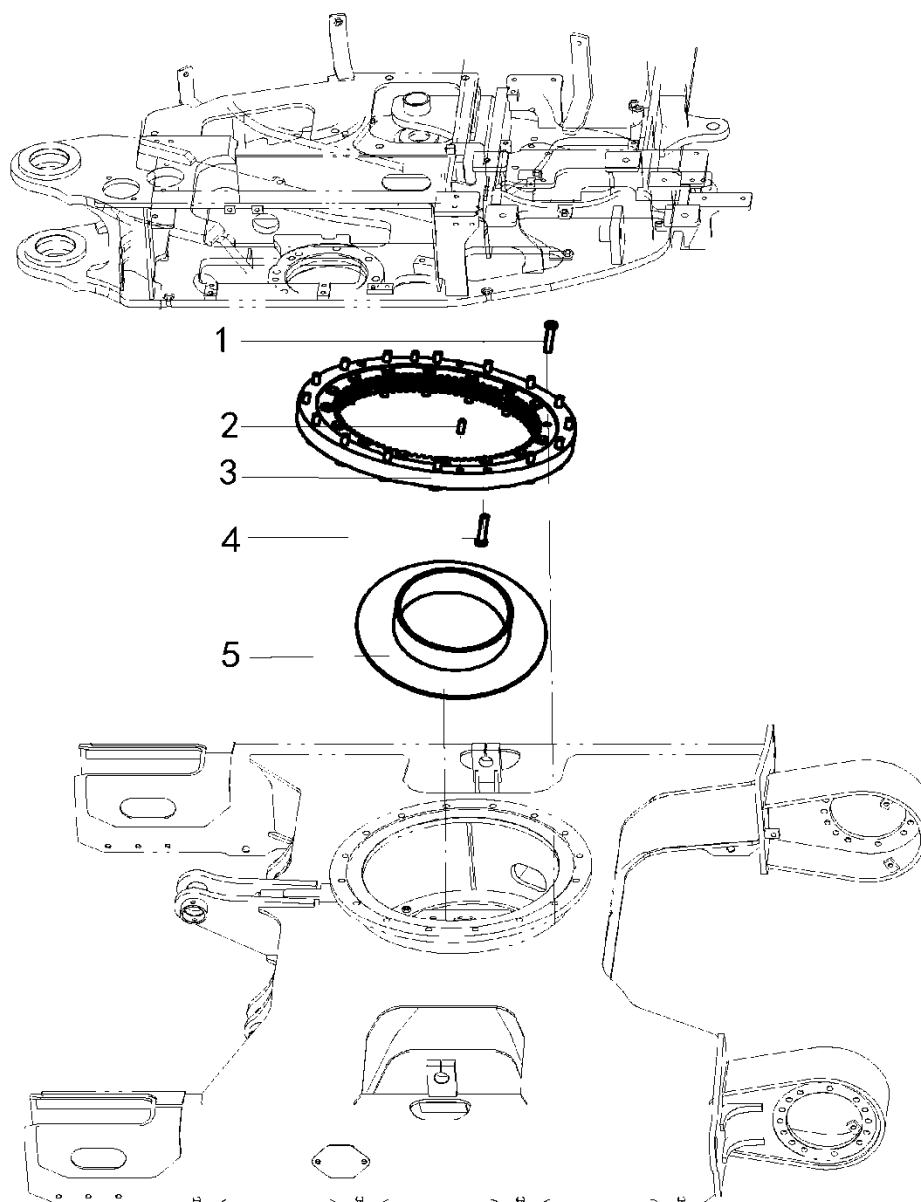


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01010-81465		BOLT	16	
2	04020-01235		MELT	2	
3	60035-23-00011		SLEWING SUPPORT	1	
4	01010-81475		BOLT	16	
5	60035-23-00003		BUTTER TRAY ASSEMBLY	1	

 (60035-24-00001)
PUMP ASS'Y
MAIN PUMP INSTALLATION

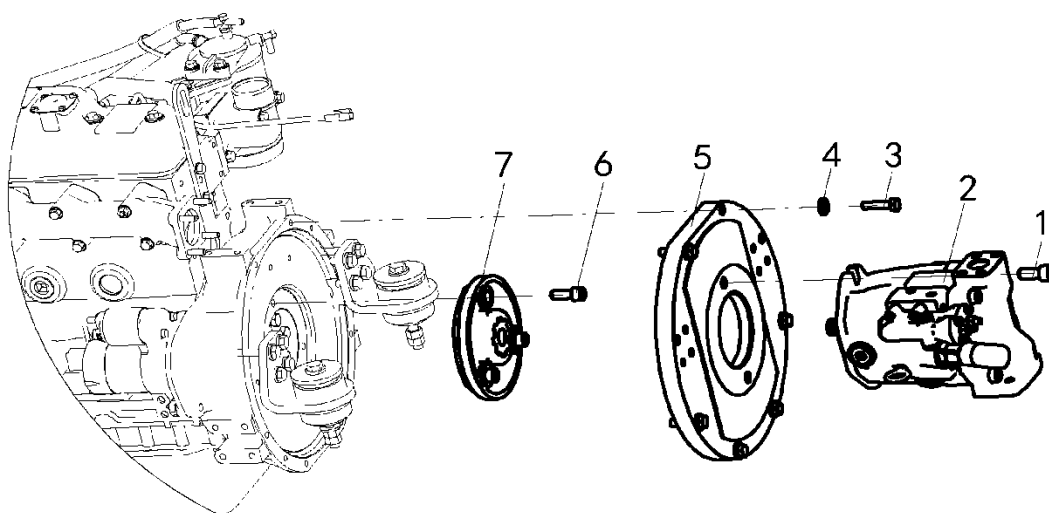


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01252-71430		BOLT	2	
2	60035-24-00002		MAIN PUMP	1	
3	01016-51040		BOLT	6	
4	01643-31032		WASHER	6	
5	60035-24-00003		LAND	1	
6	01252-71230		BOLT	3	
7	60035-24-00004		COUPLER	1	

 (60035-25-00004)
MAIN VALVE ASS'Y
MAIN VALVE INSTALLATION

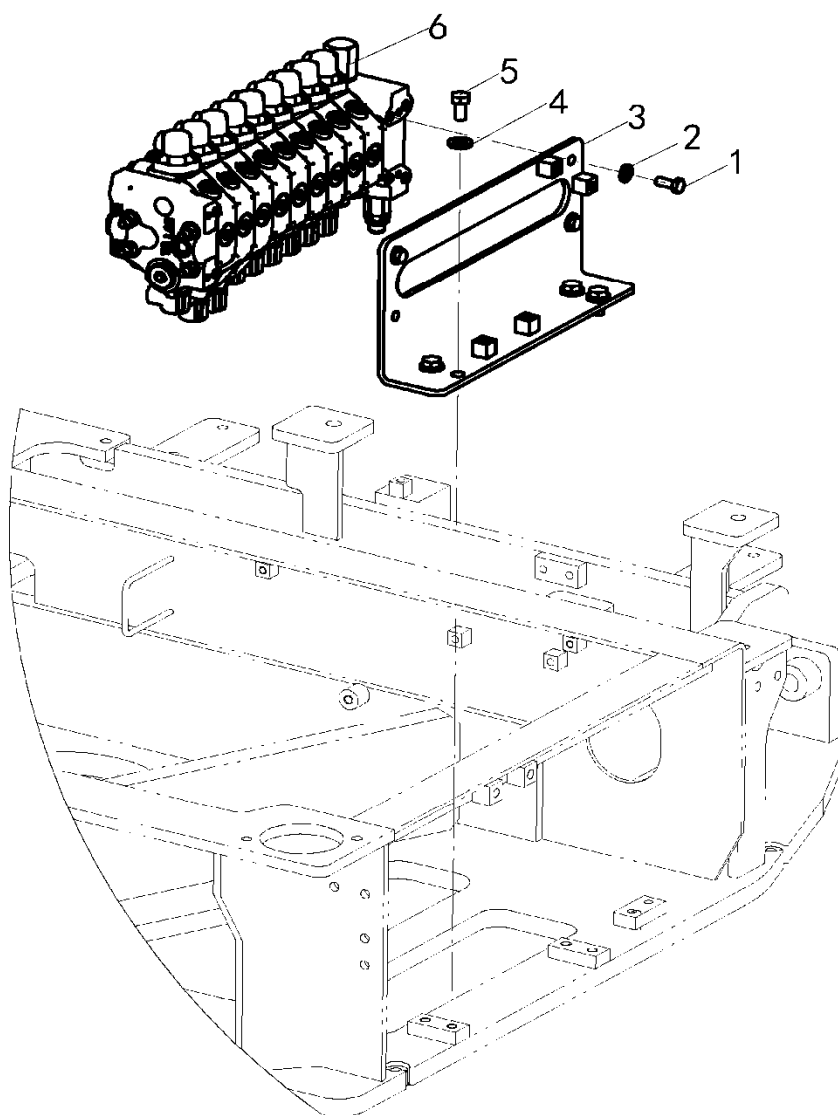


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01016-50820		BOLT	3	
2	01643-30823		GROMMET	3	
3	60025-25-00004		HOLDER	1	
4	01643-31032		WASHER	4	
5	01016-51020		BOLT	4	
6	60035-25-00002		MAIN VALVE	1	

 (60035-31-00001)
CONTEOL BOX MOUNTING(LH)
CONTROL BOX MOUNTING(L.H.)

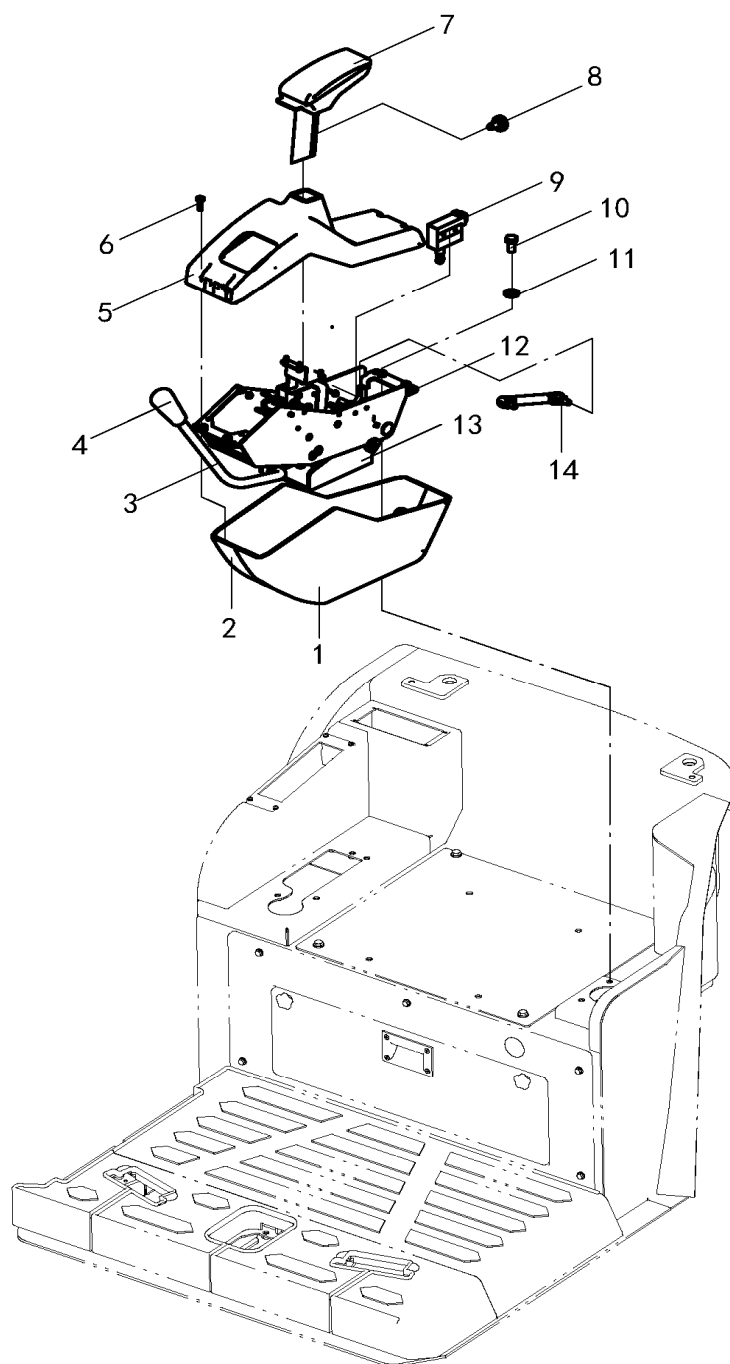


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60017-31-00008		PLATE	1	
2	60017-31-00007		PLATE	1	
3	60017-31-00013		HANDLE	1	
4	60017-31-00014		HANDLE	1	
5	60017-31-00004		PLATE	1	
6	60017-31-00003		SCREW	8	
7	60017-31-00005		HANDLE	1	
8	60017-31-00006		SCREW	1	
9	60017-31-00011		TRAVEL SWITCH	1	
10	01252-70816		BOLT	3	
11	01643-30823		GROMMET	3	
12	60017-31-00010		FRAME	1	
13	60017-31-00012		FRAME	1	
14	60017-31-00009		CYLINDER	1	

 (60035-32-00001)
CONTEOL BOX MOUNTING(RH)
CONTROL BOX MOUNTING(R.H.)

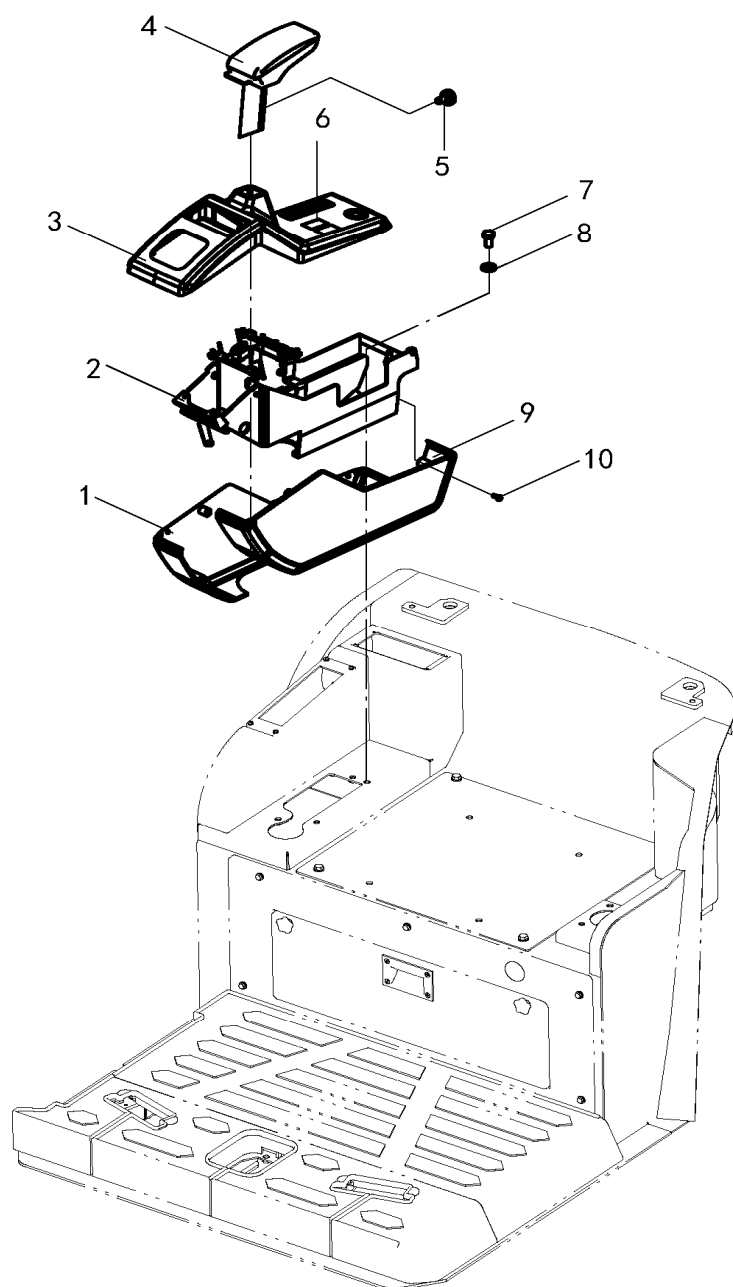


(60035-33-00001)

 CAB ASS'Y
CAB MOUNTING

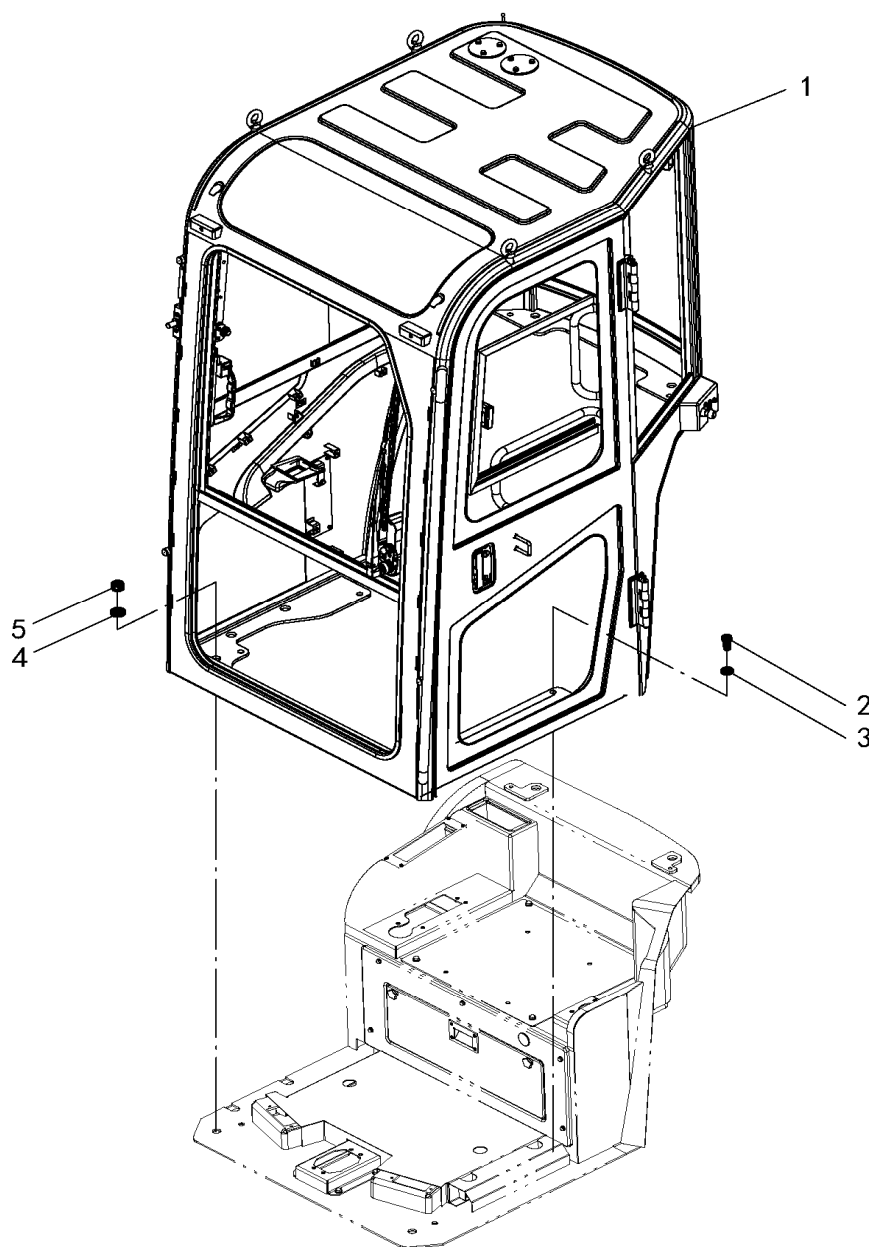


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-33-00002		CABIN	1	
2	01016-51230		BRACKET	6	
3	01643-31232		WASHER	6	
4	01643-31645		WASHER	4	
5	01580-01613		NUT	4	

 (60035-3C-00001)
DAMPER MOUNTING
DAMPER MOUNTING

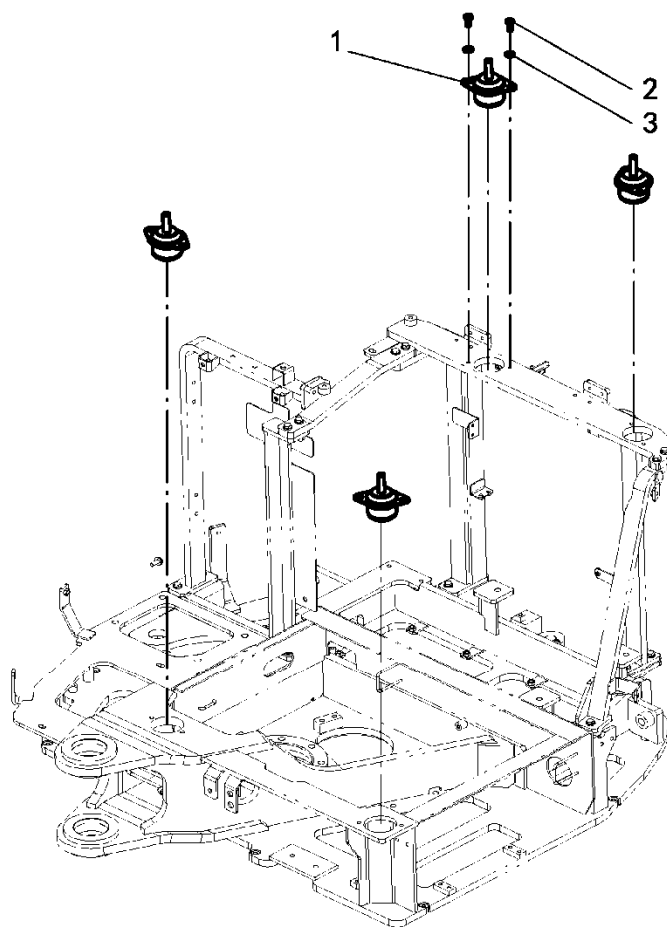


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-3C-00002		DAMPER	4	
2	01016-51025		BOLT	8	
3	01643-31032		WASHER	8	

 (60035-34-00002)
TRAVELING CONTROL ASS 'Y
TRAVELING CONTROL ASS'Y

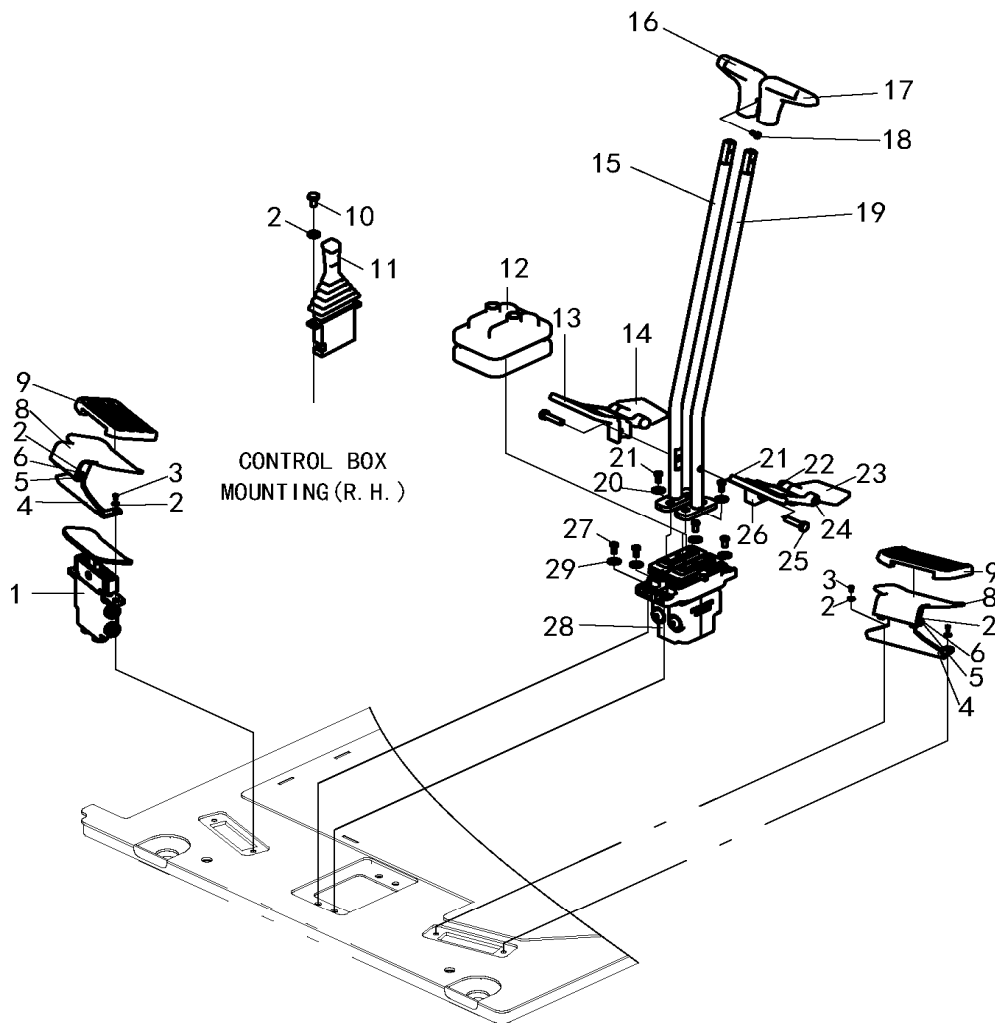

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60017-33-00057		VALVE	1	
2	01643-30623		GROMMET	8	
3	01016-50620		BOLT	4	
4	60017-33-00054		BRACKET	2	
5	01010-80675		BOLT	2	
6	01598-10608		NUT	2	
7	60017-89-00018		VALVE	1	
8	60017-33-00050		PEDAL	2	
9	60017-33-00049		GUARD SLEEVE	2	
10	01252-70616		SCREW	2	
11	60060-34-00002		BLADE PILOT VALVE	1	
12	60017-34-00023		GUARD SLEEVE	1	
13	60025-34-00012		PLATE	1	
14	60025-34-00011		PLATE	1	
15	60025-34-00017		ROD(R.H)	1	
16	60130-34-00001		HANDLE	1	
17	60130-34-00002		HANDLE	1	
18	01023-10512		SCREW	2	
19	60025-34-00015		ROD(L.H)	1	
20	01643-30823		GROMMET	4	
21	01016-50820		BOLT	4	
22	60025-34-00009		AXIS	2	
23	60025-34-00008		PLATE	1	
24	04064-01010		RETAINING RING	2	
25	01010-50825		BLOT	2	
26	60025-34-00010		PLATE	1	
27	01016-50825		BOLT	4	
28	60017-34-00016		TRAVELING CONTROL VALVE	1	
29	01643-50823		WASHER	4	

 (60025-35-00001)
CONTROL ASS'Y
TRAVELING CONTROL ASS ' Y

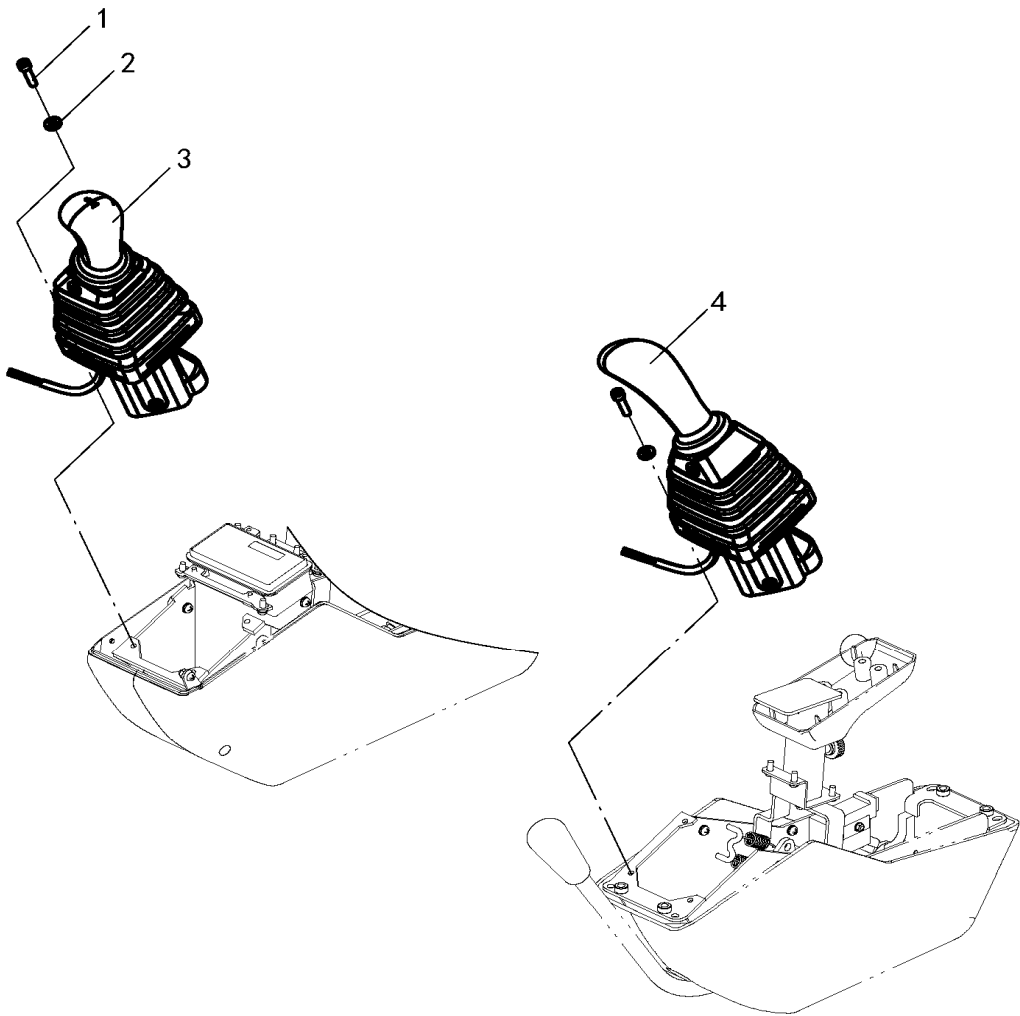


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
------	----------	--	-----------	------	---------

1	01252-70620		BOLT	6	
2	01643-30623		GROMMET	6	
3	60016-35-00002		CONTROL HANDLE(R.H.)	1	
4	60016-35-00001		CONTROL HANDLE(L.H.)	1	


(60035-37-00001)

 **SEAT ASS'Y
SEAT MOUNTING**

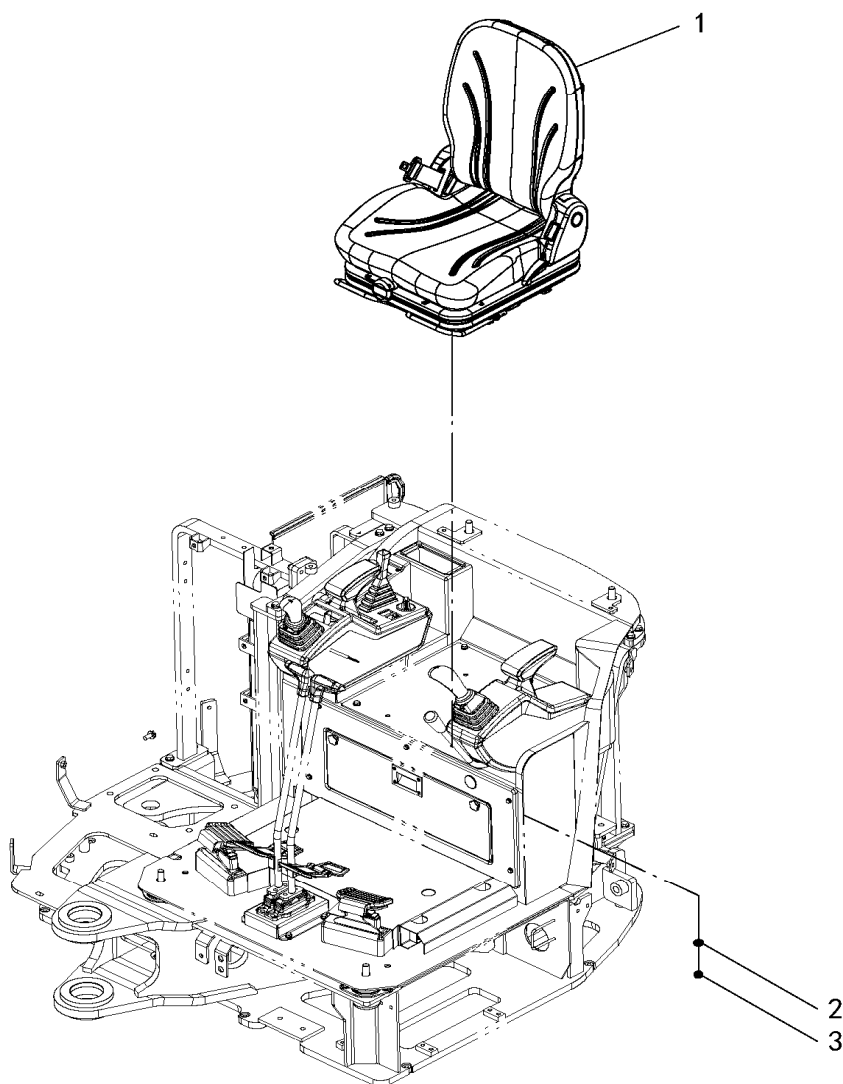


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60025-37-00045		SEAT	1	
2	01643-30823		GROMMET	4	
3	01580-10806		NUT	4	

 (60035-38-00014)
AIR CONDITIONER ASS'Y
AIR CONDITIONER

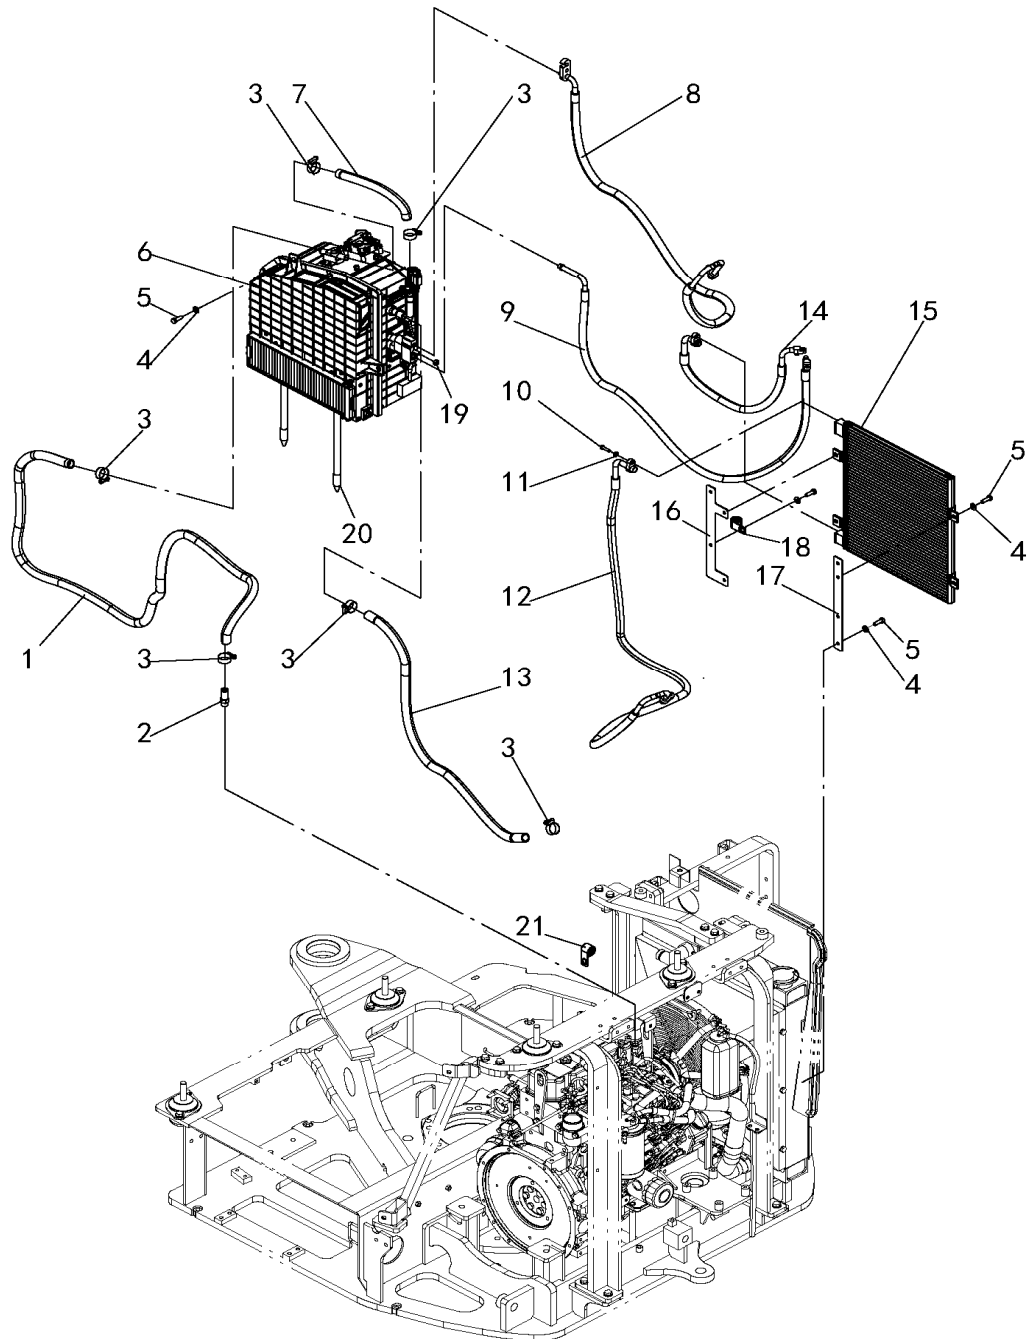


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	09483-11621		HOSE	1	
2	60025-38-00006		UNION	1	
3	07281-00259		HOOP	6	
4	01643-30823		GROMMET	11	
5	01016-50825		BOLT	11	
6	60035-38-00021		AIR CONDITIONER	1	
7	09483-00606		HOSE	1	
8	60035-38-00025		HOSE	1	
9	60035-38-00007		HOSE	1	
10	01016-50625		BOLT	2	
11	01643-30623		GROMMET	2	
12	60035-38-00022		HOSE	1	
13	09483-11610		HOSE	1	
14	60035-38-00024		HOSE	1	
15	60035-38-00004		CONDENSER	1	
16	60035-38-00019		BRACKET	1	
17	60035-38-00017		BRACKET	1	
18	08042-11022		CLIP	1	
19	01584-00806		NUT	1	
20	60060-38-00013		OUTLET PIPE	2	
21	08042-11025		CLIP	1	

 AIR CONDITIONER

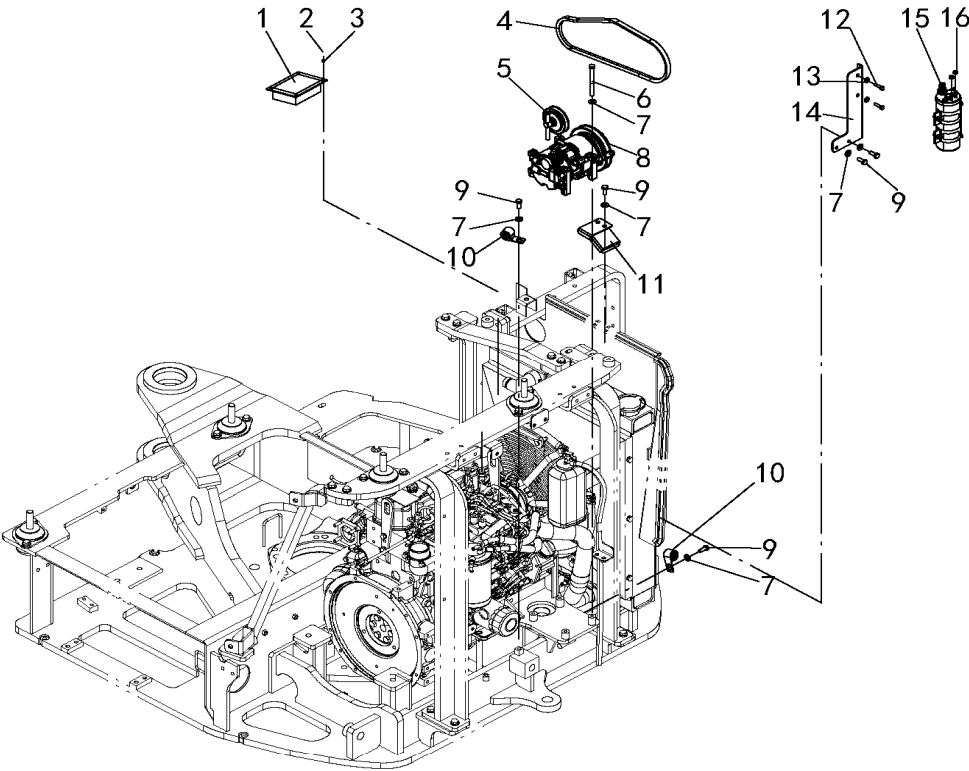

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60060-38-00001		AC SWITCH	1	
2	01643-30410		GROMMET	4	
3	01023-10412		SCREW	4	
4	04123-A0930		BELT	1	
5	60060-38-00017		TENSION WHEEL	1	
6	01010-80875		BOLT	4	
7	01643-30823		GROMMET	10	
8	60035-38-00026		COMPRESSOR	1	
9	01016-50820		BOLT	6	
10	08042-11022		CLIP	6	
11	60035-38-00010		BRACKET	1	
12	01016-50625		BOLT	2	
13	01643-30623		GROMMET	2	
14	60035-38-00015		BRACKET	1	
15	60060-38-00005		RESERVOIR	1	
16	01584-00605		NUT	2	

 
(60035-3A-00001)
SUPPORT-BOTTOM PLATE ASS 'Y
BOTTOM MOUNTING

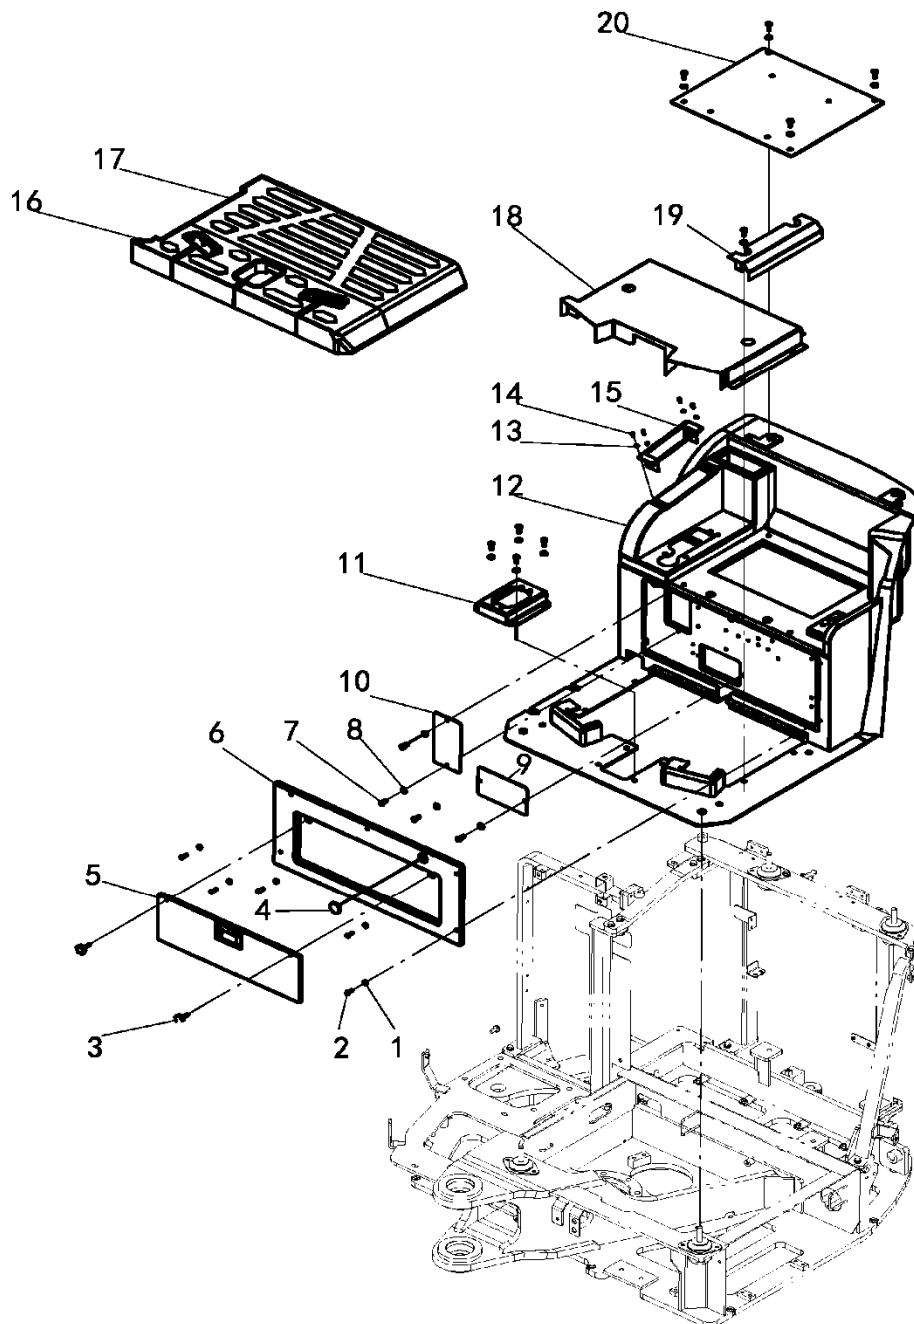

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01643-30623		GROMMET	5	
2	01016-50620		BOLT	5	
3	60035-3A-00052		COLLAR	2	
5	60035-3A-00044		PLATE	1	
6	60035-3A-00047		PLATE	1	
7	01016-50820		BOLT	16	
8	01643-30823		GROMMET	16	
9	60035-3A-00049		PLATE	1	
10	60035-3A-00050		PLATE	1	
11	60035-3A-00041		BRACKET	1	
12	60035-3A-00062		BRACKET	1	
13	01643-30410		GROMMET	4	
14	01023-10412		SCREW	4	
15	60035-3A-00046		BRACKET	1	
16	60035-3A-00039		FLOOR MAT	1	
17	60035-3A-00040		FLOOR MAT	1	
18	60035-3A-00045		PLATE	1	
19	60035-3A-00043		PLATE	1	
20	60035-3A-00051		PLATE	1	


(60035-41-00001)

 WALKING MOTOR AND REDUCER ASS'Y INSTALLATION OF TRAVELLING MOTOR AND REDUCER

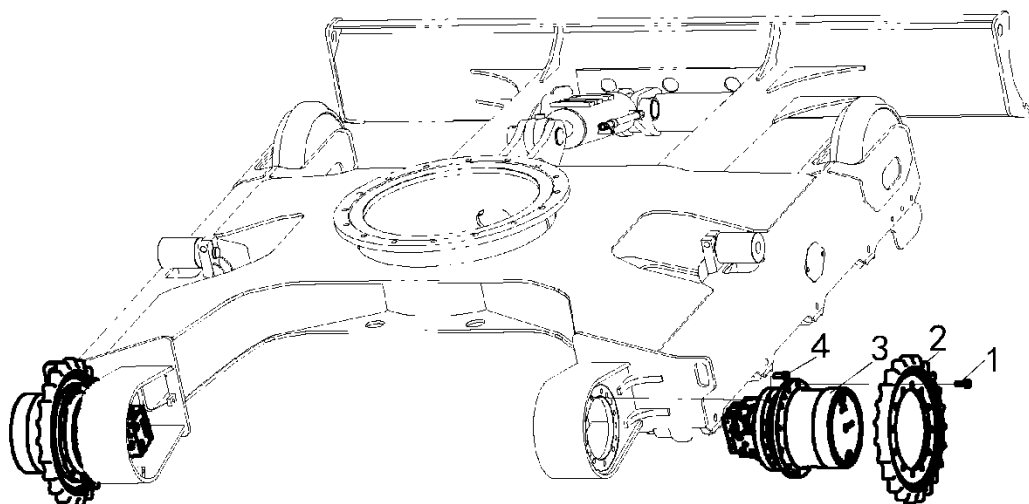


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01252-71230		BOLT	24	
2	60035-41-00003		DRIVING WHEEL	2	
3	60035-41-00002		TRAVEL MOTOR AND REDUCER	2	
4	01252-71235		BOLT	26	

 (60035-42-00001)
TRACK ROLLER ASS 'Y
SUPPORT WHEEL ASSEMBLY INSTALLATION

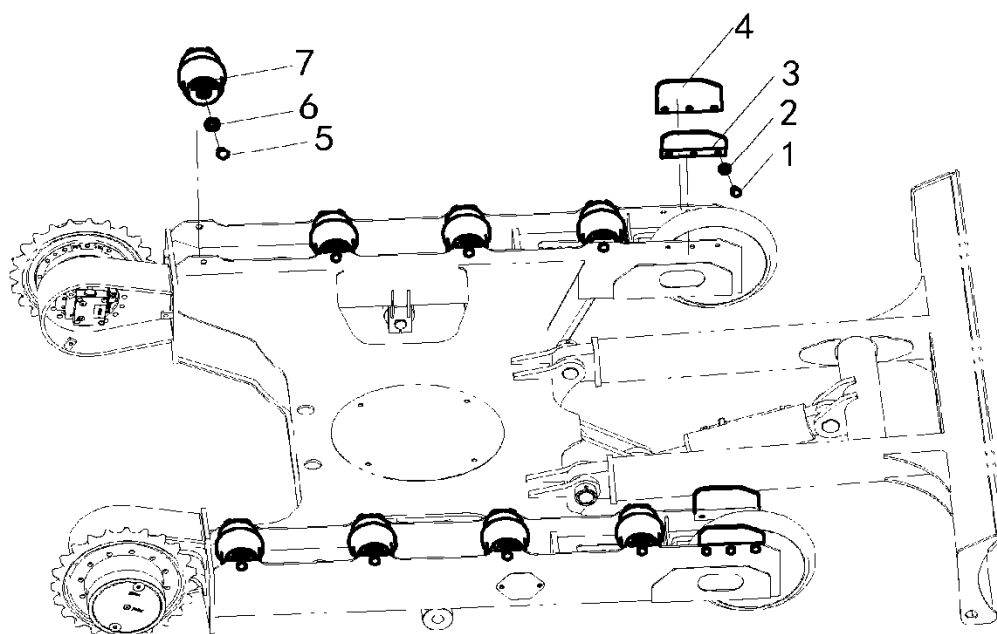


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01016-51030		BOLT	12	
2	01643-31032		WASHER	12	
3	60035-42-00009		LEFT SKID PLATE	2	
4	60035-42-00011		RIGHT SKID PLATE	2	
5	01016-51435		BOLT	16	
6	01643-31445		GASKET	16	
7	60025-42-00007		SUPPORT WHEEL ASSEMBLY	8	

 (60035-43-00001)
CARRIER ROLLER ASS'Y
DRAG SPROCKET ASSEMBLY MOUNTING

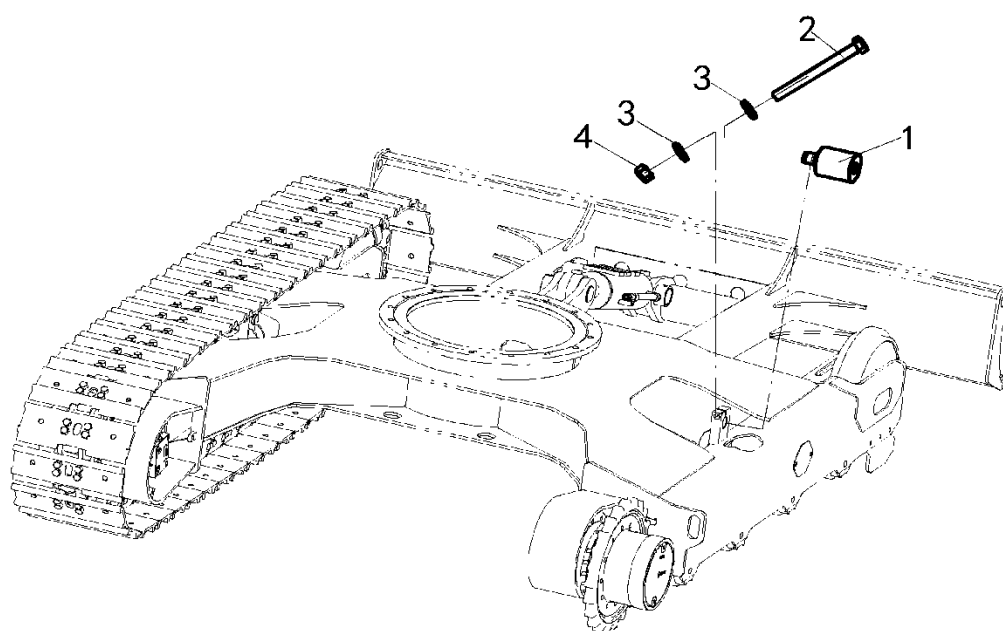


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60025-43-00003		DRAG SPROCKET ASSEMBLY	2	
2	01010-81285		BOLT	2	
3	01643-31232		WASHER	4	
4	01598-11214		NUT	2	

 (60035-44-00001)
GUIDE WHEEL AND BUFFER ASS'Y
THE EXPANSION DEVICE IS INSTALLED

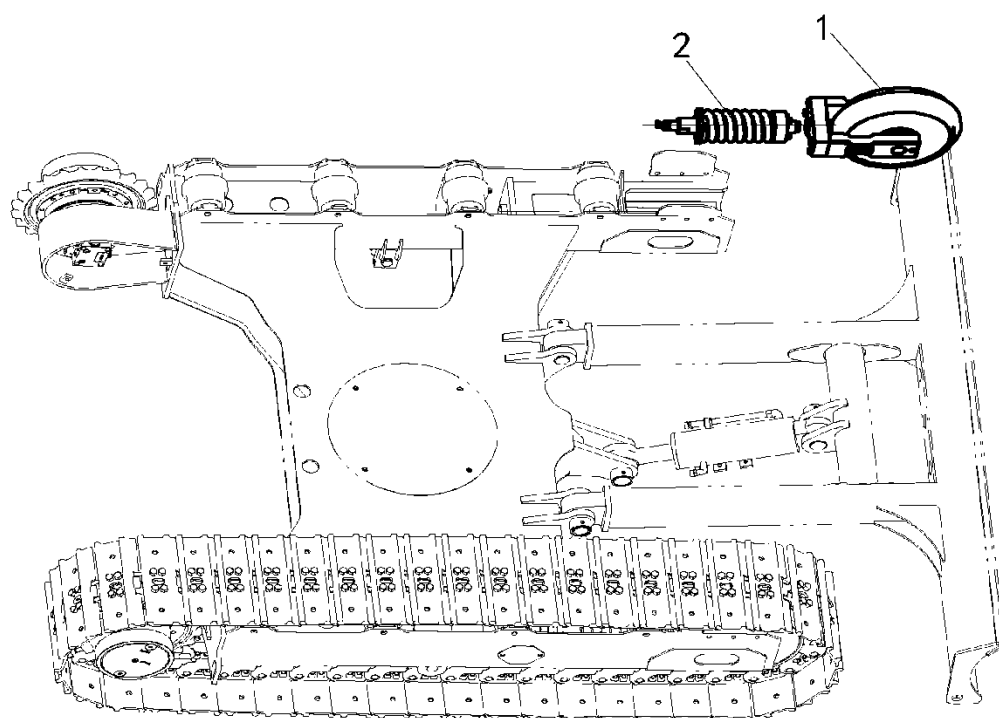


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60025-44-00004		GUIDE WHEEL ASSEMBLY	2	
2	60035-44-00002		EXPANSION DEVICE ASSEMBLY	2	

 (60035-45-00001)
TRACK ASS ' Y
TRACK MOUNTING

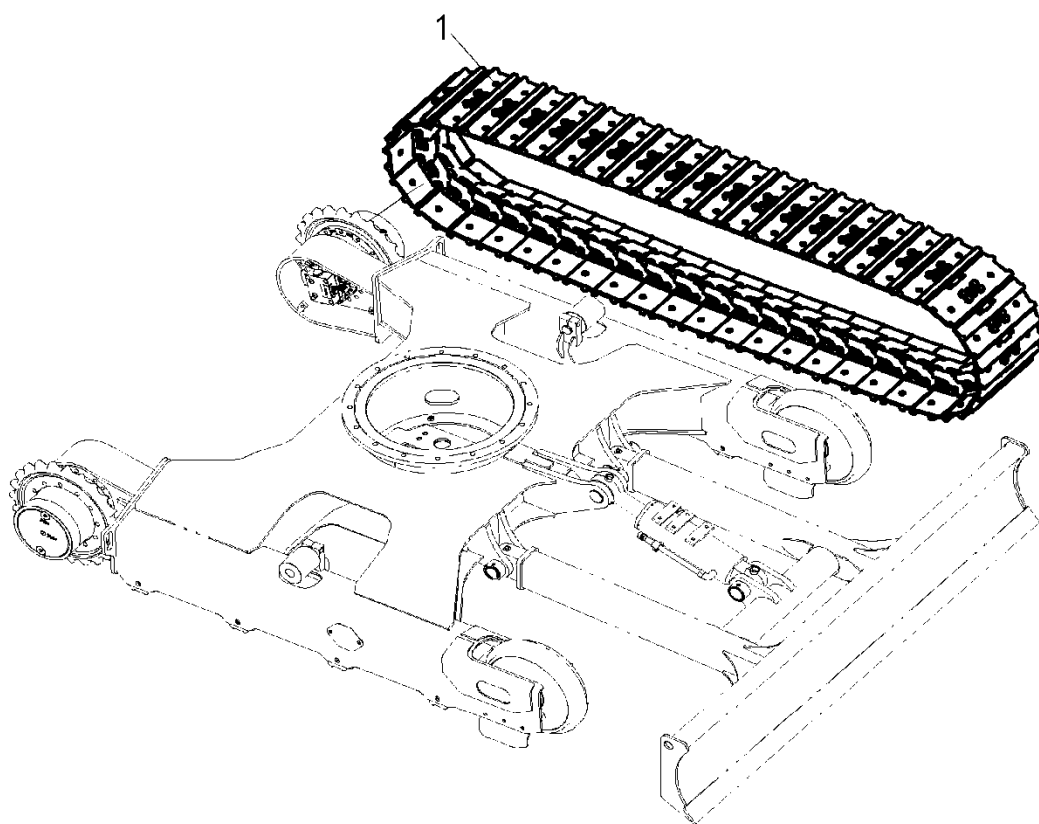


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-45-00002		TRACK	2	

 (60035-45-00003)
CARRIER ROLLER ASS'Y
RUBBER TRACK MOUNTING

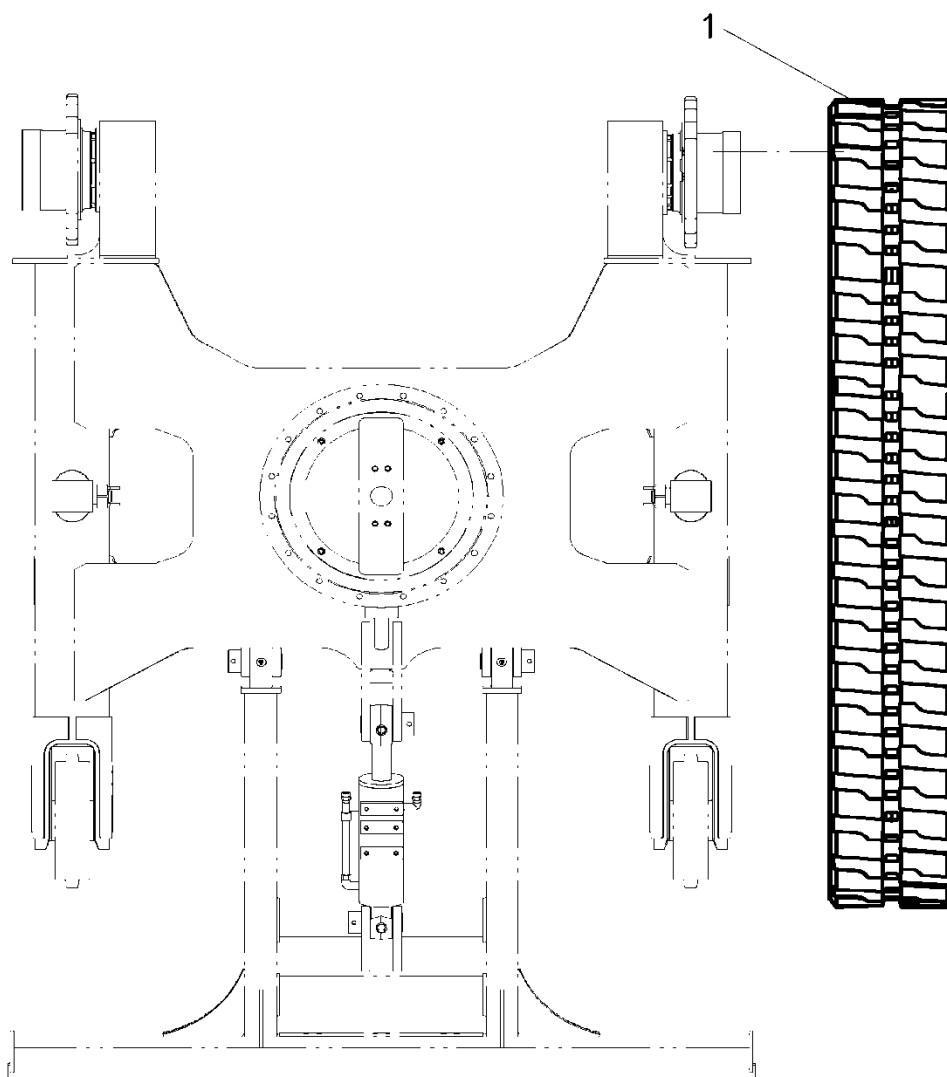

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-45-00004		RUBBER BELT TRACK	2	

 
(60035-51-00078)
REVOLVING FRAME
REVOLVING PLATFORM

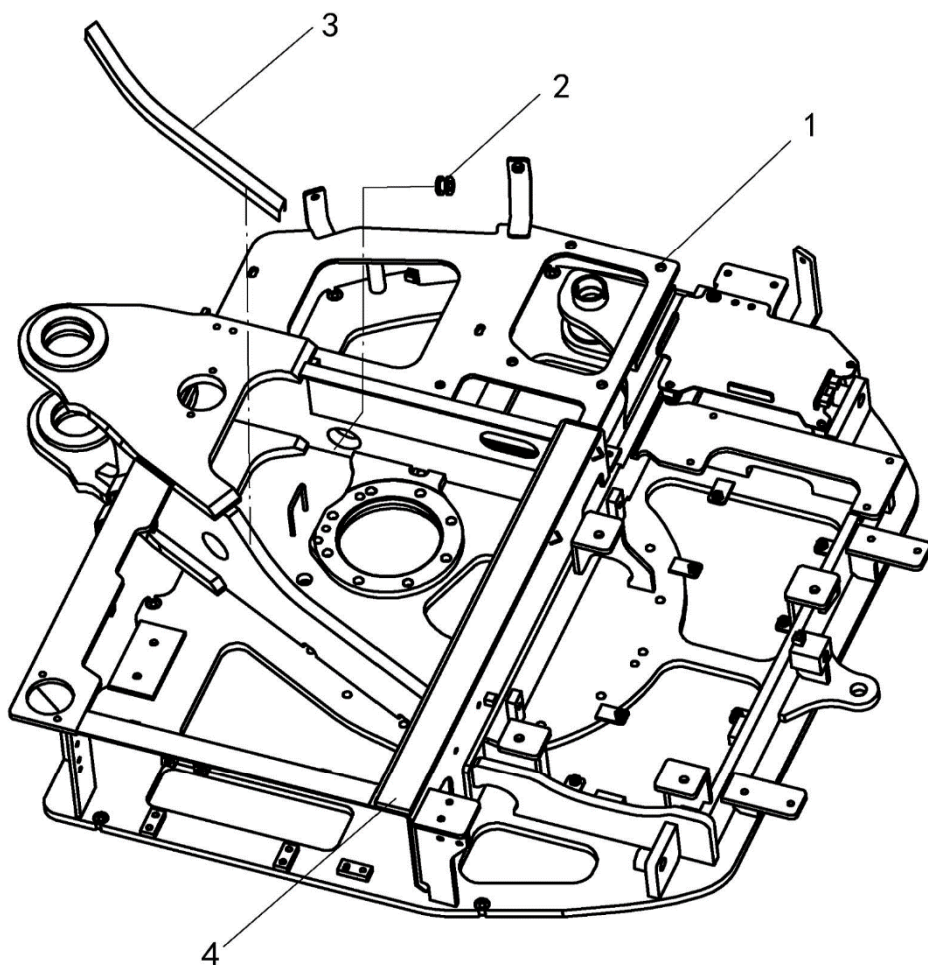


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-51-00079		REVOLVING PLATFORM	1	
2	08037-05035		SHEATH	1	
3	60035-51-00075		SHEATH	1	
4	60035-51-00154		SPONGE	1	

(60035-52-00049)

 FRAME ASS 'Y
TRUCK FRAME

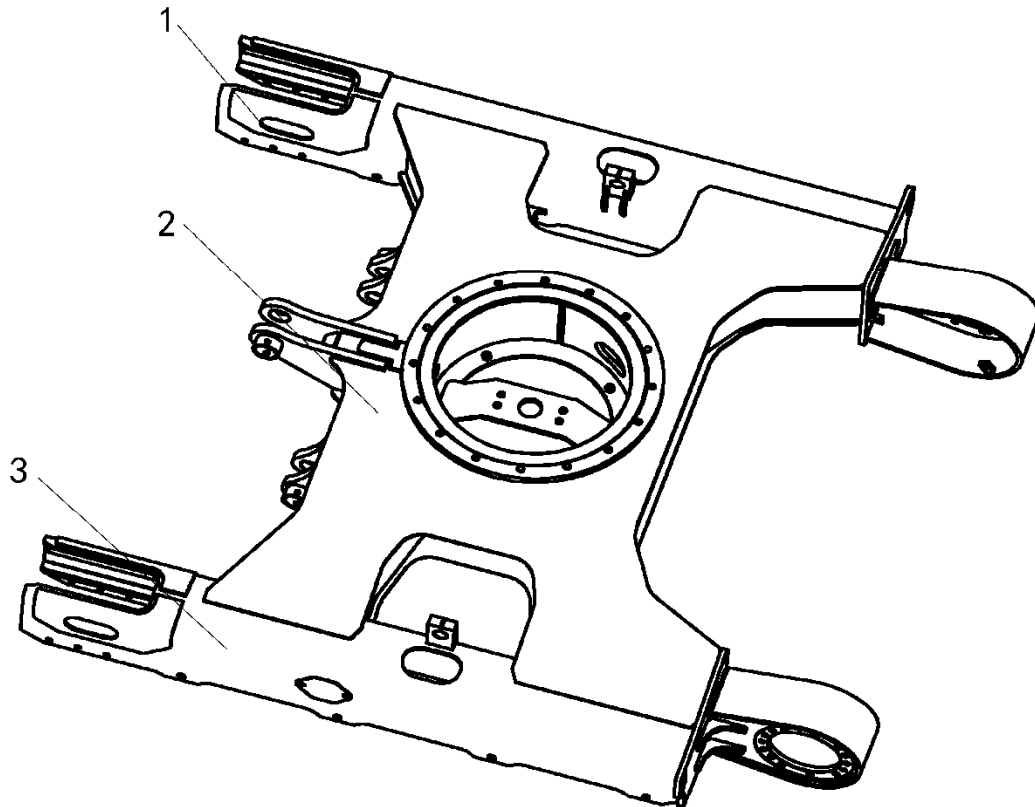


 (60035-53-00038)
BLADE ASS'Y
DOZER SHOVEL INSTALLATION

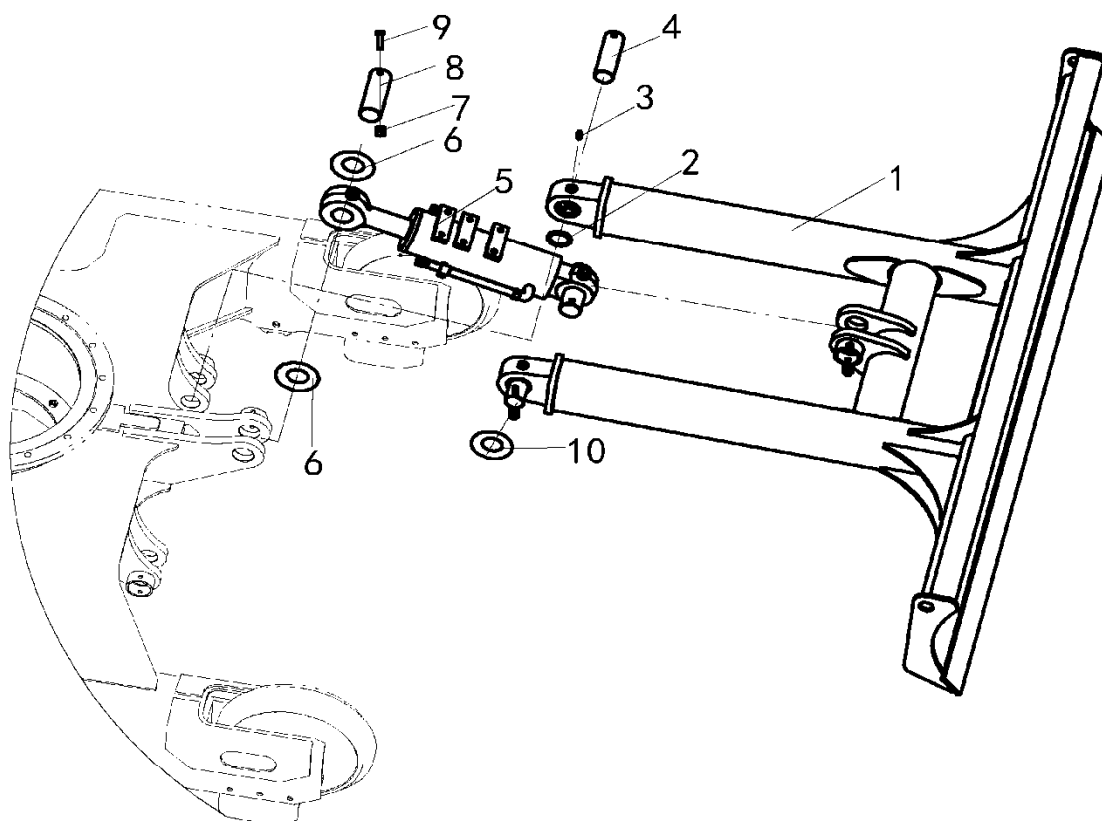


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-53-00036		DOZER SHOVEL ASSEMBLY	1	
2	07145-00040		DUSTBAND	4	
3	07020-00000		OIL CUP	2	
4	60025-53-00041		AXIS PIN	2	
5	60035-86-00001		DOZER SHOVEL CYLINDER	1	
6	60025-53-00048		SPACER	4	
7	01580-10806		NUT	8	
8	60025-53-00046		AXIS PIN	2	
9	01010-80875		BOLT	4	
10	60025-53-00047		GASKET	4	

 DOZER SHOVEL ASSEMBLY

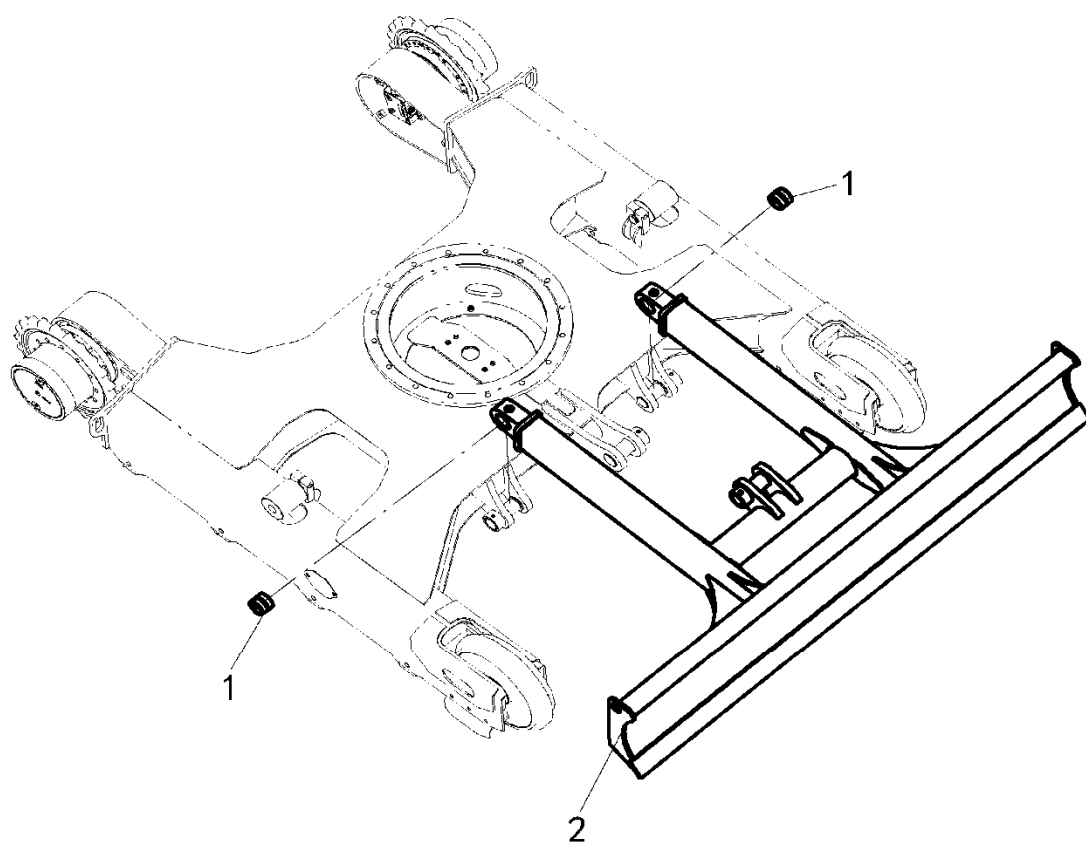


 (60035-61-00038)
BOOM MOUNTING ASS'Y
BOOM MOUNTING ASSEMBLY

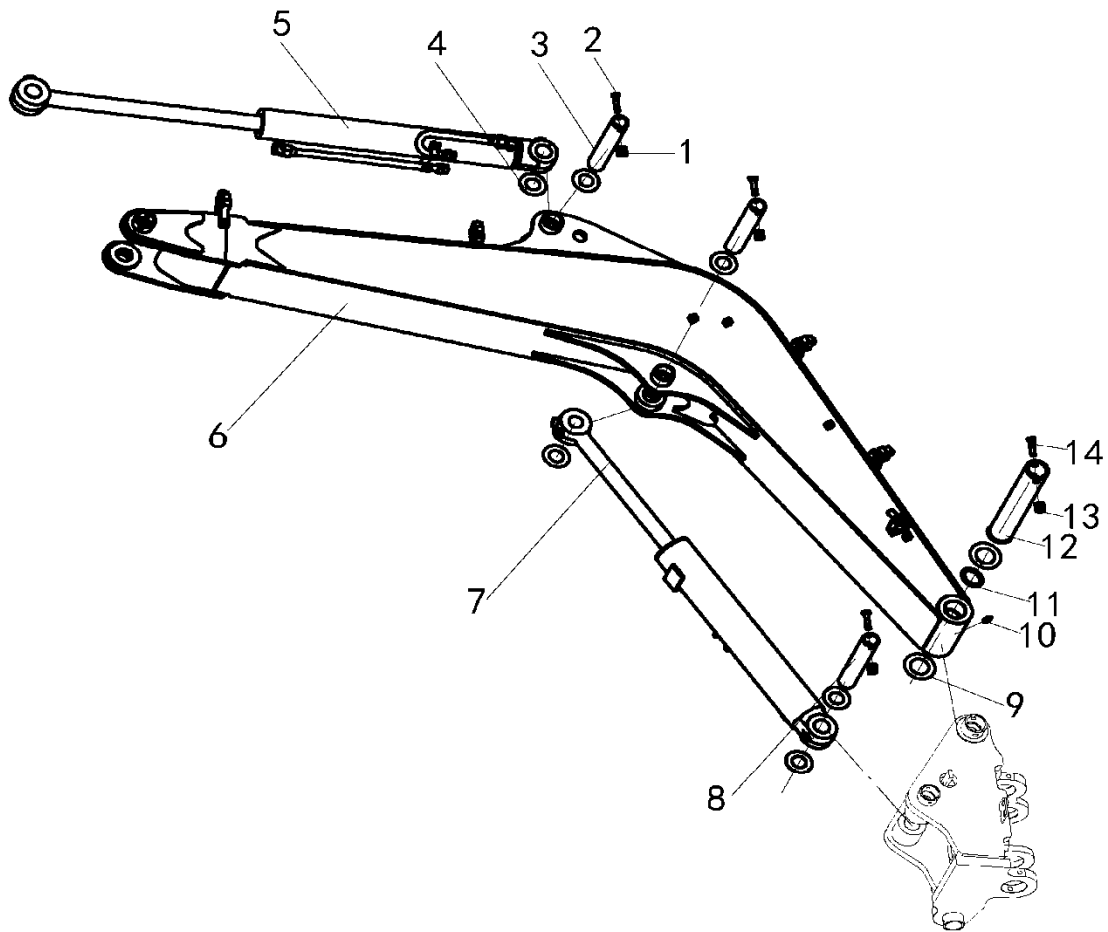


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01580-10806		NUT	6	
2	01010-80875		BOLT	3	
3	60035-61-00066		AXIS PIN	2	
4	60035-61-00067		GASKET	6	
5	60035-61-00024		BUCKET ARM CYLINDER	1	
6	60035-61-00039		BOOM ASSEMBLY	1	
7	60035-61-00023		BOOM CYLINDER	1	
8	60035-61-00063		AXIS PIN	1	
9	60035-61-00064		GASKET	2	
10	07020-00000		OIL CUP	1	
11	07145-00050		DUSTBAND	2	
12	60035-61-00065		AXIS PIN	1	
13	01580-11008		NUT	2	
14	01010-81085		BOLT	1	

 BOOM ASSEMBLY

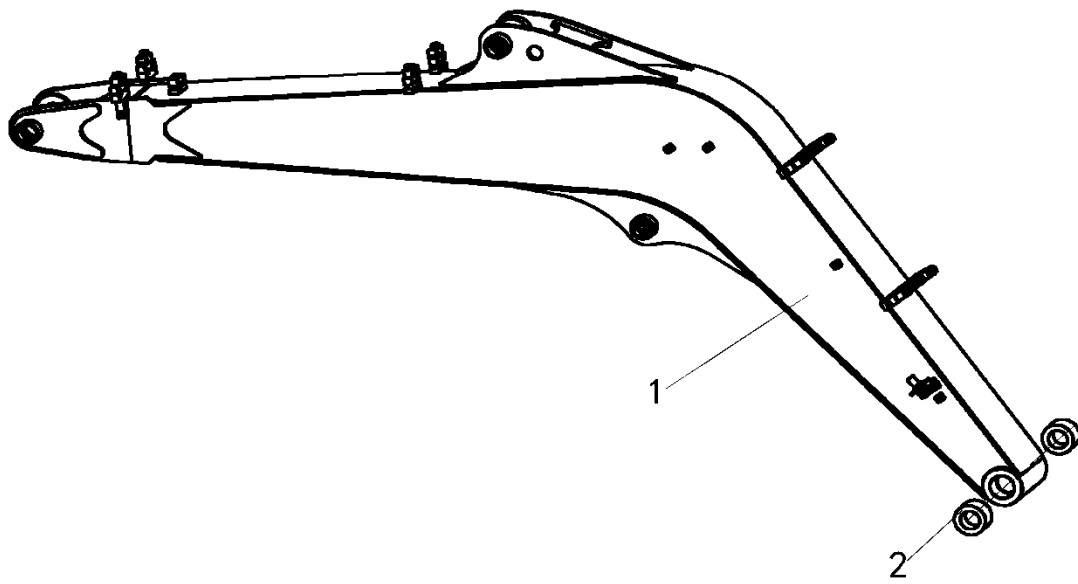


 (60035-62-00038)
ARM MOUNTING ASS'Y
BUCKET ROD MOUNTING ASSEMBLY

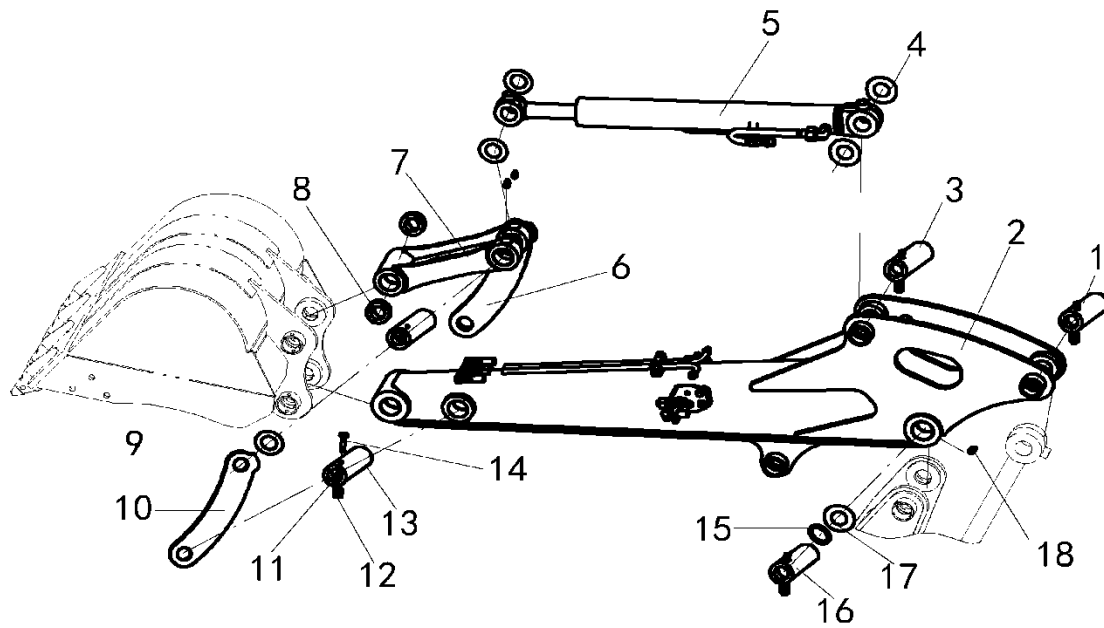


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-62-00067		AXIS PIN	1	
2	60035-62-00039		BUCKET ROD ASSEMBLY	1	
3	60025-61-00054		AXIS PIN	1	
4	60025-53-00047		GASKET	2	
5	60035-62-00018		BUCKET CYLINDER	1	
6	60035-62-00055		RIGHT ROCKER ARM	1	
7	60035-62-00056		ROD ASSY CONNECTING	1	
8	07145-00040		DUSTBAND	6	
9	60035-61-00067		GASKET	8	
10	60035-62-00054		LEFT ROCKER ARM	1	
11	07020-00000		OIL CUP	4	
12	01580-10806		NUT	10	
13	60035-62-00065		AXIS PIN	2	
14	01010-80875		BOLT	5	
15	07145-00045		DUSTBAND	2	
16	60035-62-00068		AXIS PIN	1	
17	60035-62-00069		GASKET	2	
18	07020-00900		OIL CUP	1	

 
BUCKET ROD ASSEMBLY

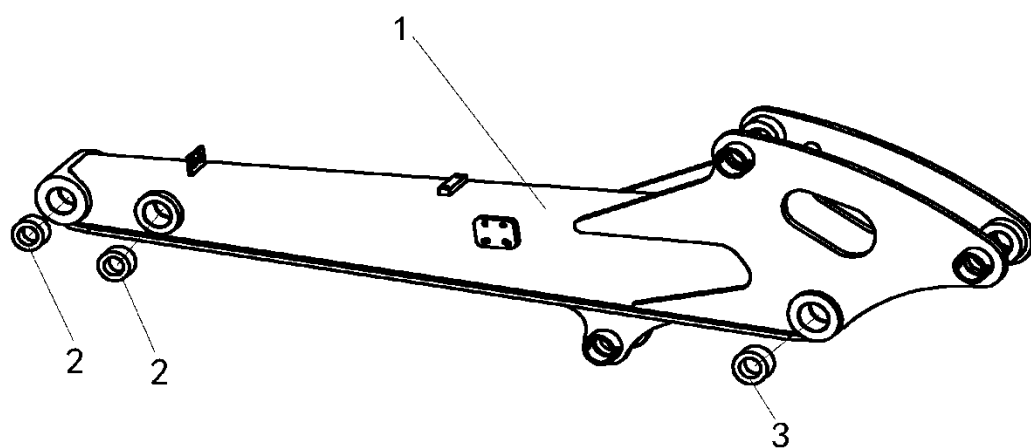


ROD ASSY CONNECTING

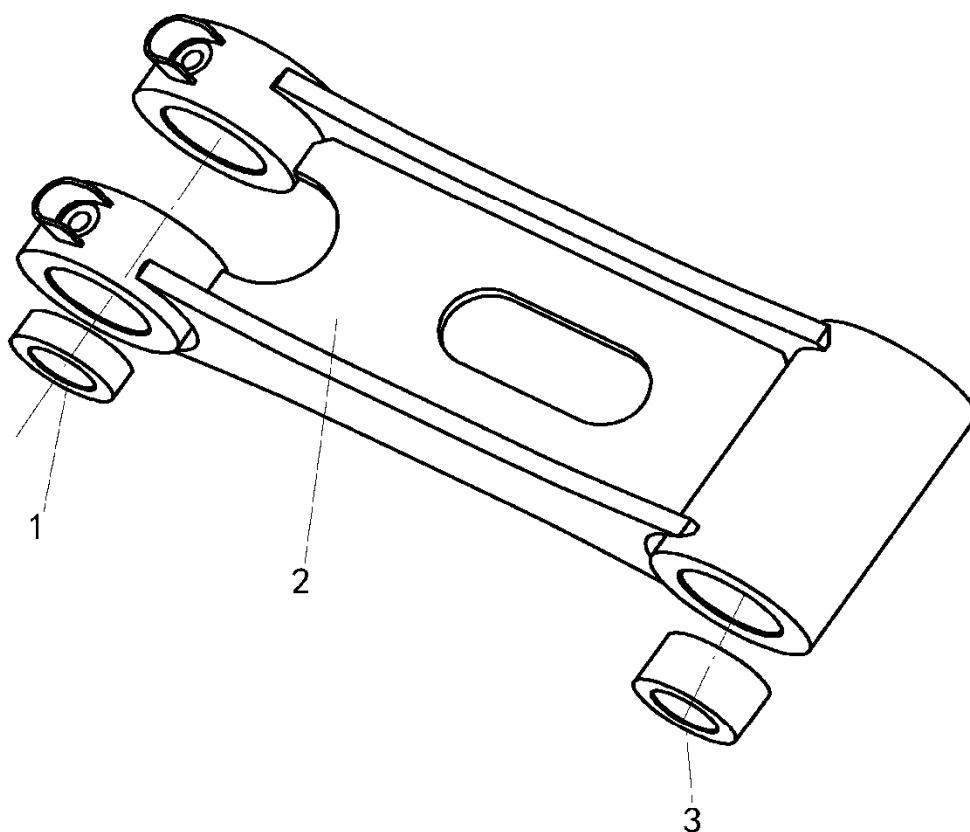 

 (60035-63-00024)
BUCKET MOUNTING ASS'Y
BUCKET MOUNTING ASSEMBLY

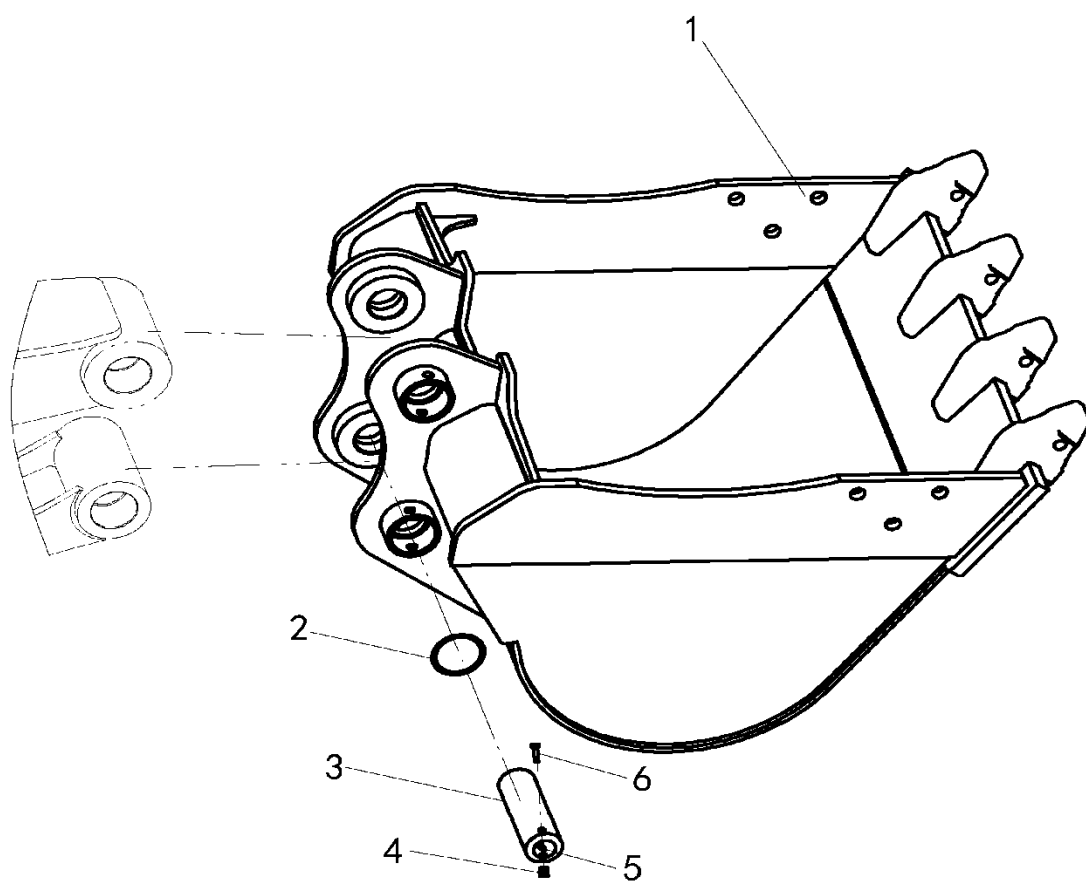


BUCKET ASSEMBLY

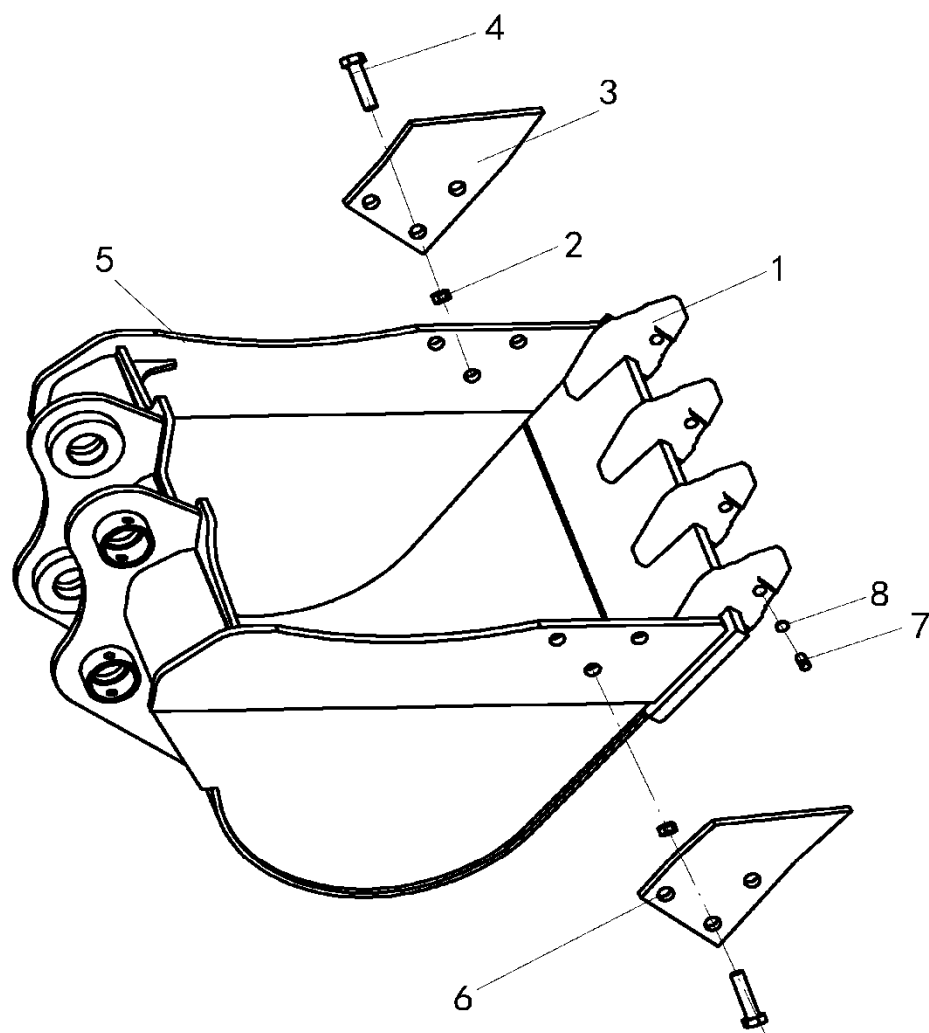 


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60025-63-00018		BUCKET TEETH	4	
2	01580-11411		NUT	6	
3	60025-63-00017		LEFT SIDE EDGE	1	
4	01010-81445		BOLT	6	
5	60035-63-00026		BUCKET	1	
6	60025-63-00016		RIGHT SIDE EDGE	1	
7	60025-63-00021		BOLT	4	
8	60025-63-00020		JUMP RING	4	

 (60035-65-00002)
LUBRICATION ASS'Y
LUBRICATION ASSEMBLY

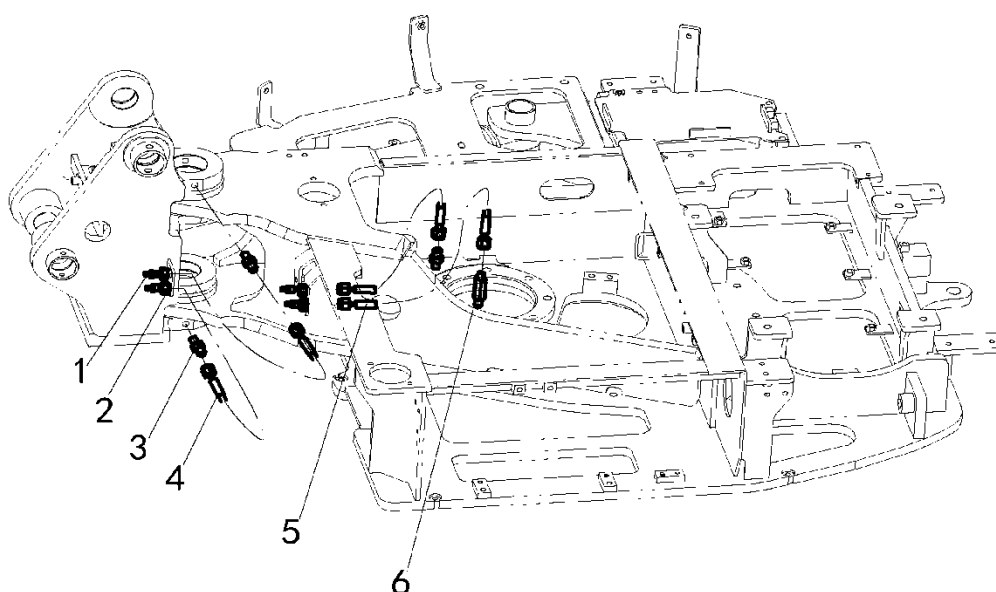


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07020-00000		OIL CUP	4	
2	01583-51610		NUT	4	
3	60210-65-00005		JOINT	2	
4	60035-66-00060		BUTTER HOSE	2	
5	60017-65-00002		BUTTER HOSE	2	
6	60060-65-00007		JOINT	2	

 (60035-66-00044)
SWING FRAME ASS'Y
SWING MOUNT

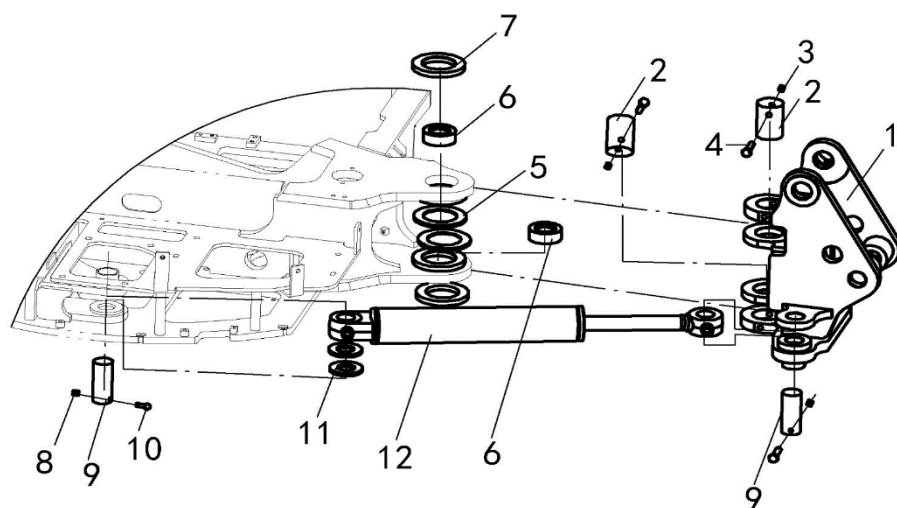


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-66-00045		SWING	1	
2	60035-66-00061		AXIS PIN	2	
3	01011-81250		BOLT	2	
4	01580-11208		NUT	4	
5	60035-66-00064		SPACER	2	
6	60035-66-00067		BUSH	2	
7	60035-66-00065		SPACER	4	
8	01580-10806		NUT	4	
9	60035-66-00062		AXIS PIN	2	
10	01010-80875		BOLT	2	
11	60025-53-00048		SPACER	8	
12	60035-66-00027		SWING CYLINDER	1	

 (60035-71-00003)
COUNTERWEIGHT ASS 'Y
COUNTERWEIGHT ASS 'Y

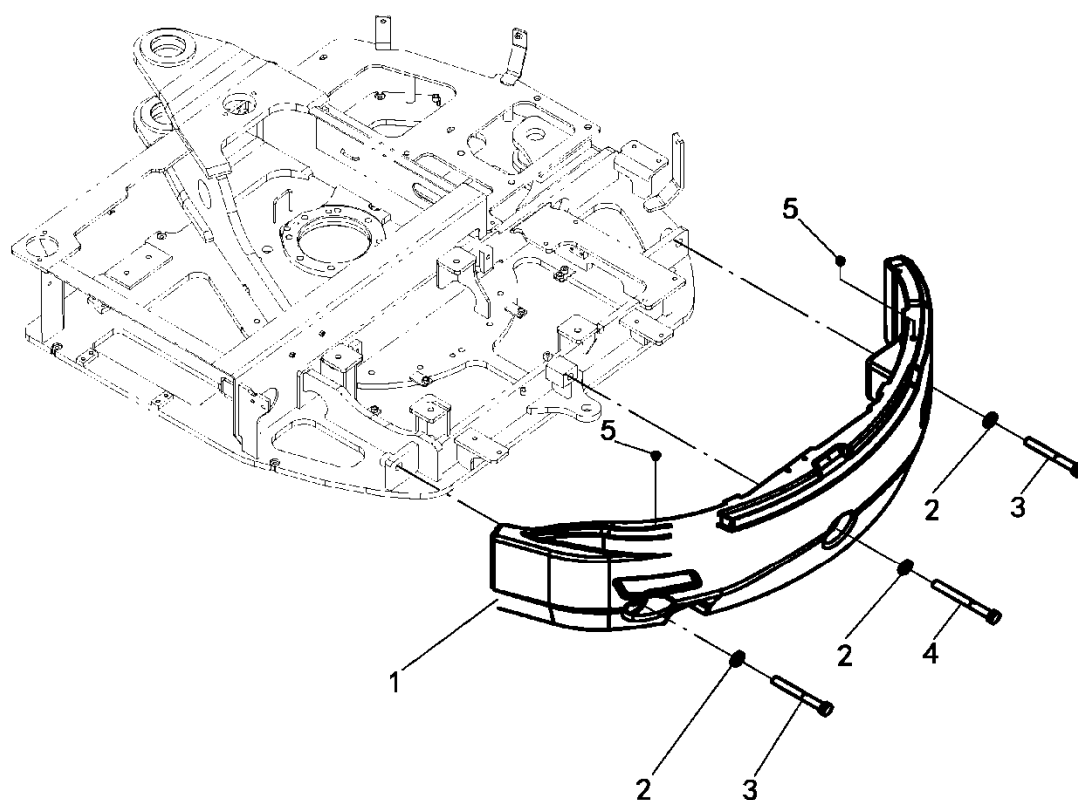


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-71-00004		COUNTERWEIGHT	1	
2	01643-32060		WASHER	3	
3	01011-G2060		BOLT	2	
4	01011-H2020		BOLT	1	
5	07049-11214		PLUG	2	

 (60035-72-00068)
SIDE HOOD MOUNTING
SIDE COVER MOUNTING

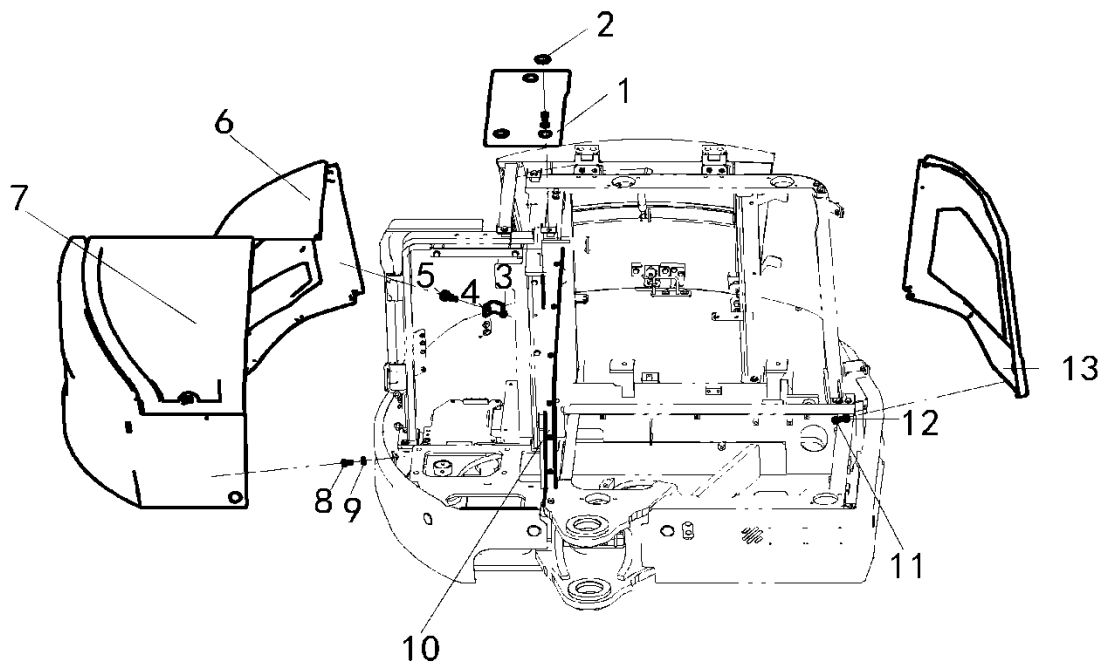

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-72-00004		COVER PLATE	1	
2	60050-72-00001		RUBBER CAP	4	
3	01580-11008		NUT	1	
4	60035-72-00005		POSITIONING PLATE	1	
5	60130-72-00001		PIN	1	
6	60035-72-00003		RIGHT SIDE COVER	1	
7	60035-72-00071		RIGHT FRONT COVER	1	
8	01016-51020		BOLT	18	
9	01643-31032		WASHER	18	
10	60035-72-00069		FRONT BRACKET	1	
11	01016-50820		BOLT	2	
12	01645-30832		GASKET	2	
13	60035-72-00006		LEFT SIDE COVER	1	

 
(60035-73-00019)
FENDER ASS'Y
FENDER INSTALLATION

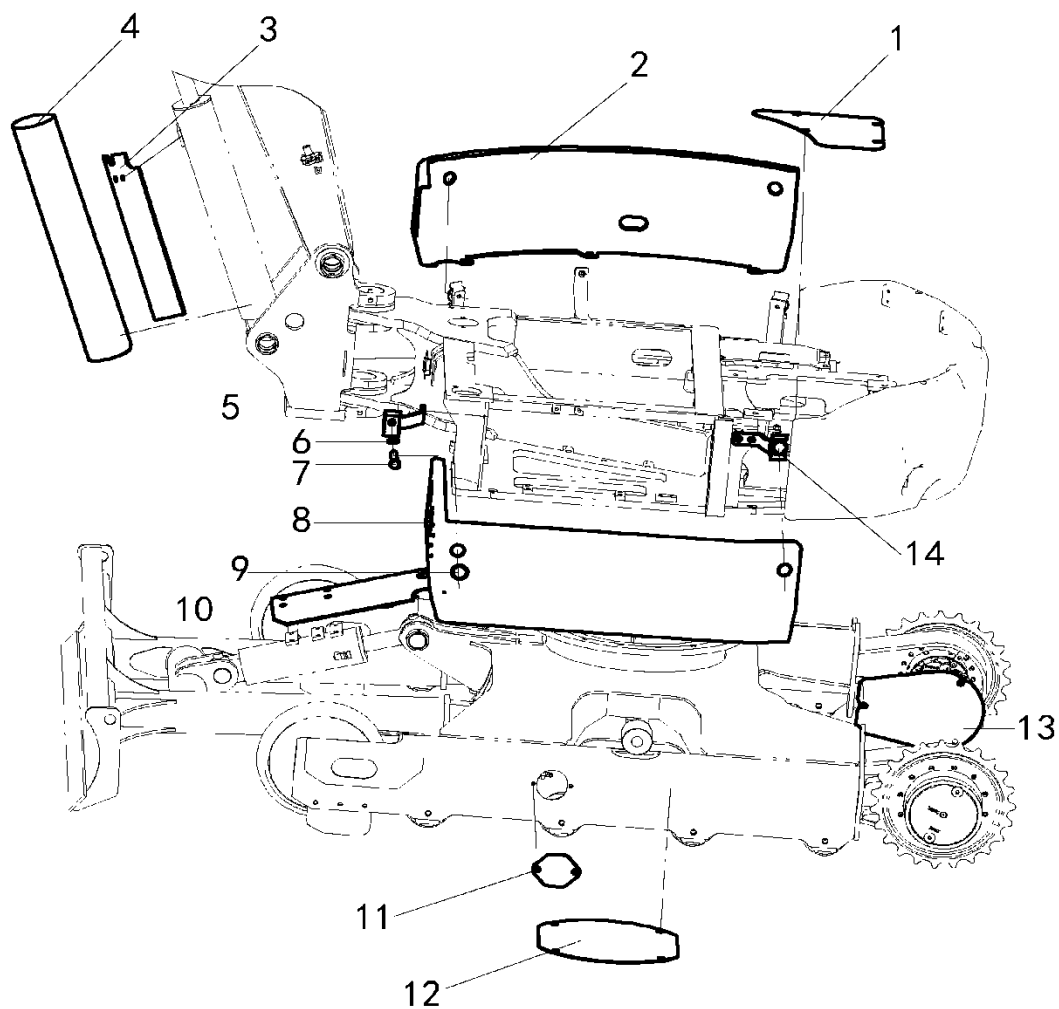


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-73-00022		FENDER	2	
2	60035-73-00026		RIGHT SIDE PLATE	1	
3	60035-73-00009		GUARD BOARD	1	
4	60025-73-00011		SHEATH	2	
5	60035-73-00005		BRACKET	1	
6	01643-31032		WASHER	44	
7	01016-51020		BOLT	44	
8	60035-73-00020		LEFT SIDE PLATE	1	
9	60050-72-00001		RUBBER CAP	6	
10	60035-73-00024		GUARD BOARD	1	
11	60035-73-00031		COVER PLATE	2	
12	60035-73-00023		BASEBOARD	1	
13	60025-73-00031		COVER PLATE	2	
14	60035-73-00030		BRACKET	1	

(60035-74-00051)

 FRAME ASS 'Y
FRAME MOUNTING

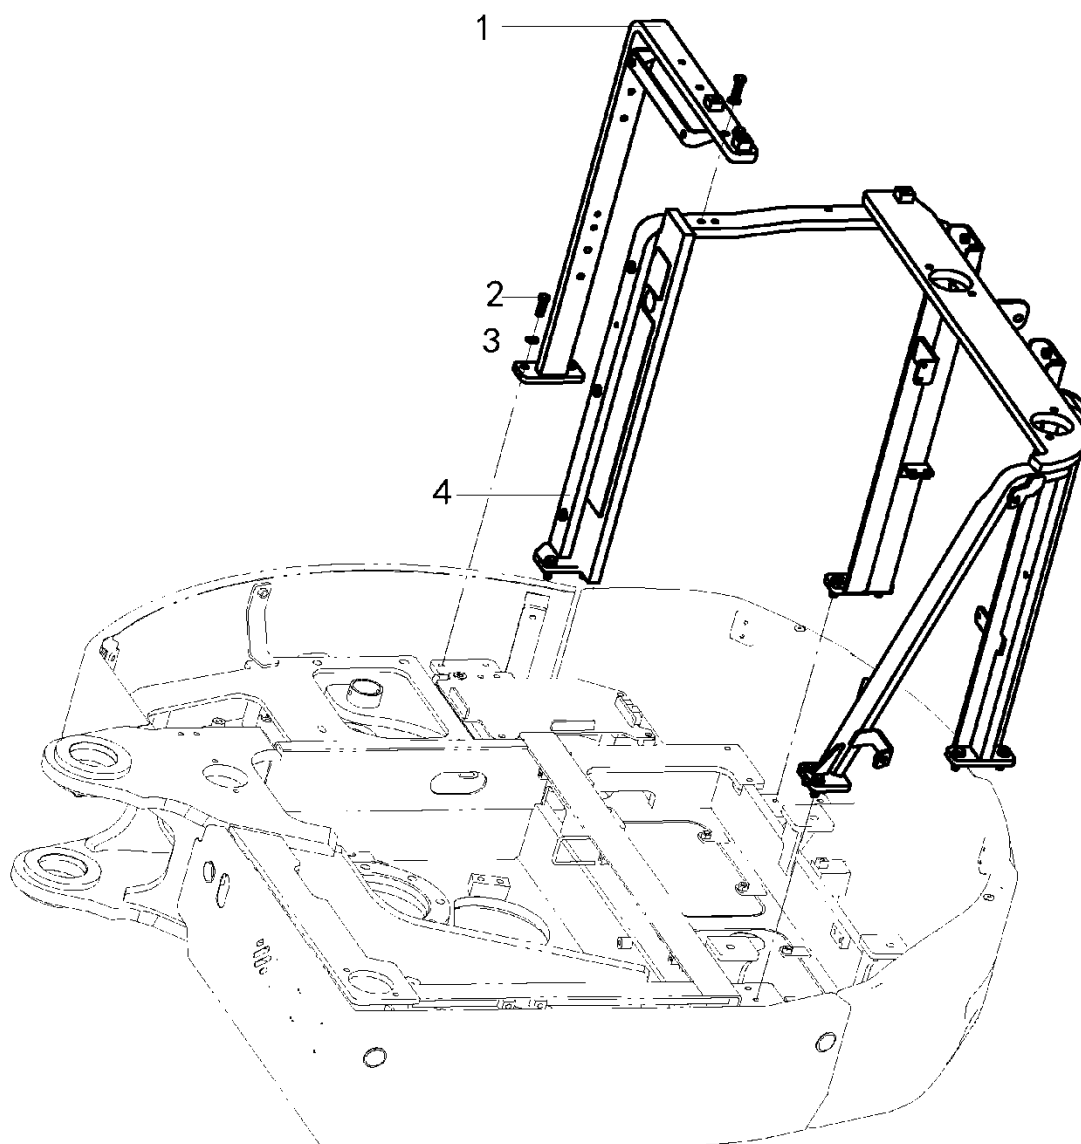


 (60035-76-00001)
ENGINE HOOD MOUNTING
HOOD MOUNTING

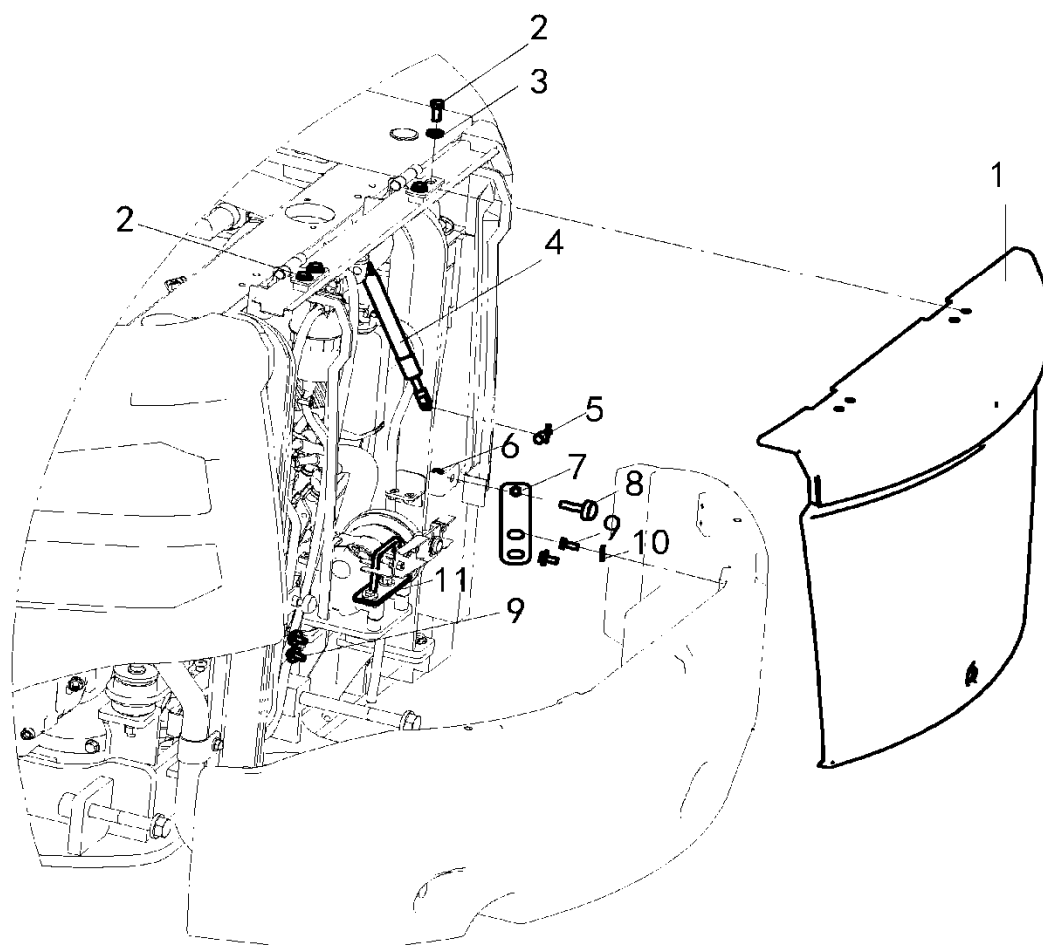


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-76-00002		REAR COVER ASSY	1	
2	01016-51020		BOLT	4	
3	01643-31032		WASHER	4	
4	60035-76-00004		PNEUMATIC SPRING	1	
5	04050-13222		COTTER PIN	2	
6	01580-11008		NUT	2	
7	60035-72-00005		POSITIONING PLATE	1	
8	60130-72-00001		PIN	2	
9	01016-50820		BOLT	4	
10	01645-30832		GASKET	4	
11	60035-76-00003		LOCK SHAFT	1	

 (60035-7A-00005)
MACHINE MODE LABLE
LABEL ASS'Y

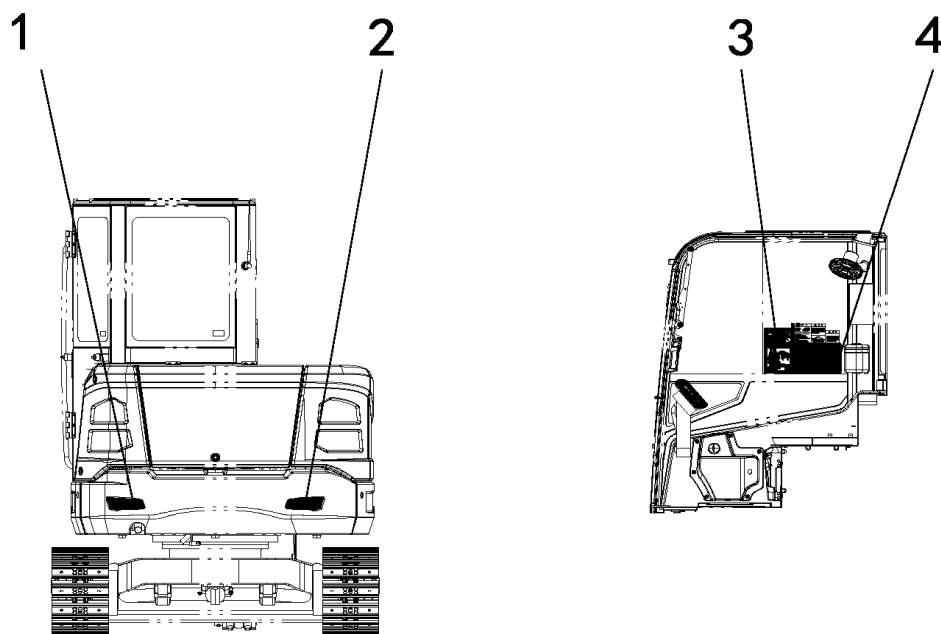


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60025-7A-00002		LABEL	1	
2	60025-7A-00003		LABEL	1	
3	09807-01000		LABEL	1	
4	60035-7A-00004		LABEL	1	

 (60035-7B-00002)
GRAPHIC LOGO
LABEL ASS'Y

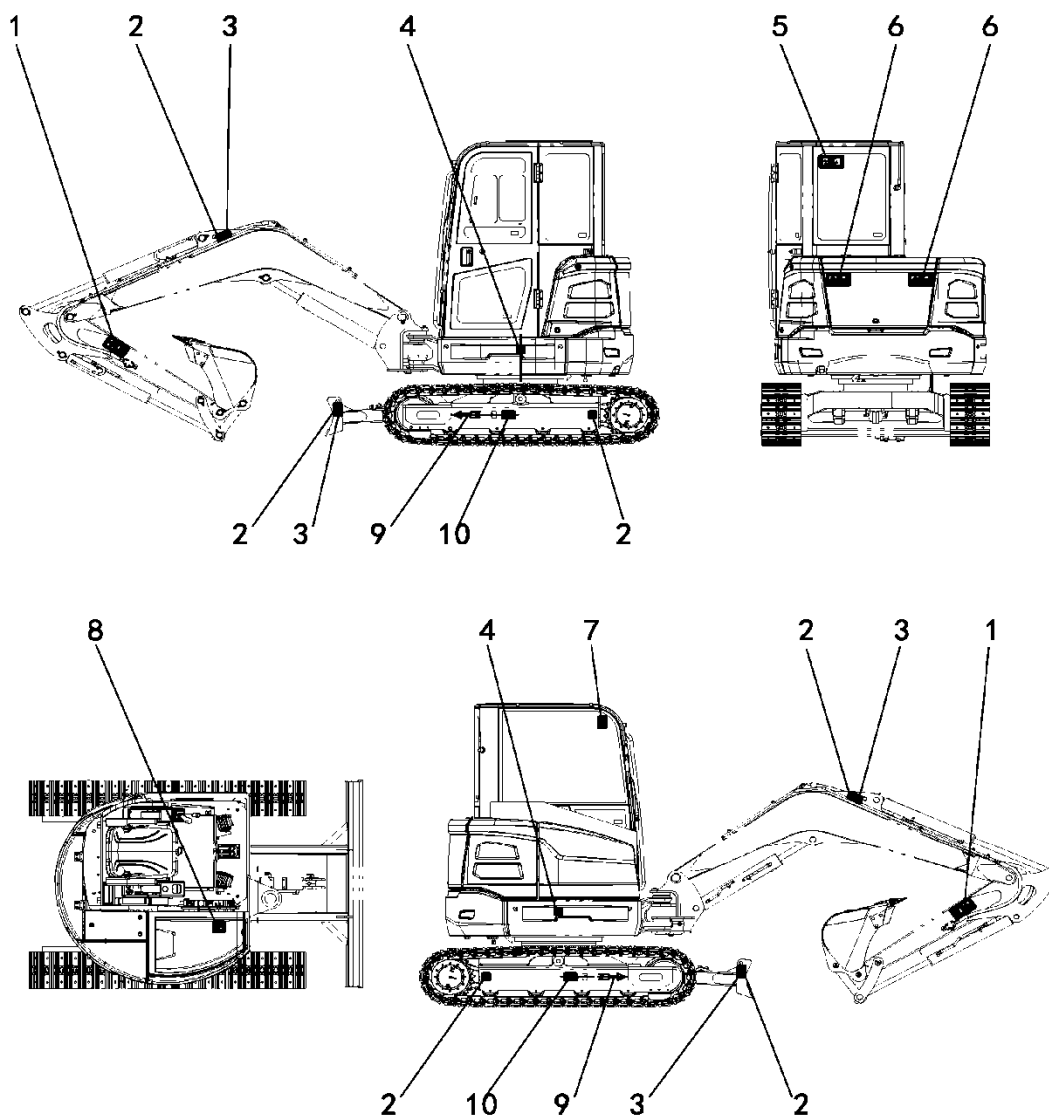


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	09134-10880		LABEL	2	
2	09960-00502		LABEL	6	
3	09960-00501		LABEL	4	
4	09960-00503		LABEL	2	
5	09645-11680		LABEL	1	
6	09133-11680		LABEL	2	
7	09803-10480		LABEL	1	
8	09843-02000		LABEL	1	
9	09951-00200		LABEL	2	
10	09657-10880		LABEL	2	

 LABEL ASS'Y

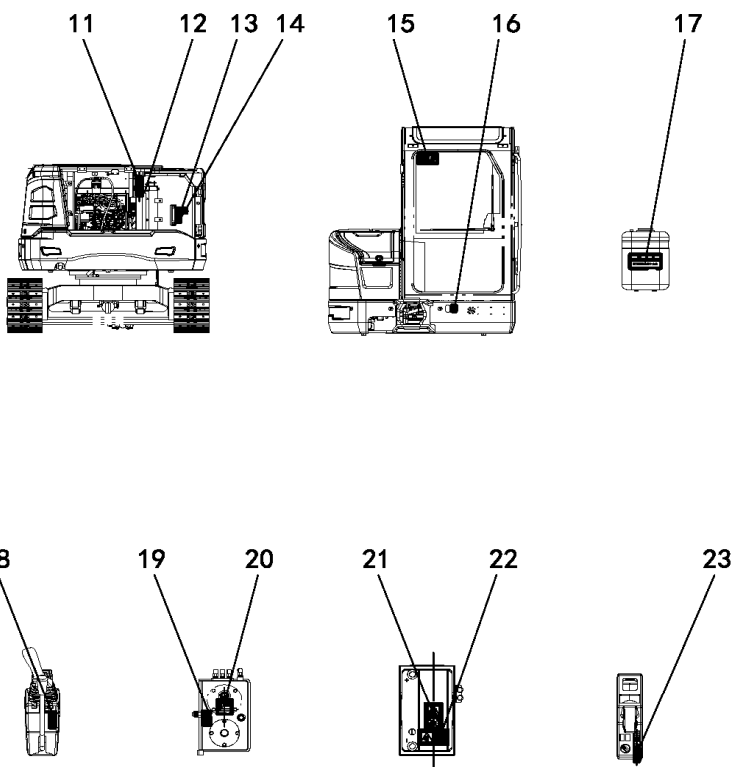


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
11	09653-10480		LABEL	1	
12	09667-20480		LABEL	1	
13	09840-02000		LABEL	1	
14	09851-01000		LABEL	1	
15	09135-21680		LABEL	1	
16	60035-7B-00003		LABEL	1	
17	09848-02000		LABEL	1	
18	09685-00002		LABEL	1	
19	0984A-02000		LABEL	1	
20	09653-02100		LABEL	1	
21	09842-10480		LABEL	1	
22	09808-10880		LABEL	1	
23	60060-75-00001		LABEL	1	

 (60035-78-00035)
HYDRAULIC TANK ASS 'Y
HYDRAULIC TANK

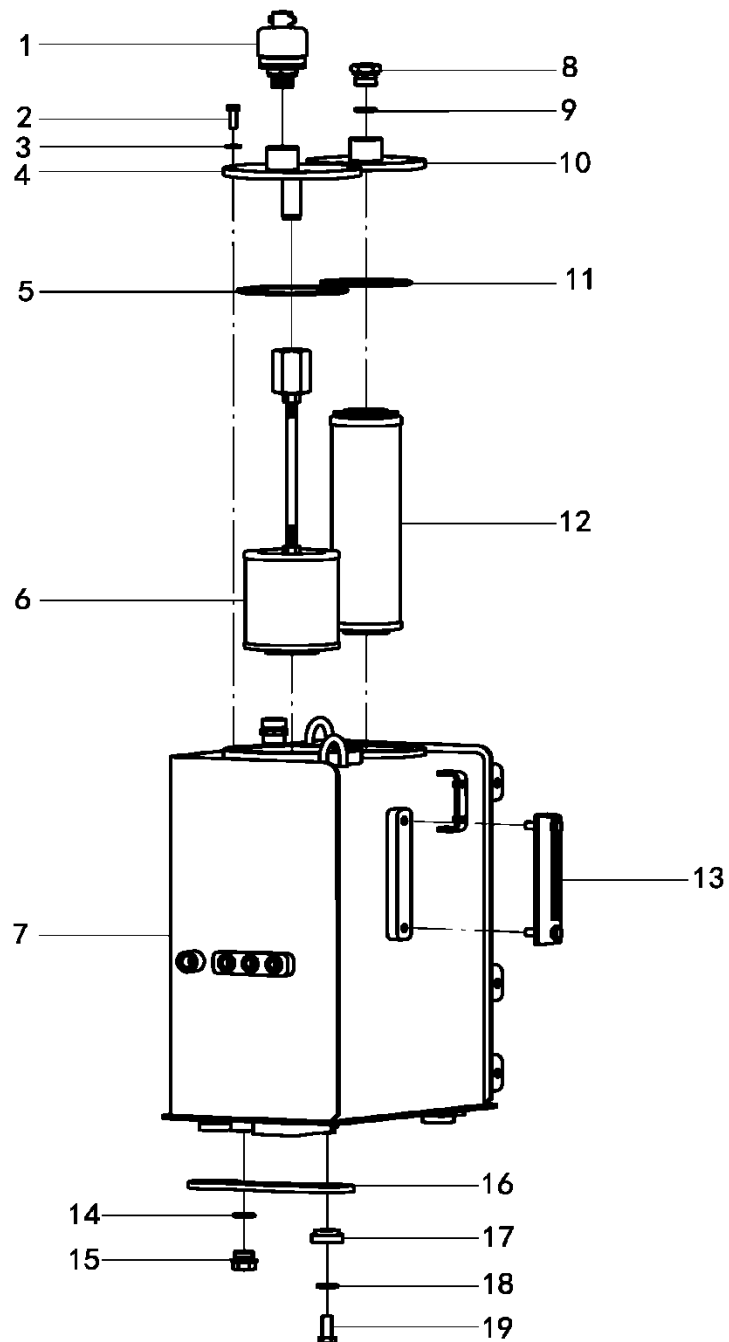


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-78-00009		BREATHER VALVE	1	
2	01010-81025		BOLT	8	
3	01643-30823		GROMMET	8	
4	60035-78-00004		SUCTION COVER	1	
5	07000-12135		O-RING	1	
6	60035-78-00007		OIL SUCTION STRAINER	1	
7	60035-78-00037		OIL BOX	1	
8	07045-15032		PLUG	1	
9	07418-12715		SEAL RING	1	
10	60035-78-00010		RETURN COVER	1	
11	07000-12110		O-RING	1	
12	60035-78-00005		RETERN OIL FILTER	1	
13	60035-78-00001		LEVEL GAUGE	1	
14	07002-12434		O-RING	1	
15	07044-12412		PLUG	1	
16	60060-05-00005		WASHER	2	
17	60060-05-00001		WASHER	2	
18	01643-31232		WASHER	4	
19	01010-81230		BOLT	4	

 (60035-8A-00003)
CONTROL AND DRAIN LINE
CONTROL AND DRAIN LINE

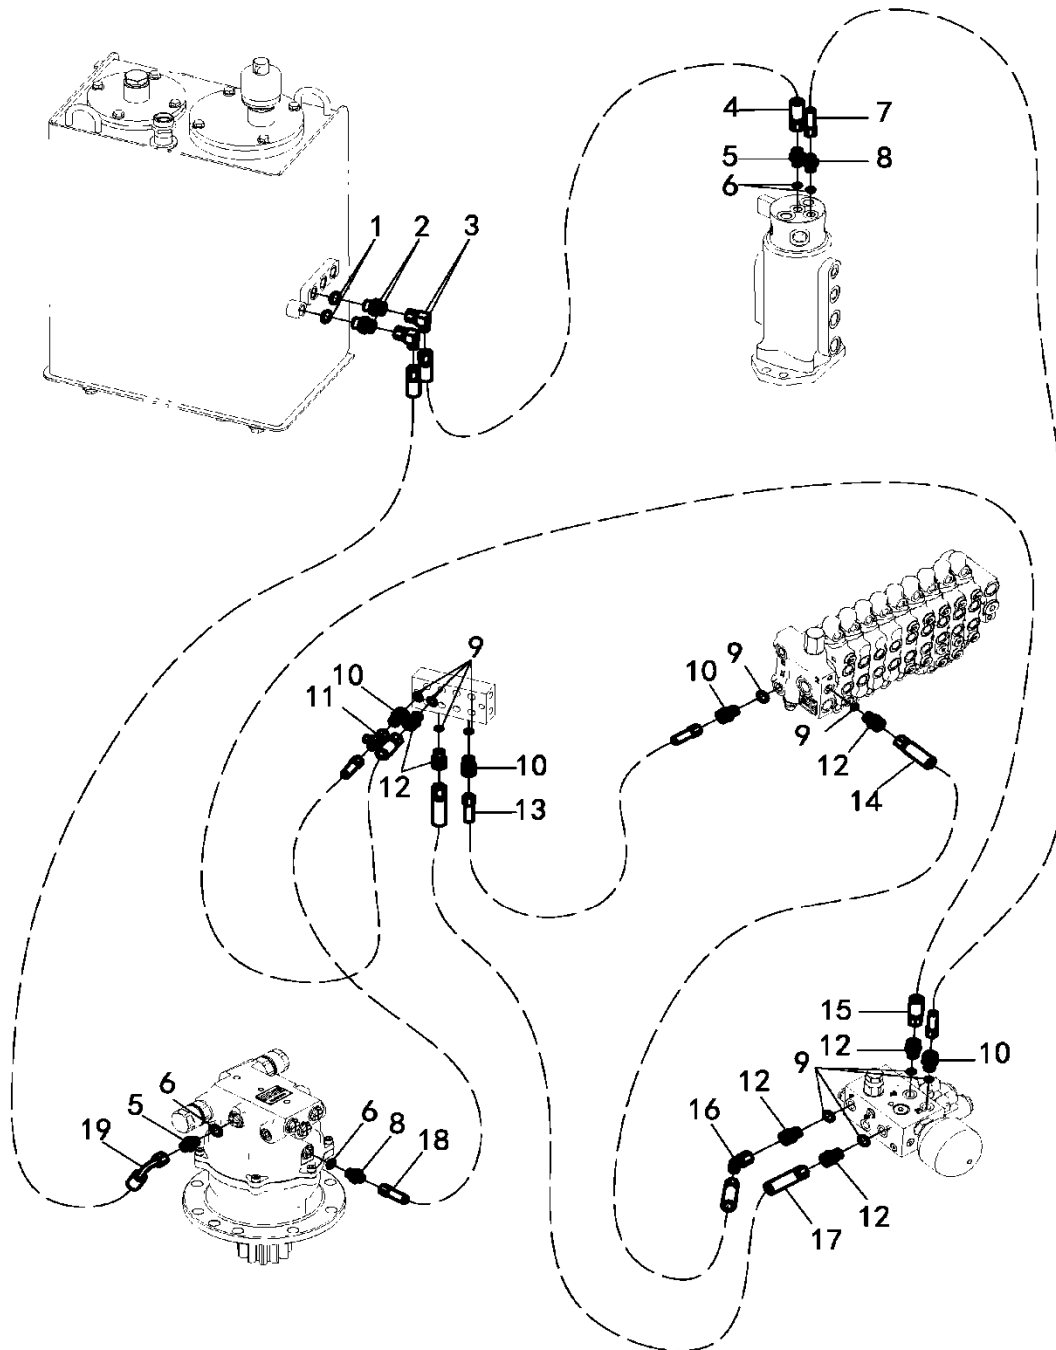

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07418-21715		SEAL RING	2	
2	07416-23023		UNION	2	
3	07415-20228		ELBOW	2	
4	07400-402A5		HOSE	1	
5	07413-22023		UNION	2	
6	07000-12011		O-RING	4	
7	07400-00108		HOSE	1	
8	07413-22013		UNION	2	
9	07418-21415		SEAL RING	10	
10	07416-22013		UNION	4	
11	07434-20127		TEE JOINT	1	
12	07416-22023		UNION	6	
13	07401-40107		HOSE	1	
14	07406-40205		HOSE	1	
15	07400-402A7		HOSE	1	
16	07432-20228		ELBOW	1	
17	07401-002A6		HOSE	1	
18	07400-00105		HOSE	1	
19	07401-402A7		HOSE	1	

 (60035-8B-00005)
**INLET AND BYPASS PIPELINE
CONTROL AND DRAIN LINE**

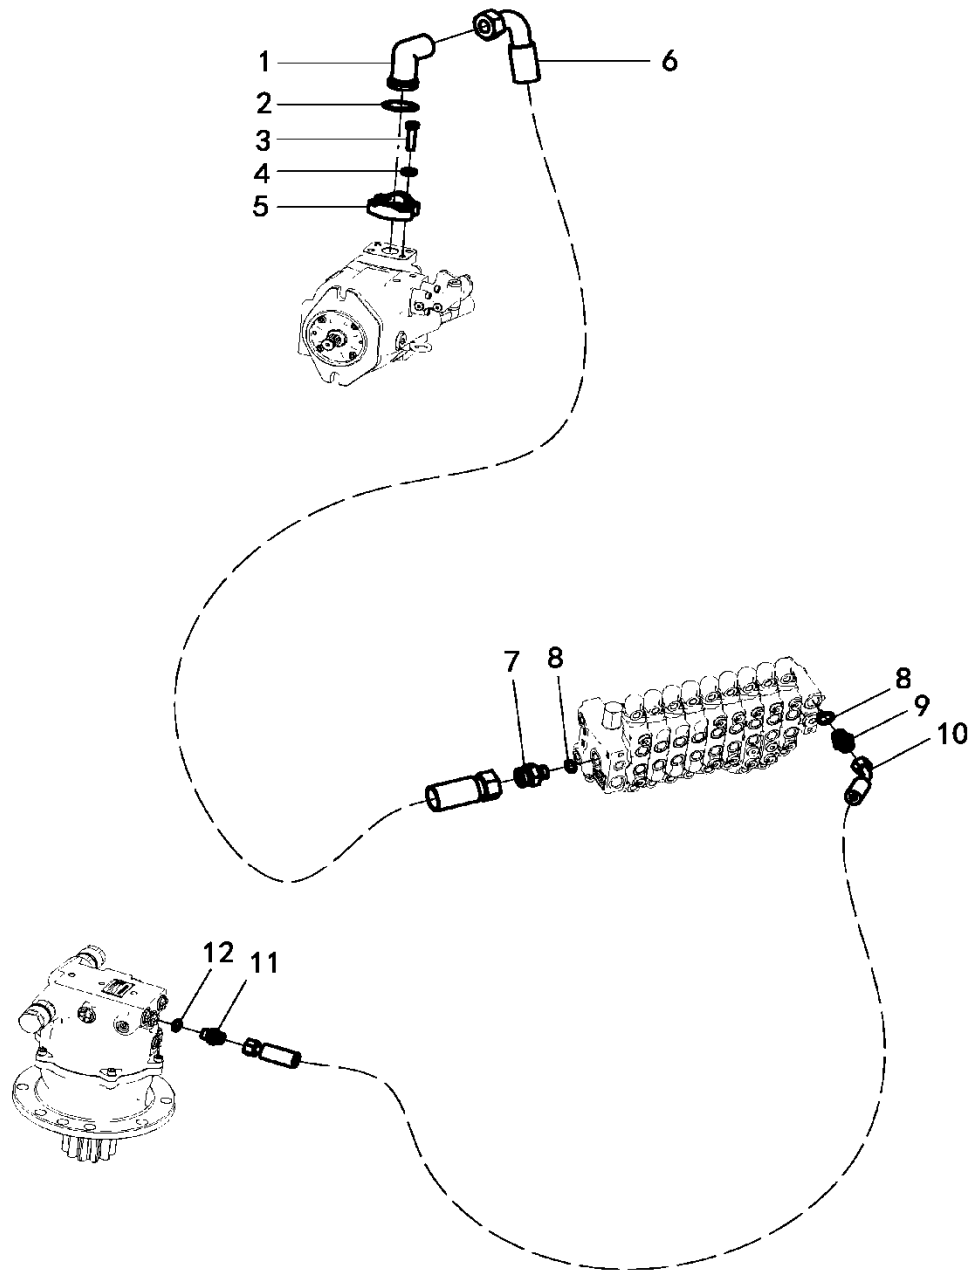


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60220-89-00002		ELBOW	1	
2	07008-13032		O-RING	1	
3	07372-21035		BOLT	4	
4	01643-51032		WASHER	4	
5	07429-11049		FLANGE	2	
6	07407-410A5		HOSE	1	
7	60035-8B-00003		UNION	1	
8	07418-12115		SEAL RING	2	
9	07416-24034		UNION	1	
10	60035-8B-00006		HOSE	1	
11	07413-23033		UNION	1	
12	07000-12014		O-RING	1	

(60035-8C-00003)


COOLING LINE

 COOLING LINK

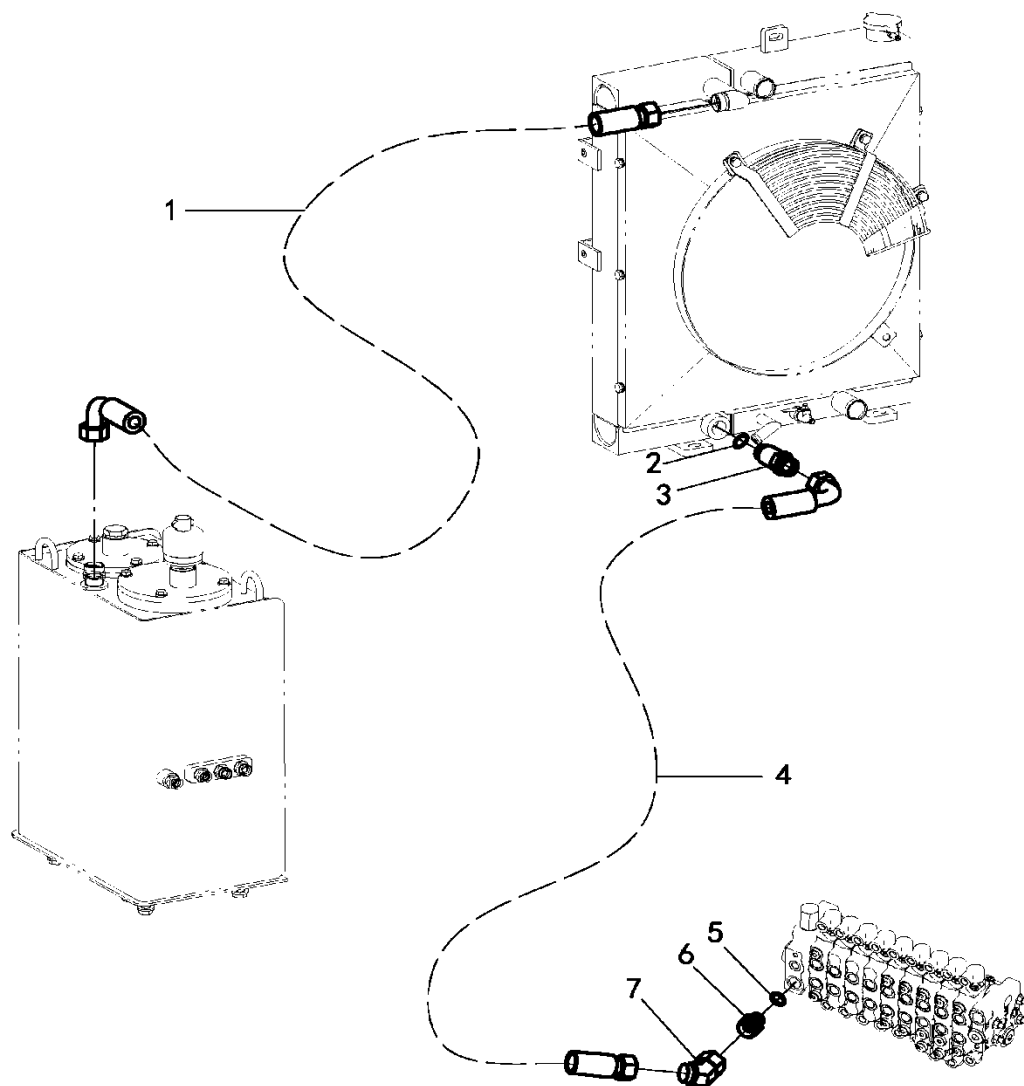


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07401-00606		HOSE	1	
2	07408-12715		SEAL RING	1	
3	60035-8C-00002		UNION	1	
4	60035-8C-00004		HOSE	1	
5	07418-12115		SEAL RING	1	
6	07416-14064		UNION	1	
7	07432-10639		ELBOW	1	

 (60035-81-00026)
PILOT CONTROL LINE
PILOT CONTROL LINK

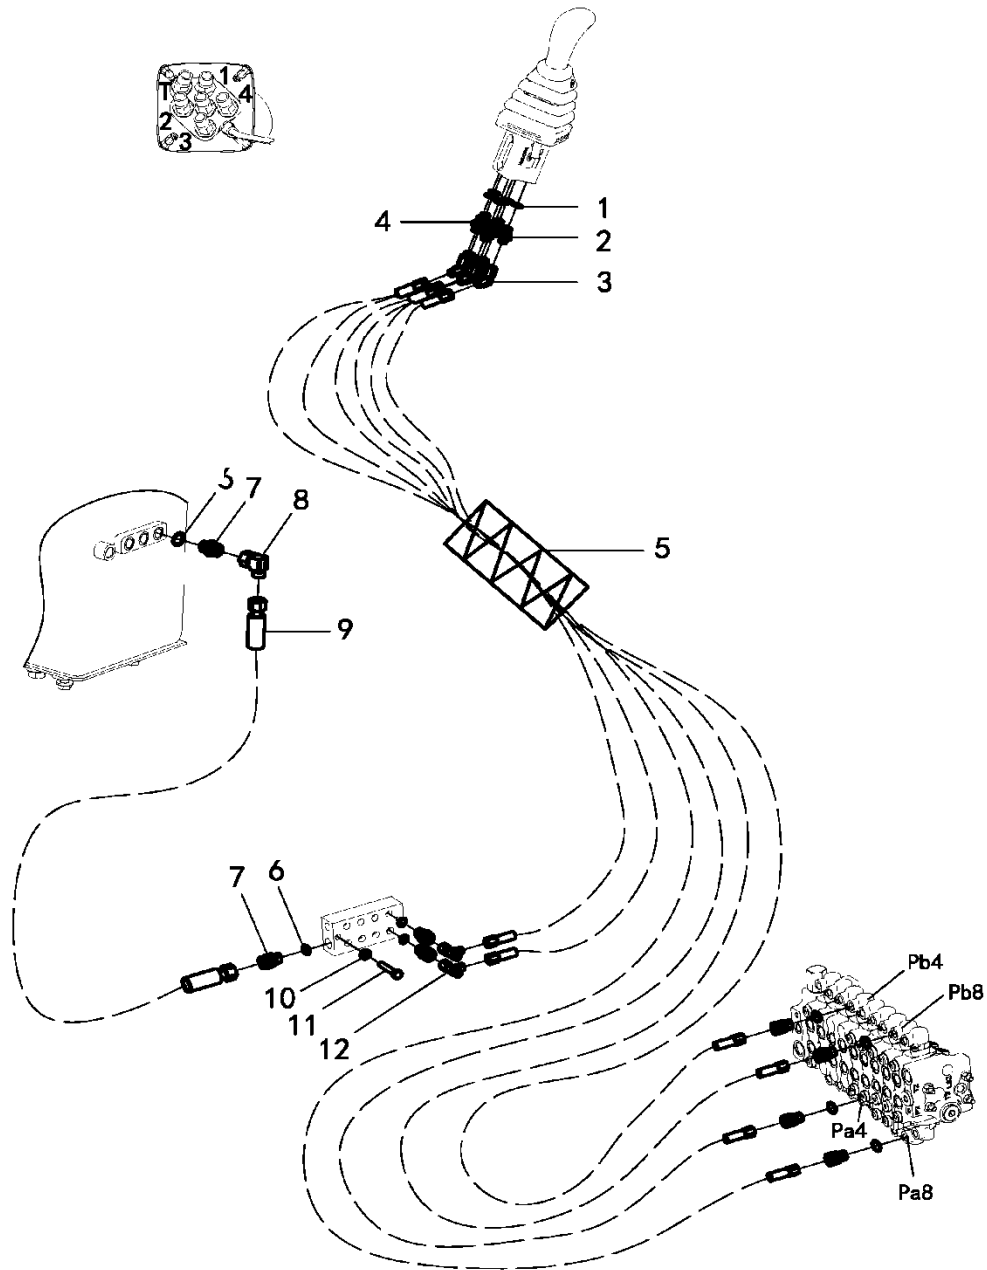


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07418-11415		SEAL RING	12	
2	07416-22013		UNION	9	
3	07432-20127		ELBOW	6	
4	60017-81-00012		UNION	3	
5	60035-81-00030		TUBE BUNDLE	1	
6	07418-11715		SEAL RING	2	
7	07416-23033		UNION	2	
8	07415-20330		ELBOW	1	
9	07400-003A8		HOSE	1	
10	01643-50823		WASHER	2	
11	01016-50850		BOLT	2	
12	07434-20127		TEE JOINT	2	

 PILOT CONTROL LINK

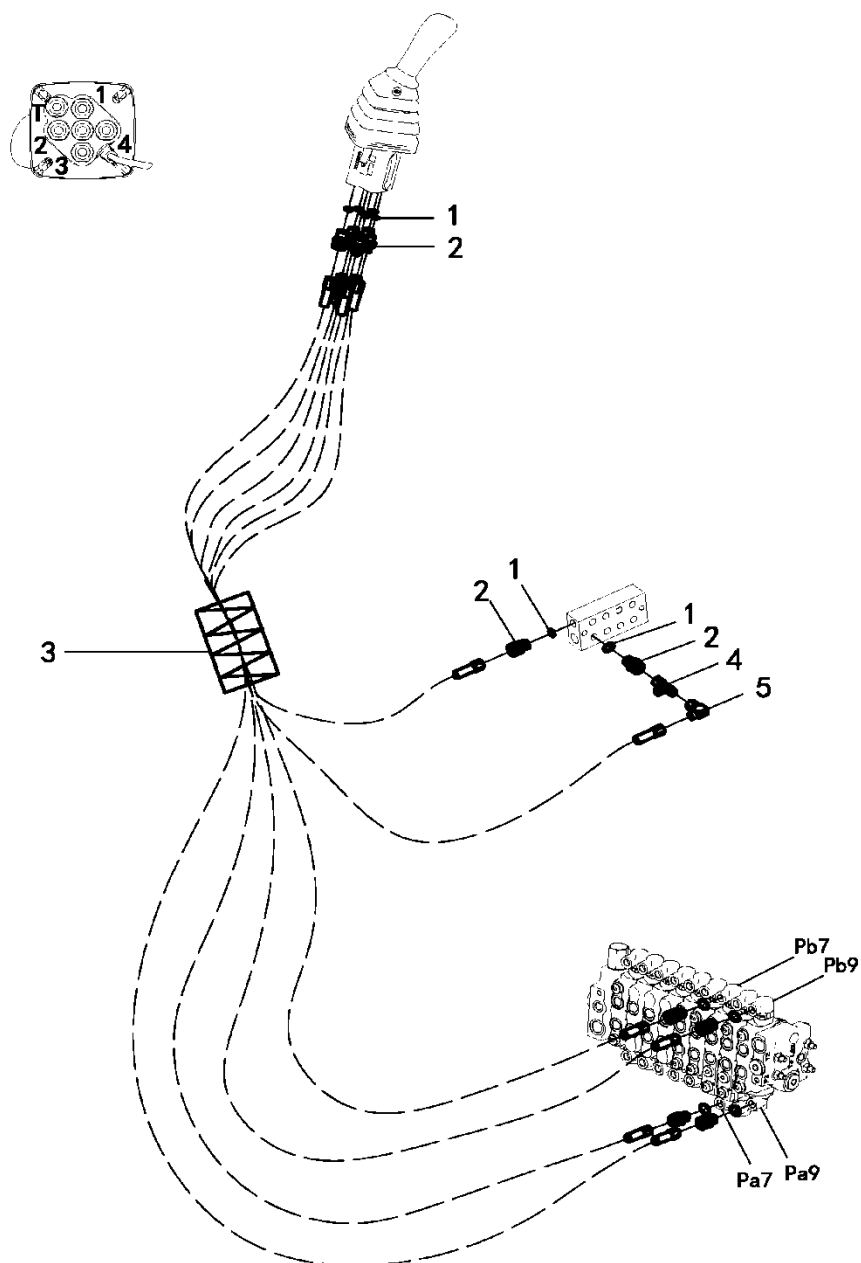


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07418-11415		SEAL RING	12	
2	07416-22013		UNION	12	
3	60035-81-00029		TUBE BUNDLE	1	
4	07434-20127		TEE JOINT	1	
5	07415-20127		ELBOW	1	

 PILOT CONTROL LINK

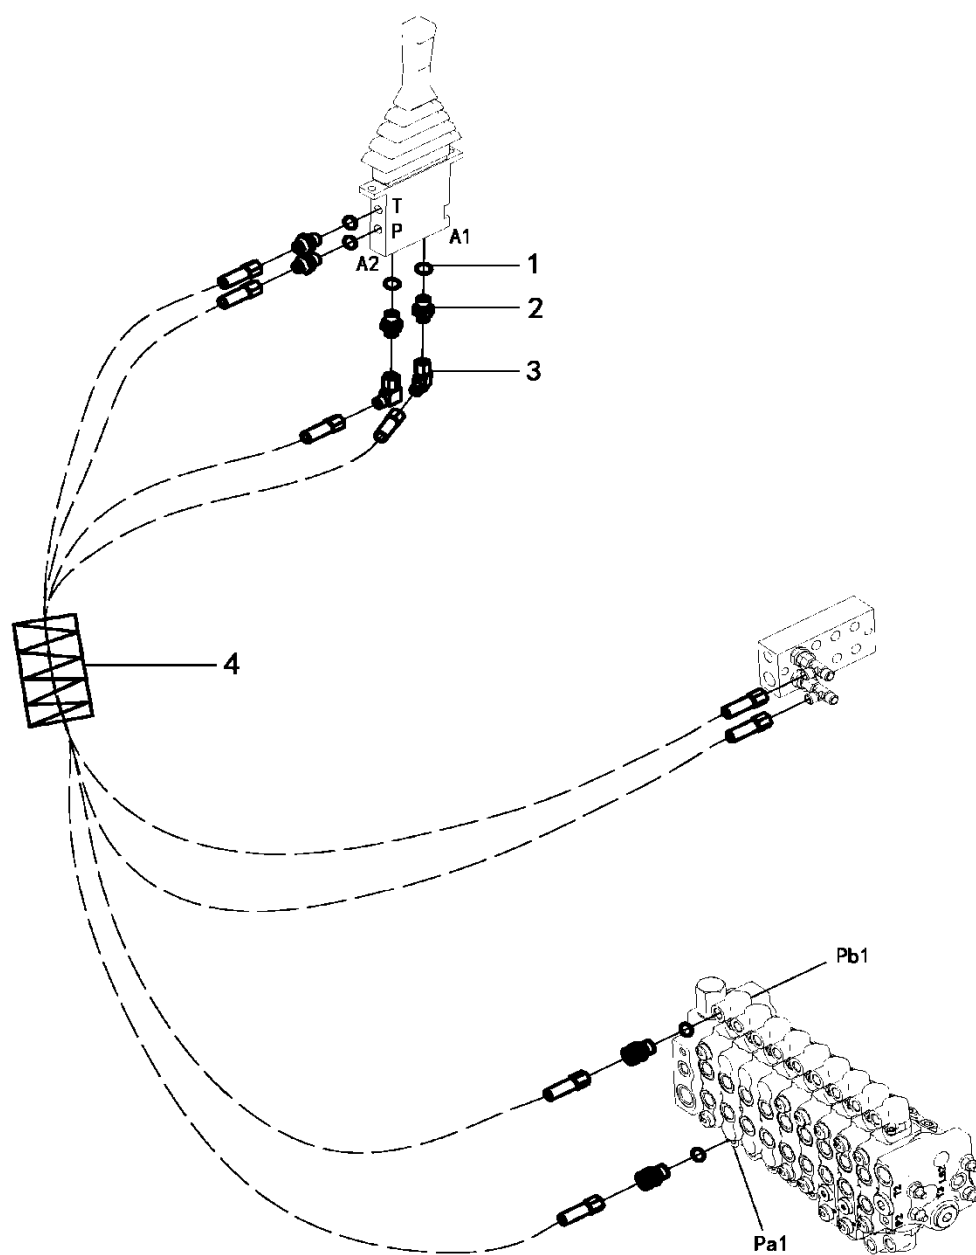


PILOT CONTROL LINK

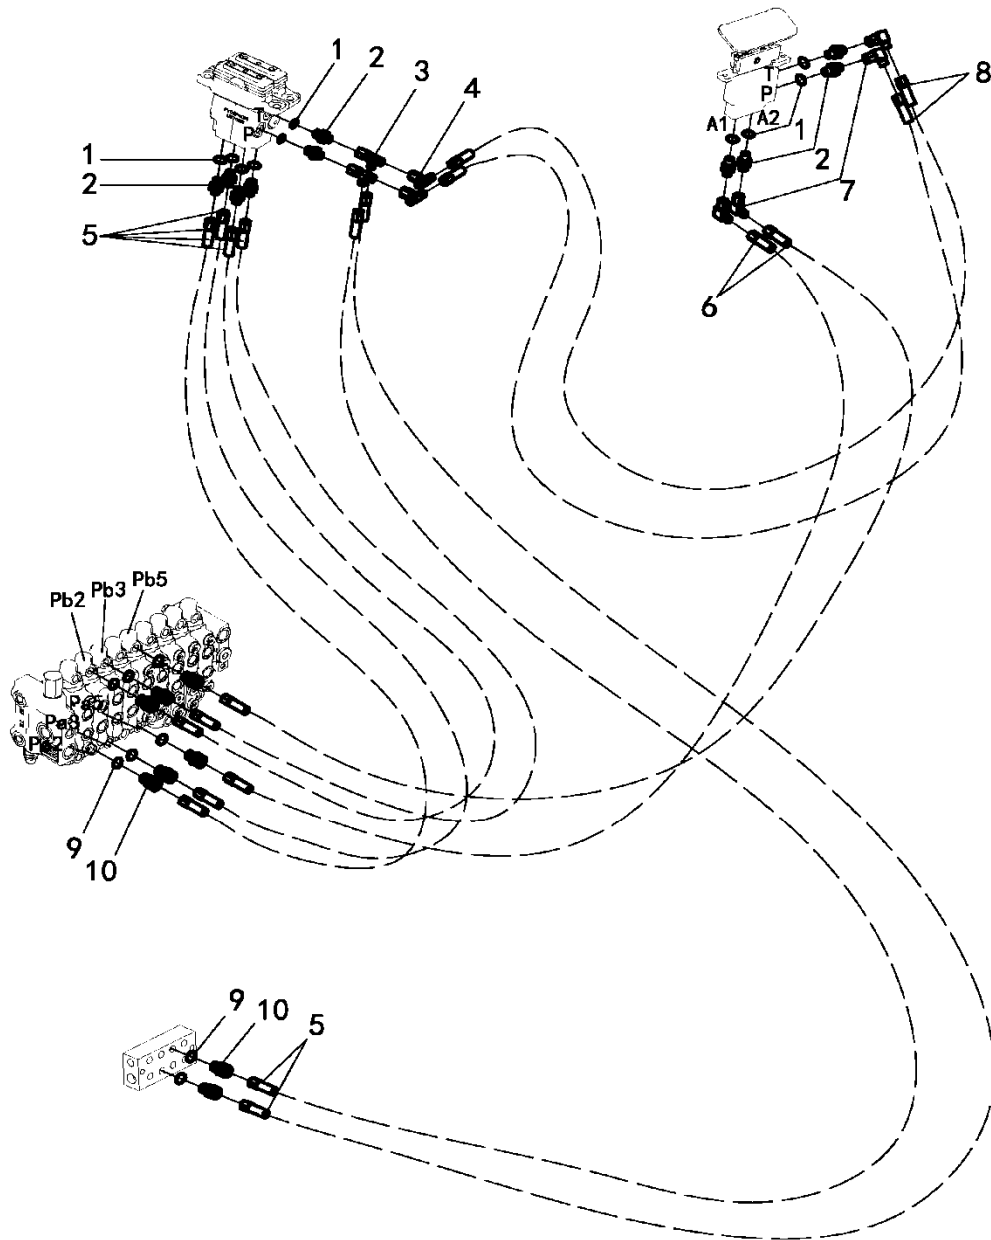 


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07000-12011		O-RING	10	
2	07413-22013		UNION	10	
3	07434-20127		TEE JOINT	2	
4	07433-20127		TEE JOINT	2	
5	07400-00106		HOSE	6	
6	60035-81-00027		HOSE	2	
7	07415-20127		ELBOW	2	
8	07400-00104		HOSE	2	
9	07408-11415		SEAL RING	8	
10	07416-22013		UNION	8	

 (60035-83-00010)
REVOLVING FRAME LINE
REVOLVING FRAME PIPING

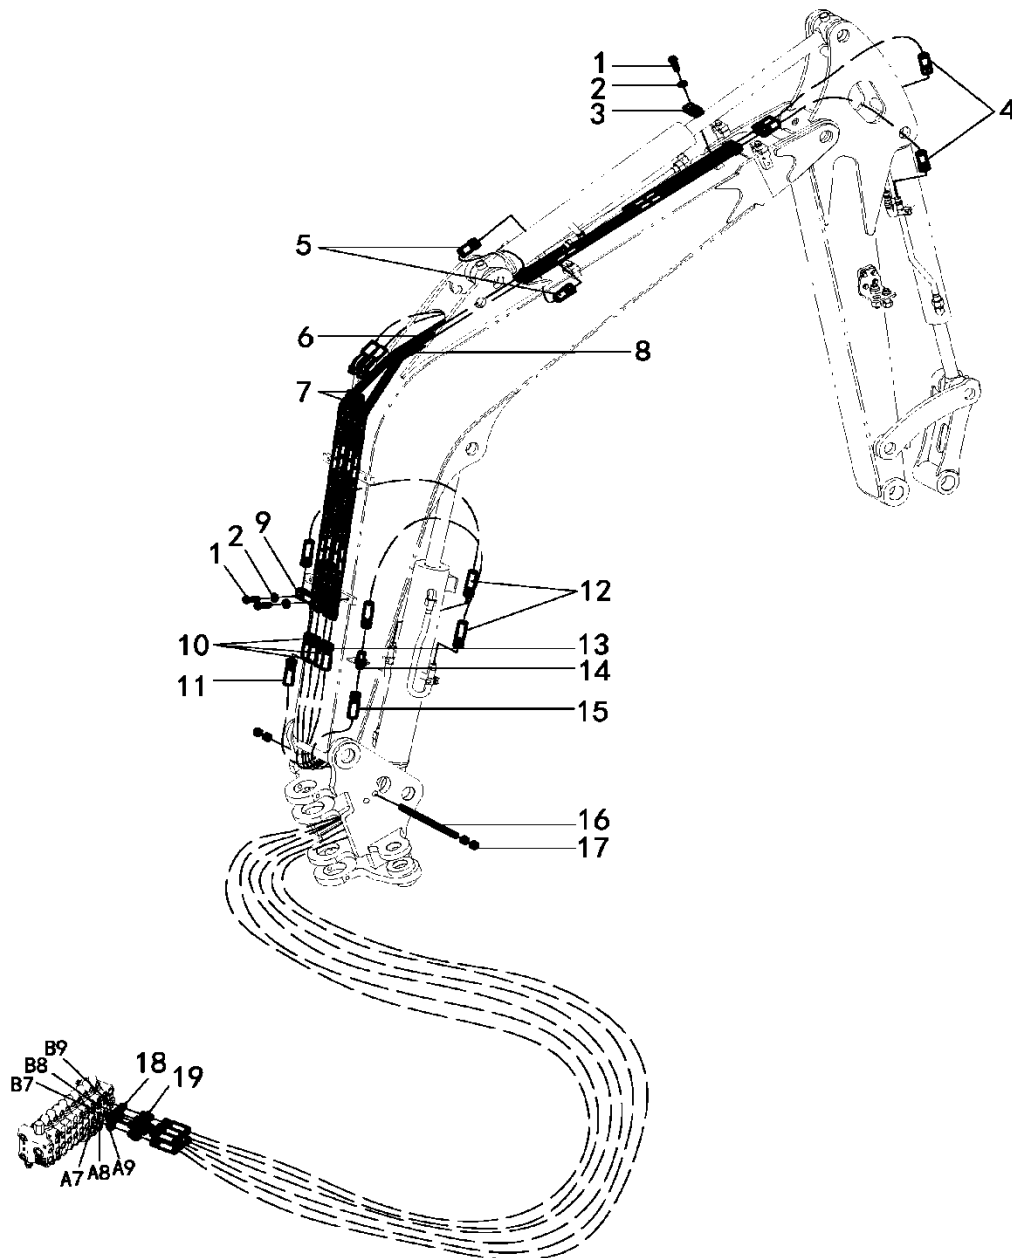


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01016-51040		BOLT	9	
2	01643-31032		WASHER	9	
3	60035-85-00014		CLIP	1	
4	07406-404A8		HOSE	2	
5	60035-85-00013		HOSE	2	
6	60035-85-00015		STEEL TUBE	1	
7	60035-85-00016		STEEL TUBE	2	
8	60035-85-00017		STEEL TUBE	1	
9	60035-85-00012		CLIP	4	
10	60035-85-00011		HOSE	3	
11	60035-85-00018		HOSE	1	
12	60035-83-00014		HOSE	2	
13	07406-40321		HOSE	1	
14	60130-05-00073		UNION	2	
15	07406-40320		HOSE	1	
16	60035-83-00022		ROD	2	
17	01580-11210		NUT	8	
18	07418-11715		SEAL RING	6	
19	07416-23033		UNION	6	

 REVOLVING FRAME PIPING

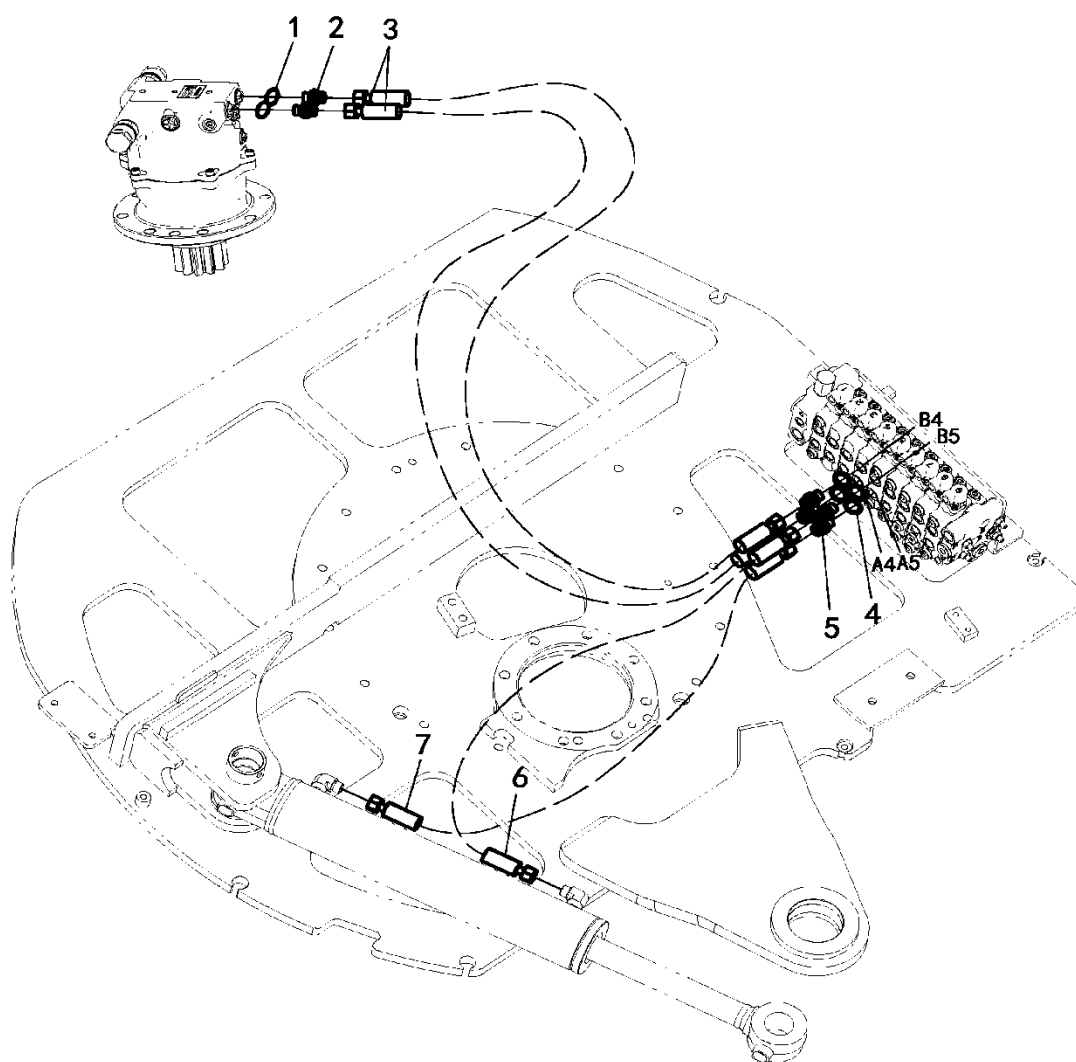


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07400-12124		O-RING	2	
2	07413-23033		UNION	2	
3	60035-83-00013		HOSE	2	
4	07418-11715		SEAL RING	4	
5	07416-23033		UNION	4	
6	60035-83-00012		HOSE	1	
7	60035-83-00017		HOSE	1	

 REVOLVING FRAME PIPING

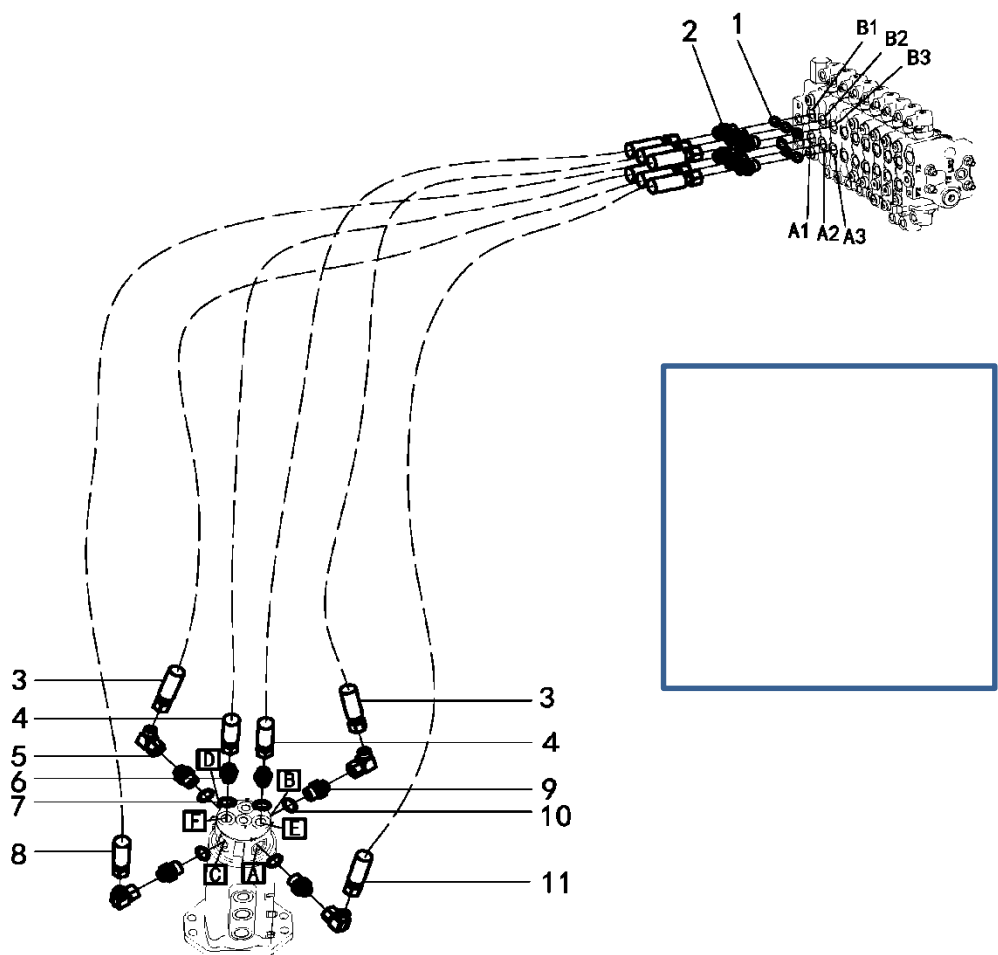


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07418-11715		SEAL RING	6	
2	07416-23033		UNION	6	
3	07406-003A5		HOSE	2	
4	07406-003A6		HOSE	2	
5	07415-20330		ELBOW	4	
6	07413-23033		UNION	2	
7	07000-12014		O-RING	2	
8	07406-003A7		HOSE	1	
9	07413-24034		UNION	4	
10	07000-12018		O-RING	4	
11	07406-00307		HOSE	1	

 (60035-84-00012)
PUMP SIDE LINE
DELIVERY AND RETURN LINE

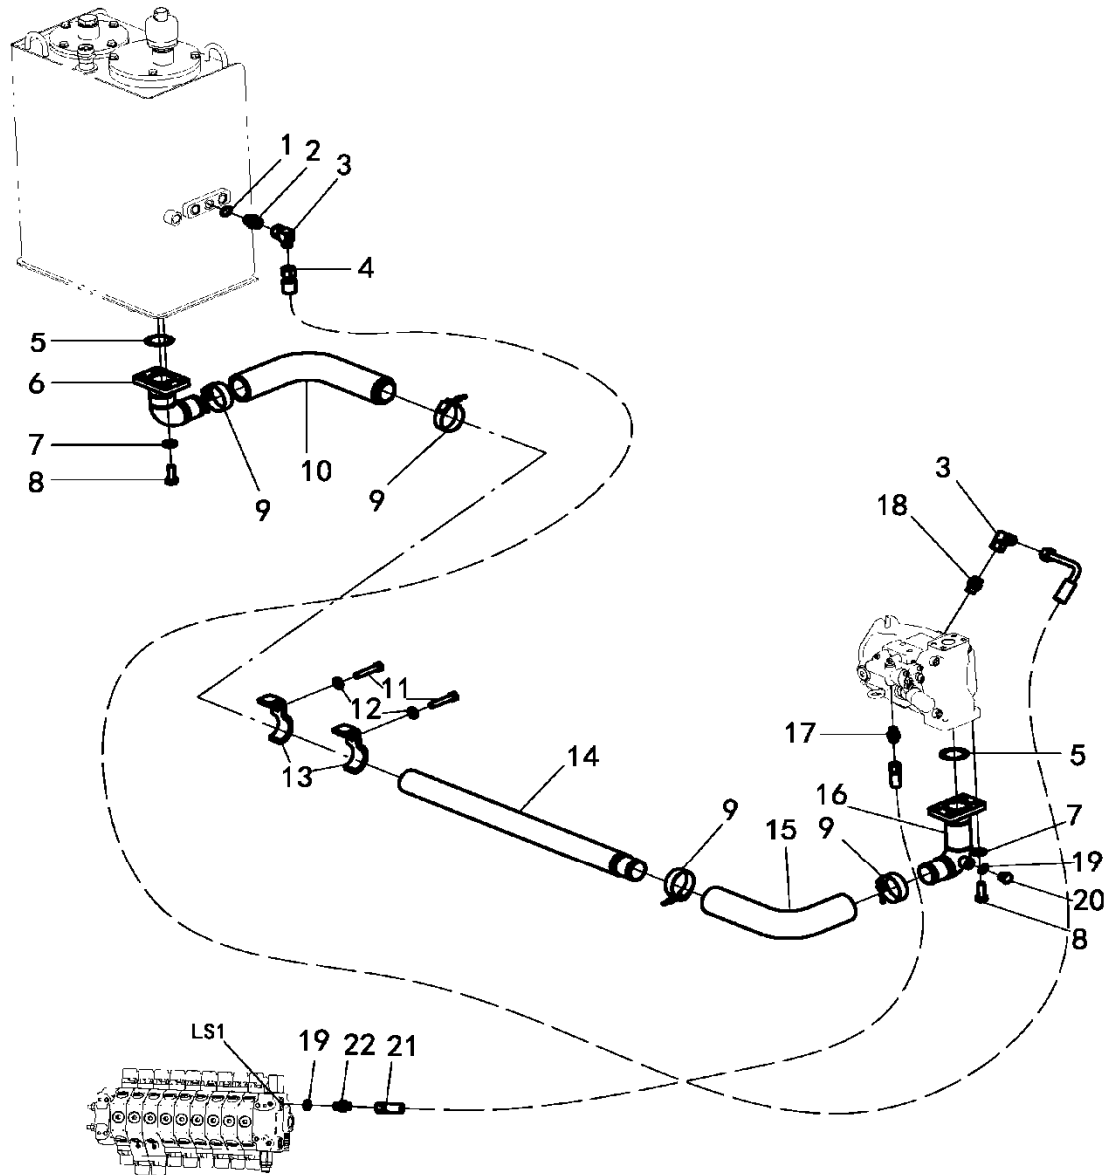


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07418-11715		SEAL RING	1	
2	07416-23033		UNION	1	
3	07415-20330		ELBOW	2	
4	60035-84-00013		HOSE	1	
5	07008-13047		O-RING	2	
6	60035-84-00004		STEEL SUCTION TUBE	1	
7	01643-51232		WASHER	8	
8	07372-21230		BOLT	8	
9	07287-10060		HEAVY DUTY HOOP	4	
10	60035-84-00006		SUCTION TUBE	1	
11	01010-81055		BOLT	2	
12	01643-31032		WASHER	2	
13	60035-84-00003		CLIP	2	
14	60035-84-00007		STEEL SUCTION TUBE	1	
15	60035-84-00009		SUCTION TUBE	1	
16	60035-84-00010		STEEL SUCTION TUBE	1	
17	60060-84-00006		UNION	1	
18	60025-84-00004		UNION	1	
19	07418-11415		SEAL RING	2	
20	07045-12019		PLUG	1	
21	07406-402A4		HOSE	1	
22	07416-22023		UNION	1	

 (60035-87-00001)
CRALER FRAME LINE
CRALER FRAME HEAD

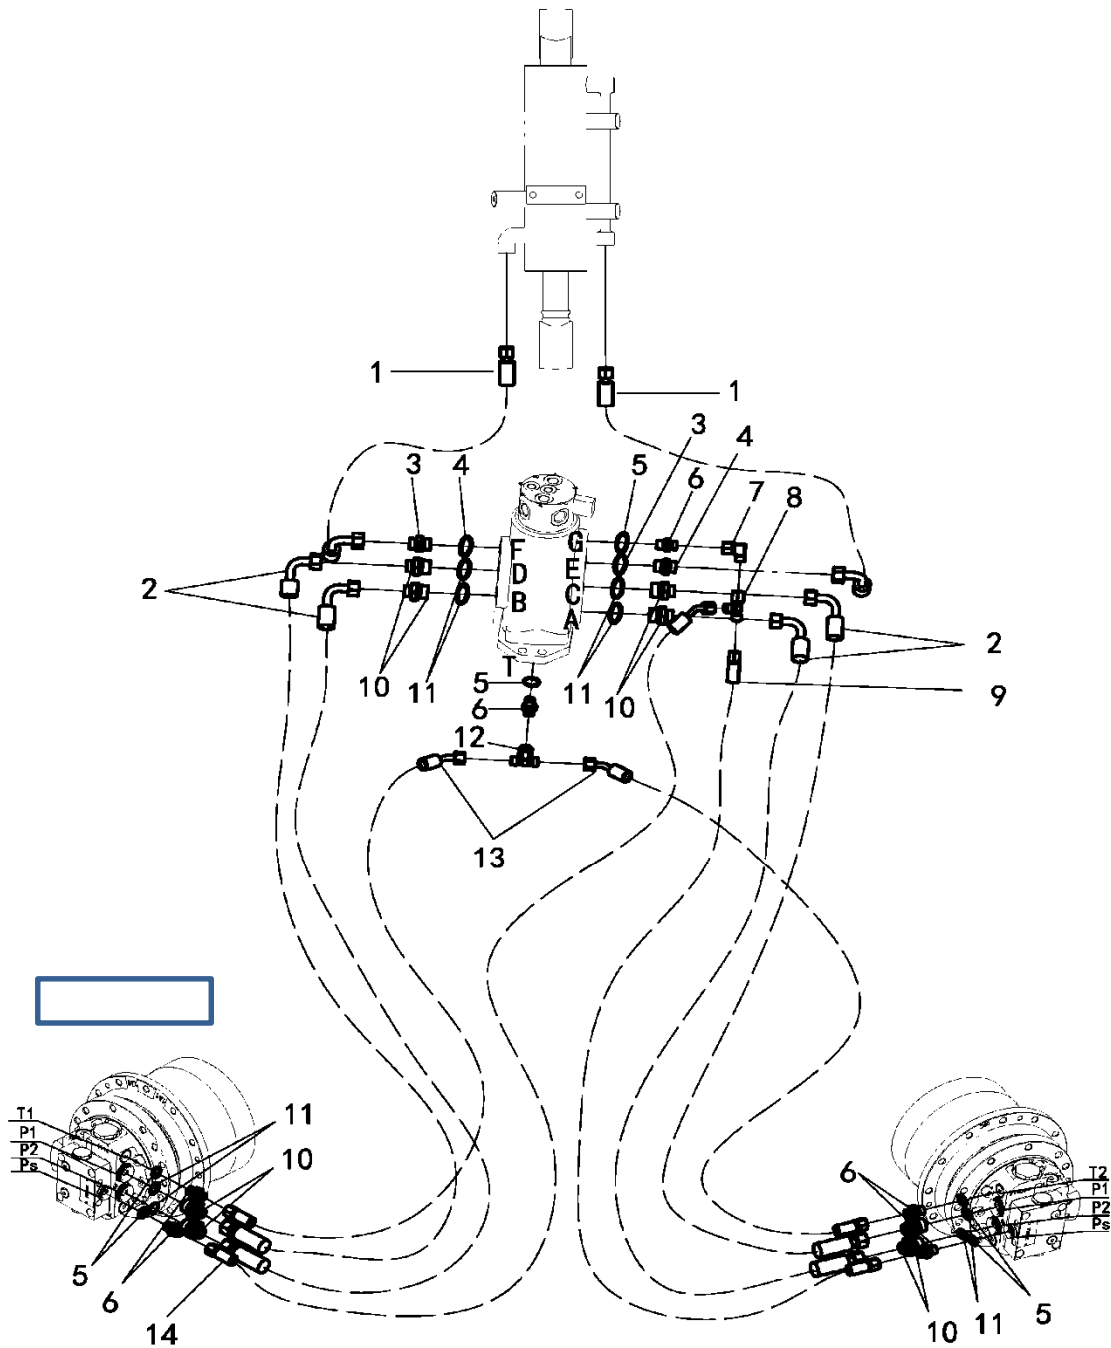


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	07407-203A9		HOSE	2	
2	07407-40311		HOSE	4	
3	07413-23033		UNION	2	
4	07000-12014		O-RING	2	
5	07000-12011		O-RING	6	
6	07413-22023		UNION	6	
7	07415-20228		ELBOW	1	
8	07434-20228		TEE JOINT	1	
9	07400-40211		HOSE	1	
10	07413-24034		UNION	8	
11	07000-12018		O-RING	8	
12	07433-20228		TEE JOINT	1	
13	07402-40211		HOSE	2	
14	07402-40212		HOSE	1	

 (60035-89-00018)
PIPING FOR BREAKER
BREAKER PIPING

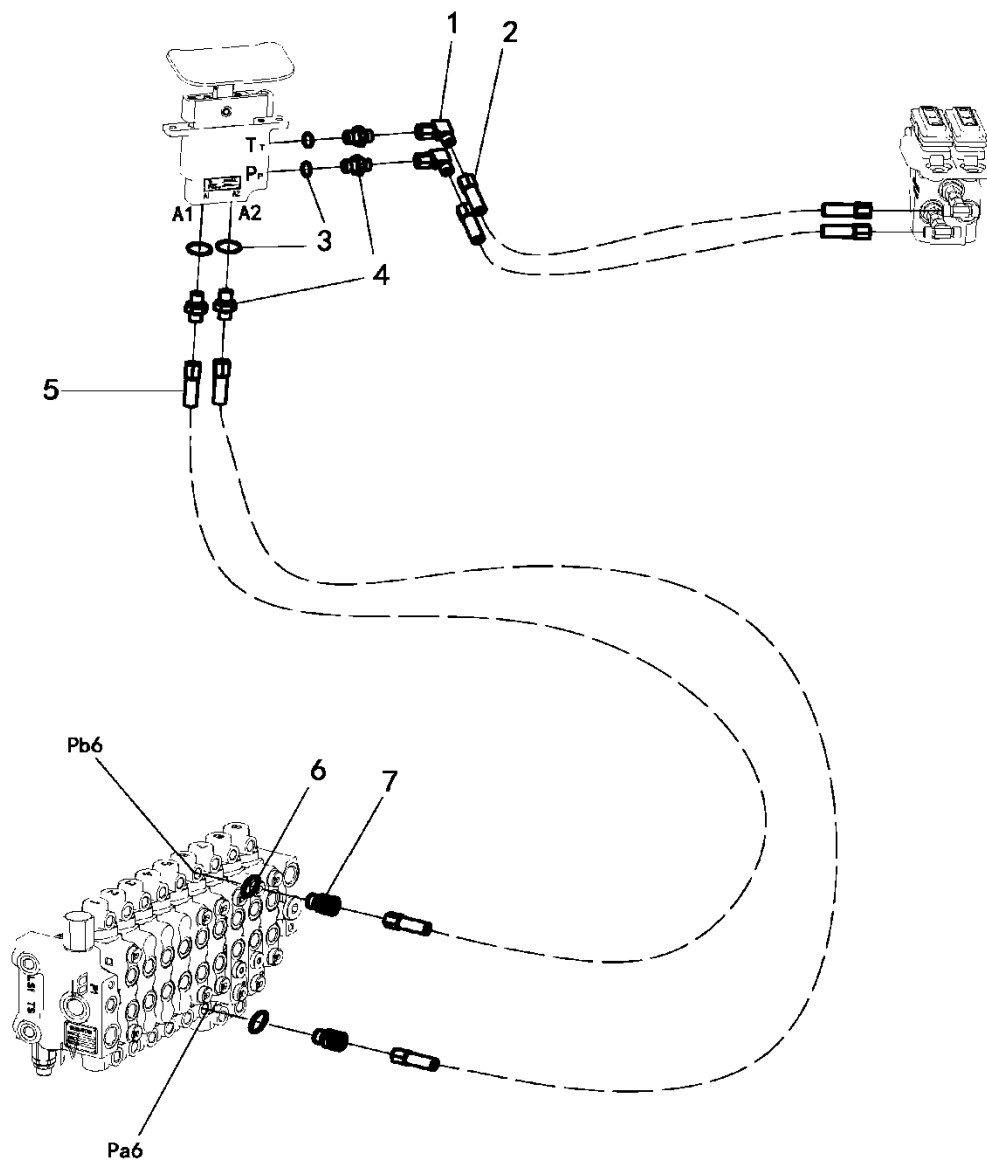


BREAKER PIPING

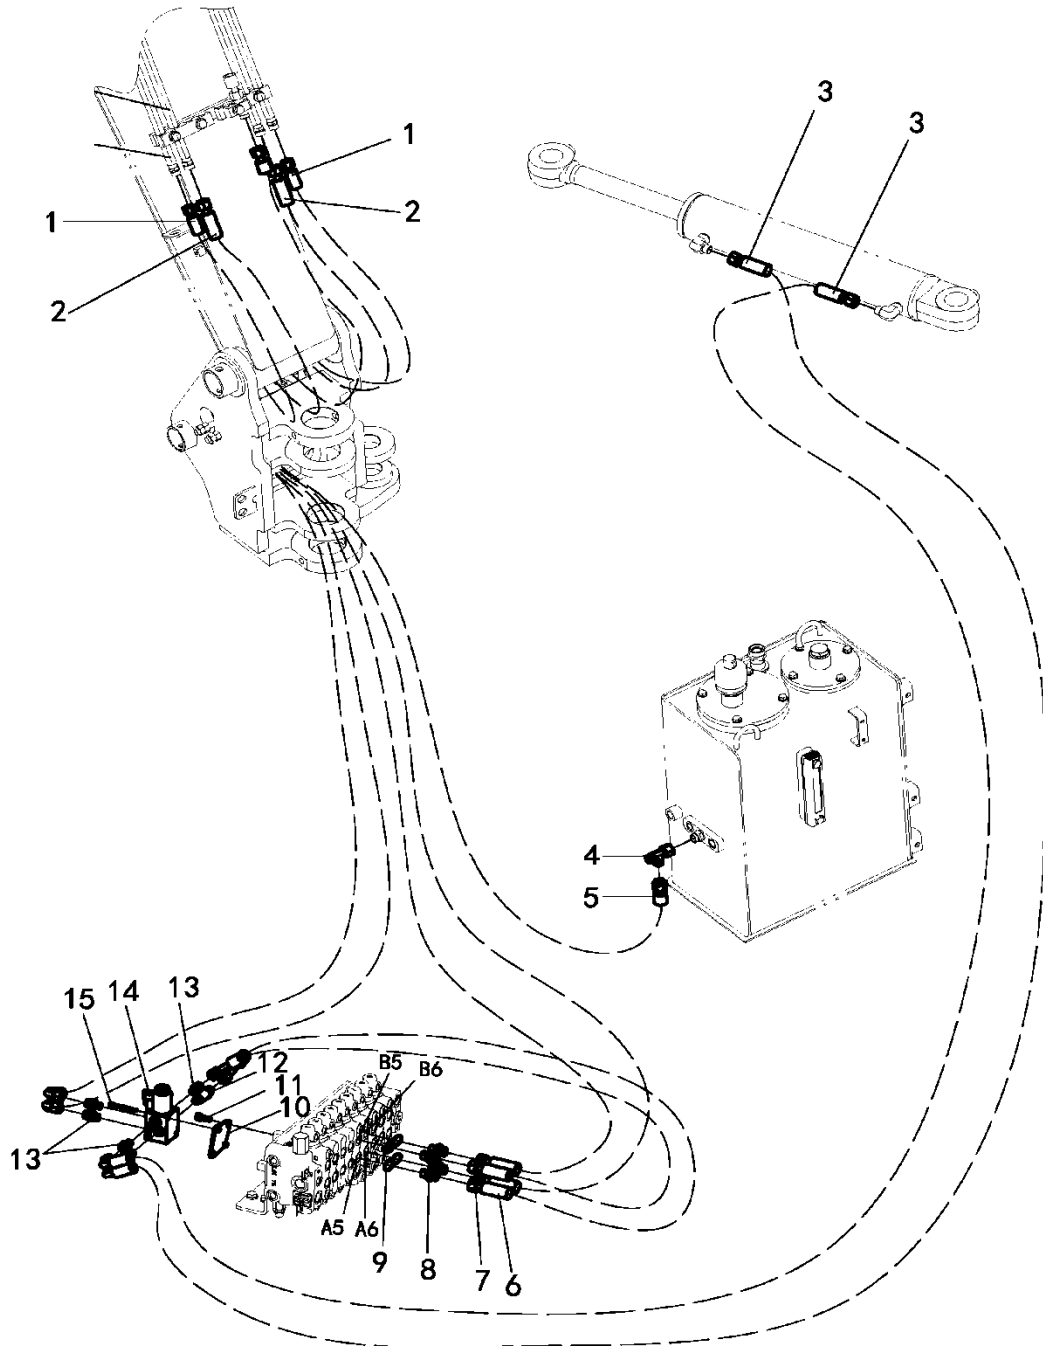 

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-89-00040		HOSE	2	
2	07406-40322		HOSE	2	
3	60035-89-00037		HOSE	2	
4	07434-20330		TEE JOINT	1	
5	07400-40324		HOSE	1	
6	60035-89-00038		HOSE	1	
7	60035-89-00039		HOSE	1	
8	07416-23033		UNION	4	
9	07418-11715		SEAL RING	4	
10	60025-89-00027		BRACKET	1	
11	01252-70820		SCREW	2	
12	60035-89-00051		UNION	1	
13	60025-8A-00004		UNION	5	
14	60017-81-00025		SOLENOID VALE	1	
15	01252-70550		SCREW	2	

 BREAKER PIPING

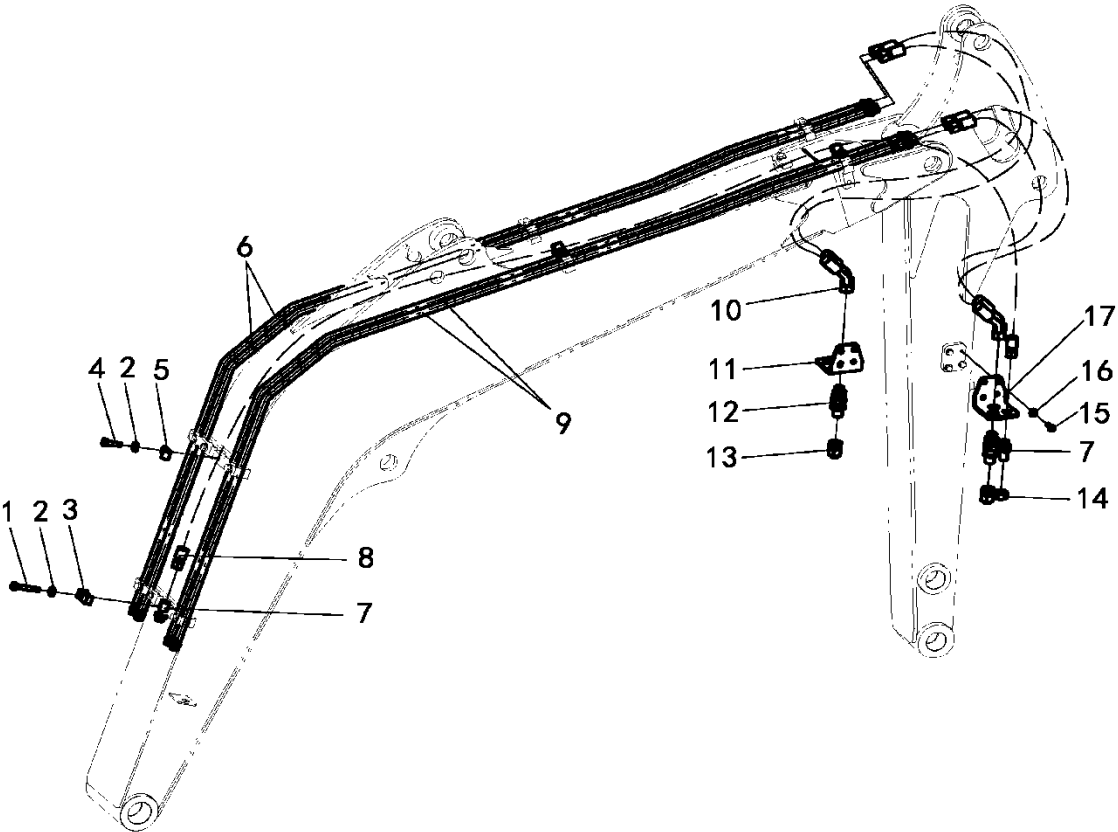


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01010-81065		BOLT	1	
2	01643-31032		WASHER	4	
3	60035-89-00043		CLAMP	1	
4	01010-81040		BOLT	3	
5	08042-11019		CLAMP	3	
6	60035-89-00009		STEEL TUBE	2	
7	60130-05-00073		UNION	2	
8	07400-40334		HOSE	1	
9	60035-89-00011		STEEL TUBE	2	
10	60035-89-00014		HOSE	4	
11	60035-89-00017		BRACKET	1	
12	60035-89-00016		UNION	4	
13	07024-22222		24° CONE PLUG	4	
14	07024-11820		24° CONE PLUG	1	
15	01010-80820		BOLT	8	
16	01643-50823		WASHER	8	
17	60035-89-00015		BRACKET	1	

(60035-91-00003)


BATTERY ASS'Y

 BATTERY MOUNTING

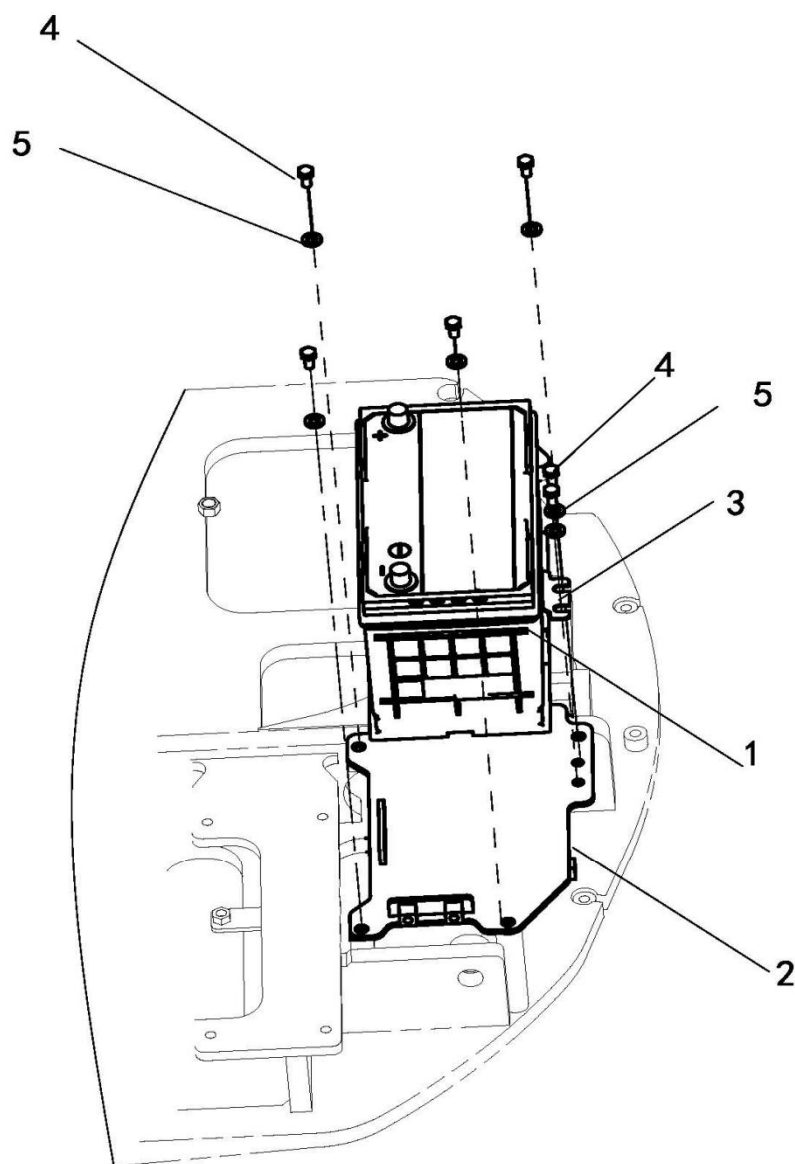


(60035-92-00005)

 ELECTRIC ATTACHMENTS ASS'Y ON THE VEHICLE ONBOARD ELECTRICAL INSTALLATION

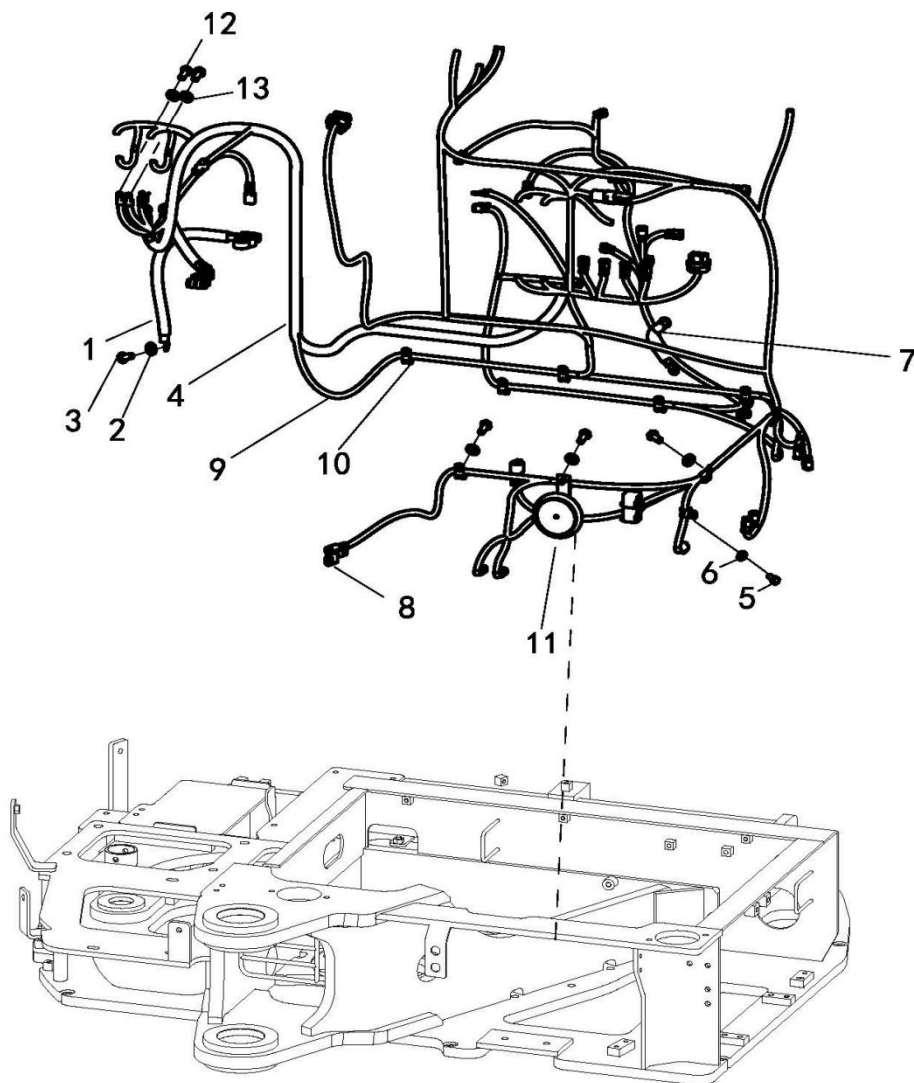


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-92-00002		BATTERY NEGATIVE CABLE	1	
2	01643-30410		GROMMET	4	
3	01023-10412		SCREW	4	
4	08050-2AT61		CABLE	1	
5	01010-80816		BOLT	17	
6	01643-30823		GROMMET	17	
7	08049-0ET12		CABLE	1	
8	08193-20010		CARD CLAMP	1	
9	60035-92-00004		MAIN WIRE HARNESS	1	
10	60130-93-00003		CLAMP	12	
11	60070-92-00008		HORN	1	
12	01023-10616		SCREW	2	
13	01643-30623		GROMMET	2	

 
(60035-93-00005)
**ELECTRIC ATTACHMENTS ASS'Y ON THE BENCHE
TRESTLE ELECTRICAL INSTALLATION**

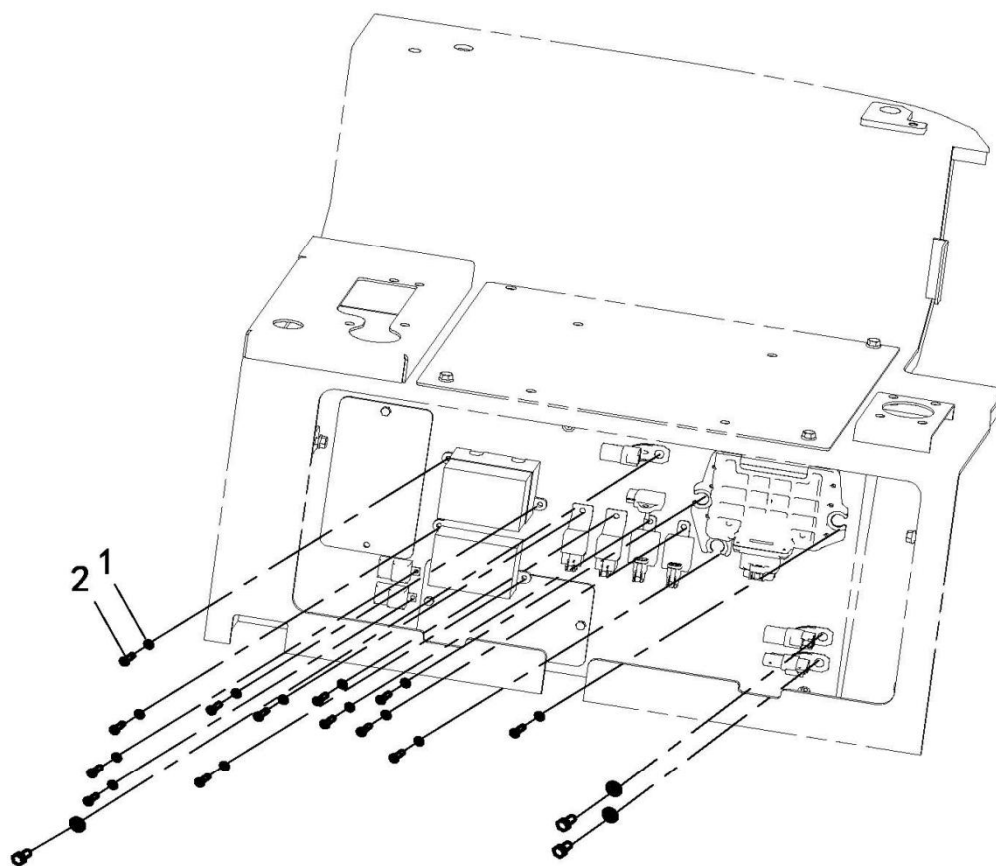

TRESTLE ELECTRICAL INSTALLATION

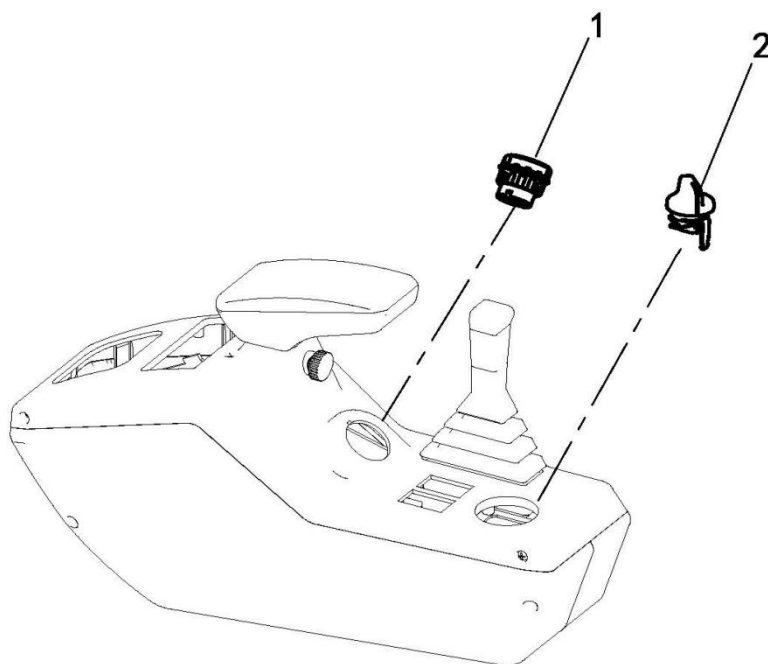 


 (60035-94-00001)
**ELECTRIC ATTACHMENTS ASS'Y OF THE WORKING
DEVICE**
ELECTRICAL INSTALLATION OF WORKING DEVICE

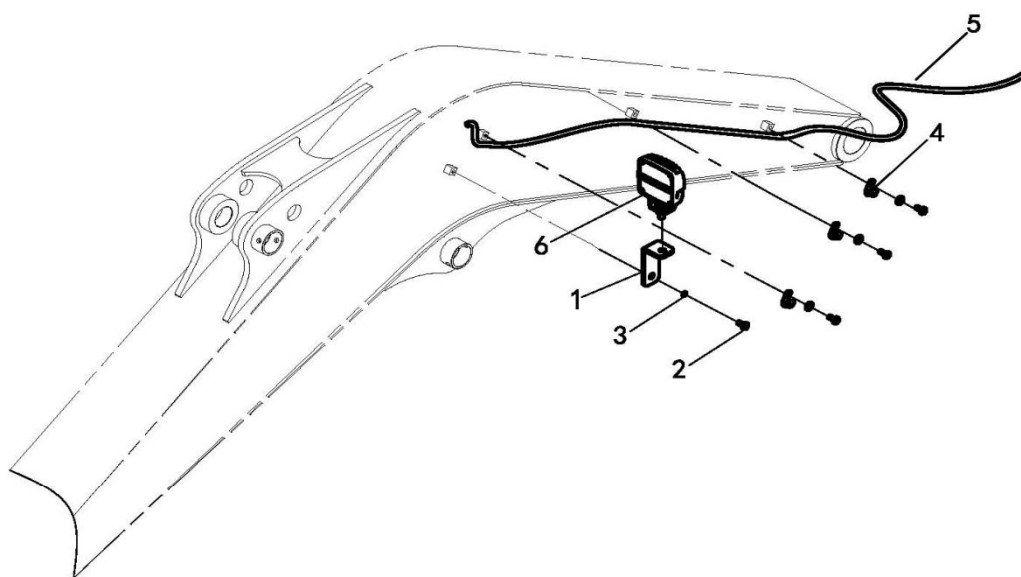

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-94-00002		WORKING LAMP SHADE	1	
2	01010-80820		BOLT	4	
3	01643-30823		GROMMET	4	
4	60130-93-00003		CLAMP	3	
5	60017-93-00008		BOOM LIGHT CABLE	1	
6	60060-92-00006		WORKING LAMP	1	

 
(60035-95-00004)
ELECTRIC ATTACHMENTS ASS'Y IN THE CAB
CAB ELECTRICAL INSTALLATION

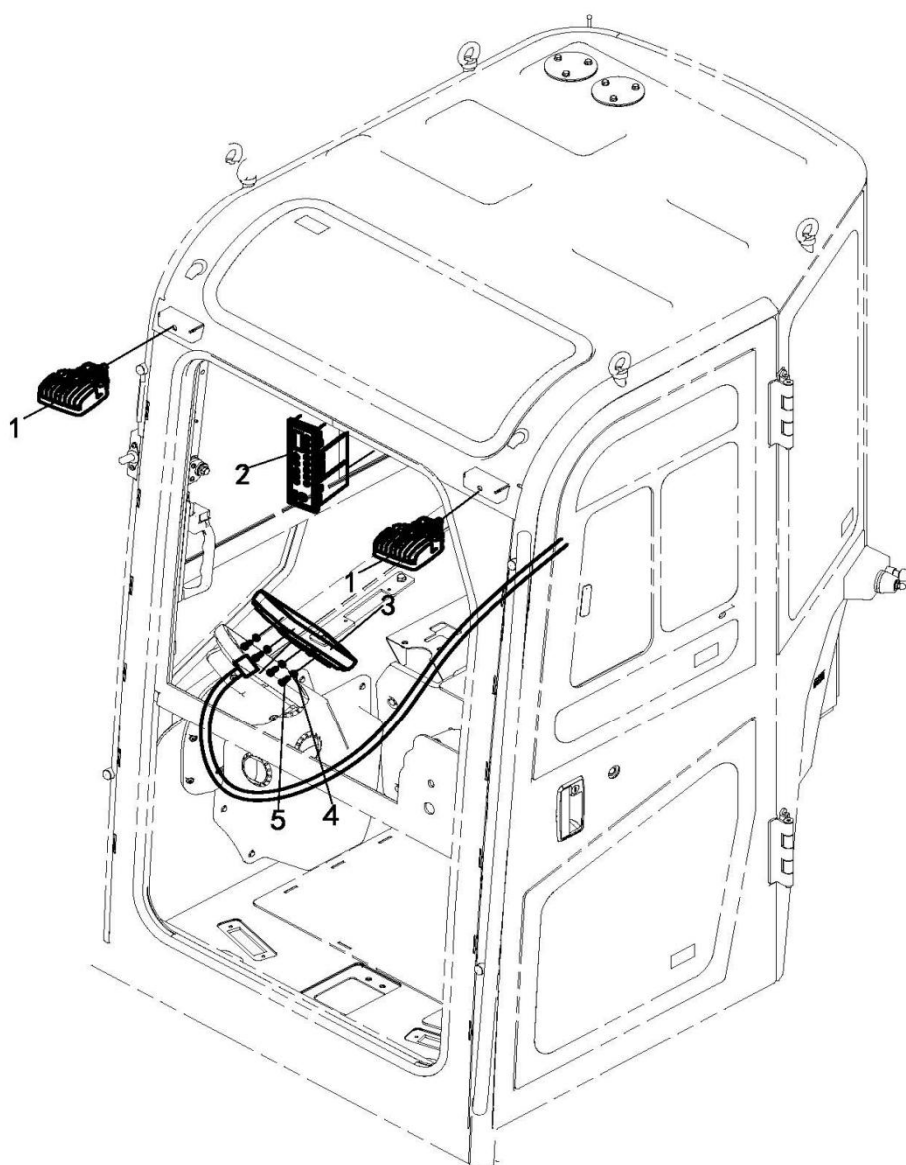

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60060-92-00006		WORKING LAMP	2	
2	60025-95-00017		RADIO	1	
3	60035-95-00002		MONITOR	1	
4	01643-30516		WASHER	4	
5	01023-10510		SCREW	4	


(60035-96-00002)

 ELECTRIC ATTACHMENTS ASS'Y OF THE ENGINE ENGINE ELECTRICAL INSTALLATION

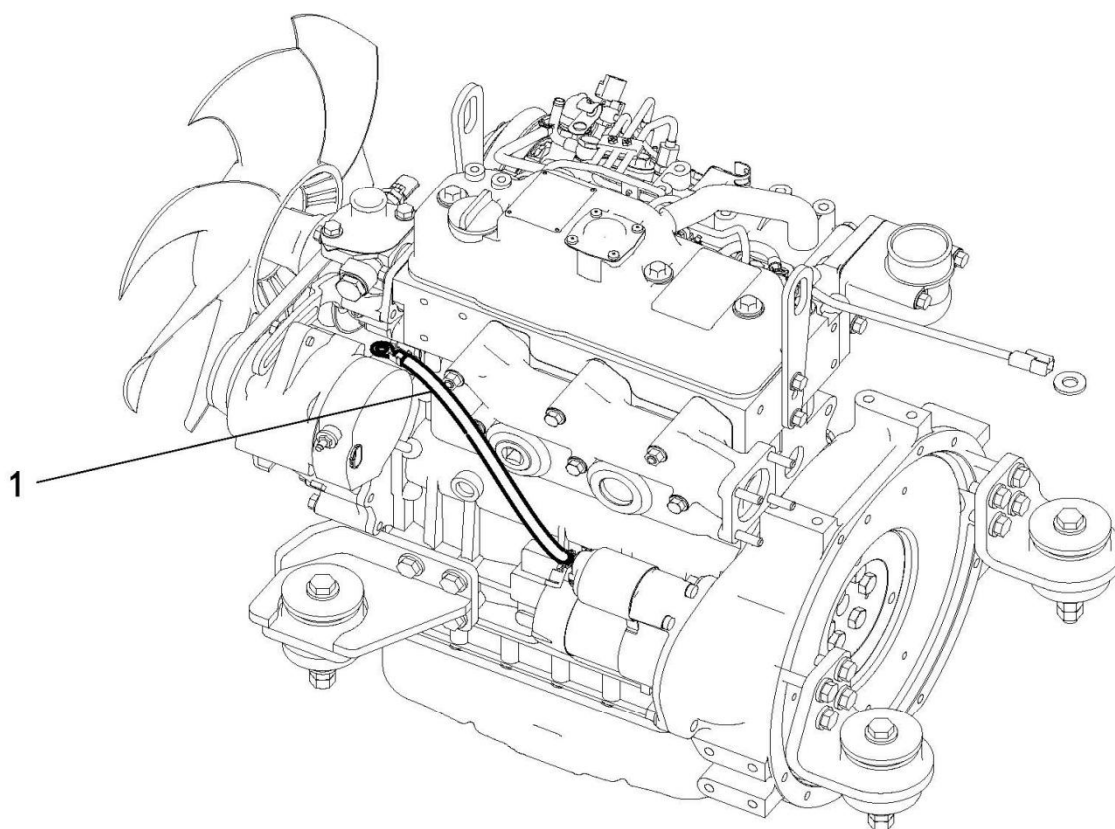


ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60017-93-00009		ENGINE CABLE	1	

 ENGINE ELECTRICAL INSTALLATION

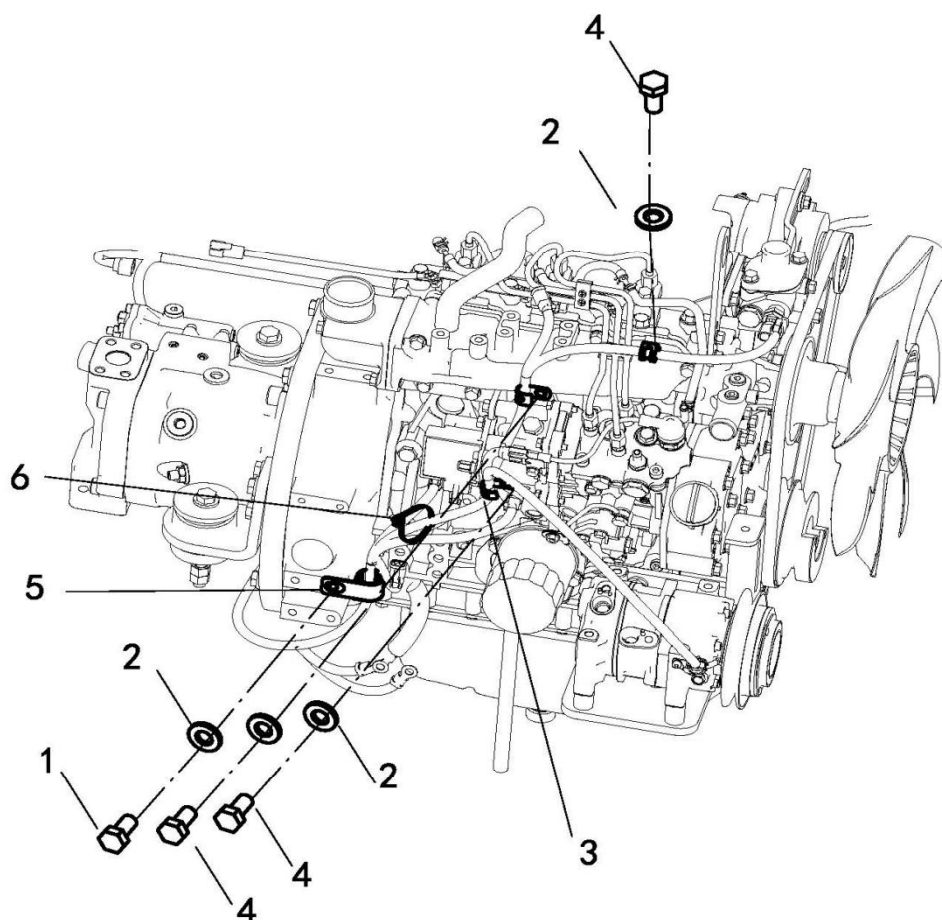

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	01010-80820		BOLT	1	
2	01643-30823		GROMMET	4	
3	60130-93-00003		CLAMP	3	
4	01010-80816		BOLT	3	
5	60017-93-00001		CLAMP	1	
6	08034-20823		RIBBON	8	

 (60035-98-00004)
ELECTRIC ATTACHMENTS ASS'Y OF THE FRAME
FRAME ELECTRICAL INSTALLATION

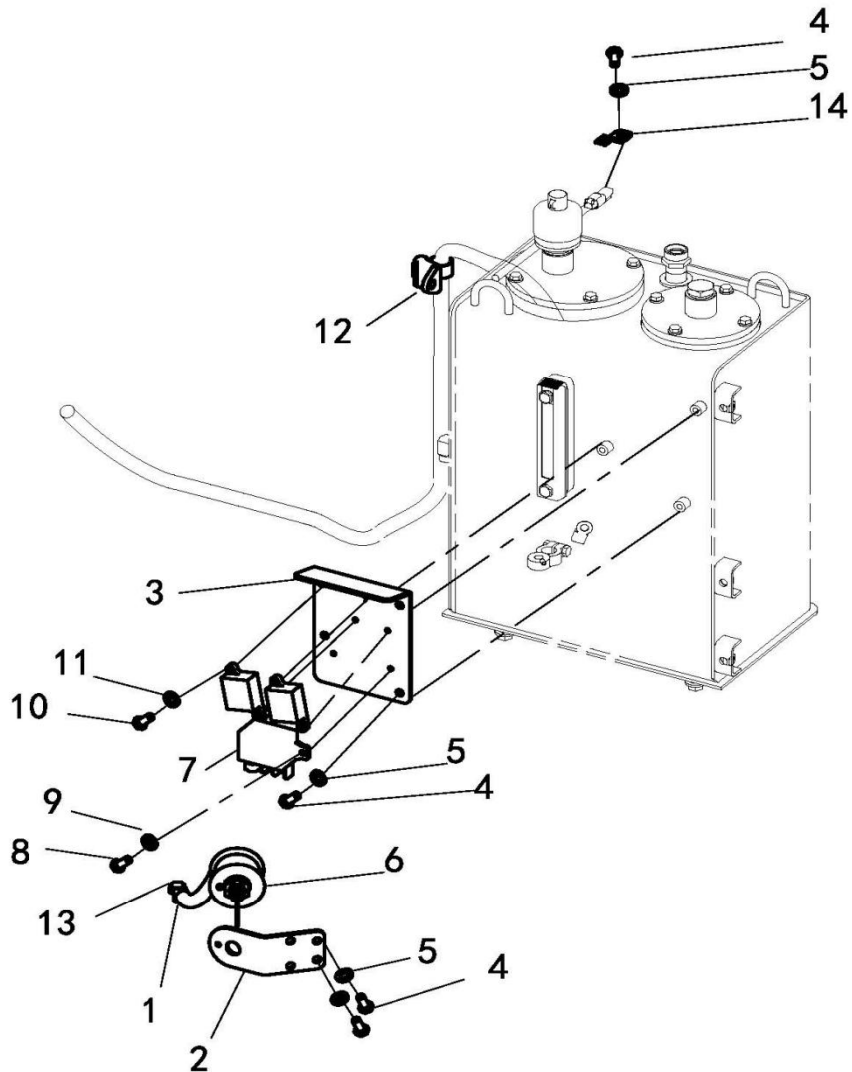

ITEM	PART NO.		PART NAME	Q'TY	REMARKS
1	60035-98-00002		CABLE	1	
2	60035-98-00005		SUPPORT	1	
3	60035-98-00003		SUPPORT	1	
4	01010-80816		BOLT	6	
5	01643-30823		GROMMET	7	
6	60210-91-00009		MAIN POWER SWITCH	1	
7	60025-98-00010		RELAY	1	
8	01023-10616		SCREW	2	
9	01643-30623		GROMMET	2	
10	01023-10412		SCREW	4	
11	01643-30410		GROMMET	4	
12	60017-93-00001		CLAMP	1	
13	01010-80820		BOLT	1	
14	08193-20010		CARD CLAMP	1	

[illegible]

TYPHON